




Service Manual

Chassis, Mast & Options


EP20K	ETB8B-00011-up
EP25K	ETB8B-50001-up
EP30K	ETB9B-00011-up
EP35K	ETB9B-50001-up

6. Remove the spacer 21, then remove the third gear 22. The third shaft 19 is fitted with the bearing inner race 20. The inner race 20 may be left fitted to the third shaft 19 if it is in a satisfactory condition for reuse. If it needs to be replaced, remove it using an appropriate puller.
7. Remove three bolts 23, then remove the lock plate 24. Apply an aluminum bar to the second shaft 25 from the drive motor fitted side, and hammer the bar lightly to force the second shaft 25 out of place with O-rings 26 and 27 fitted to it.
8. Remove the second gear 28 with the ball bearing 29 attached. The ball bearing 29 may be left fitted to the second gear 28 if it is in a satisfactory condition for reuse. If it needs to be replaced, remove it using an appropriate puller.
9. Remove the snap ring 30. Remove the input gear 31 fitted with the ball bearings 32 from the transfer case 33 using a slide hammer puller. The ball bearing 32 may be left fitted to the input gear 31 if it is in a satisfactory condition for reuse.

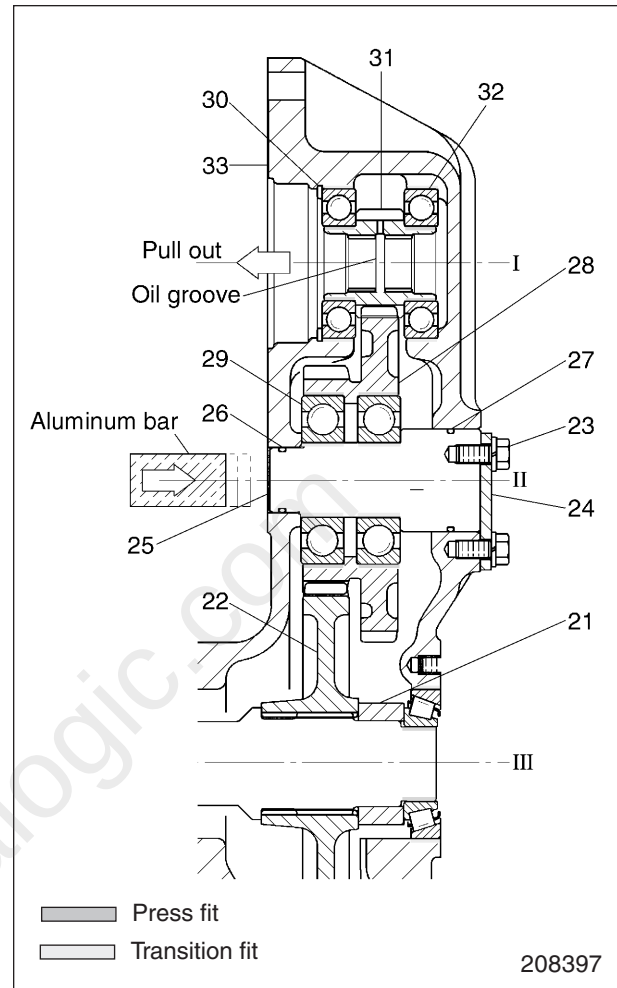

Reassembly

2 ton class and 2.5 ton class

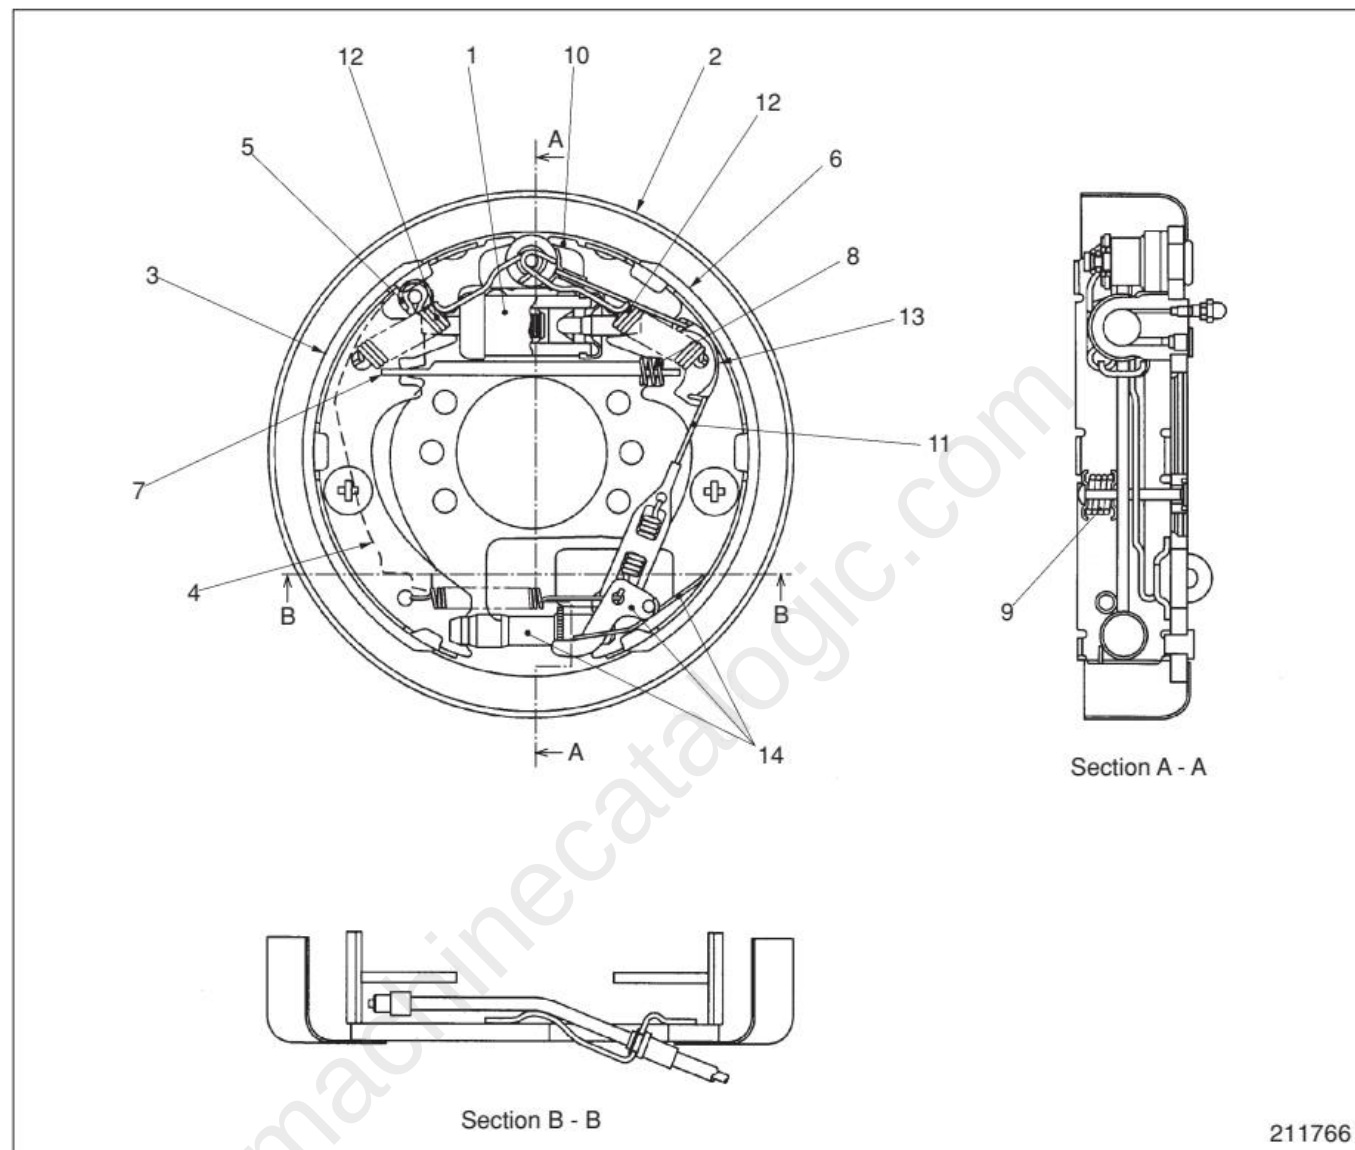

211766


Sequence

- | | |
|-------------------------------|---|
| 1 Wheel cylinder | 9 Hold-down spring, Cup, Pin |
| 2 Backing plate | 10 Shoe guide plate |
| 3 Shoe and lining (primary) | 11 Fitting cable |
| 4 Parking brake lever | 12 Return spring |
| 5 Retainer, Washer | 13 Cable guide |
| 6 Shoe and lining (secondary) | 14 Adjusting lever, Adjusting screw, Adjusting spring |
| 7 Strut | |
| 8 Anti-rattle spring | |

3. Installing first lift cylinder


The first lift cylinder must be installed parallel to the mast when the lift cylinder rod is contracted.

Make sure the cylinder does not tilt forward. Using shims 2, adjust the backward inclination so that clearance at section B is 0 to +0.5 mm (0 to +0.02 in.) larger than clearance at section A.

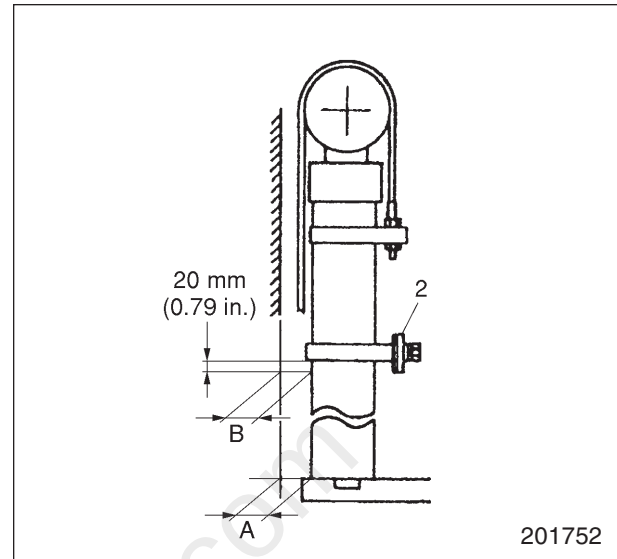

4. Precaution for installation of chain anchor kit


Be careful not to confuse the center plate with the link plate.

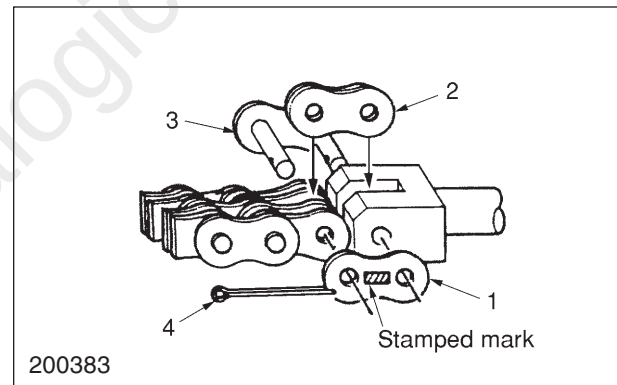


- 1 Link plate (stamped mark on surface)
- 2 Center plate (no stamped mark)
- 3 Link
- 4 Split pin

(4) Remove the hub and drum assembly.

The hub and drum assembly will be removed by pulling horizontally. If it cannot be pulled out, use the hub puller as shown in the illustration at right.

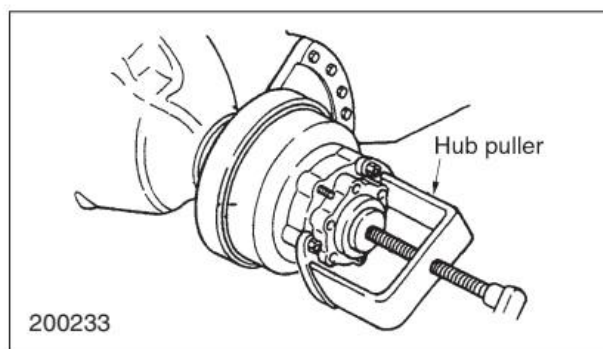


- Remove the oil deflector 12 if necessary.
- Do not remove the following parts from the inside of the wheel hub 7 unless they are faulty. When removing them, use a puller.
 - Taper roller bearing outer race 14 and 16
 - Oil seal 13 and 15
- Normally, it is not necessary to separate the wheel hub 7 and the brake drum 8. To separate them, the nut 10 must be removed. (The nut 10 has been staked to the bolt 9 after assembly to prevent dropping off.)

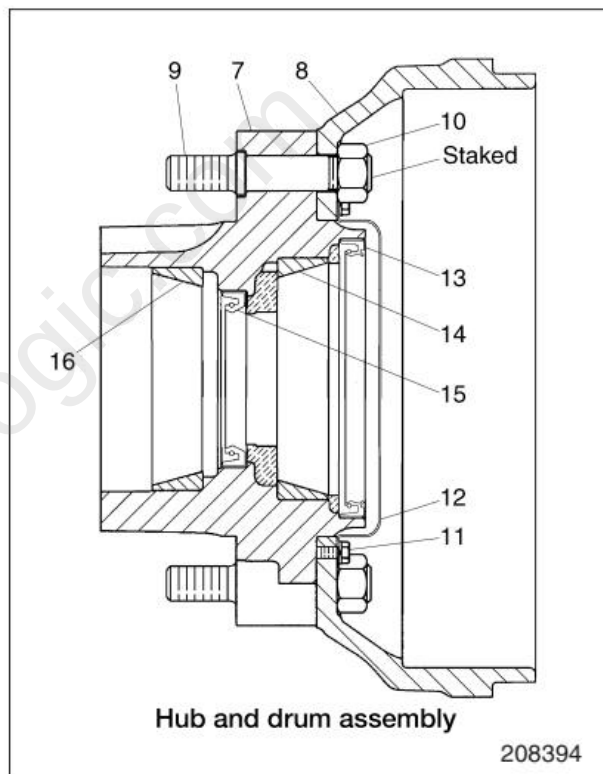

3. Removal of seal retainer and bearing inner race

Do not remove the retainer 18 and the bearing inner race 17 left on the axle housing unless they are faulty.

If they are to be replaced, remove them together using a puller.

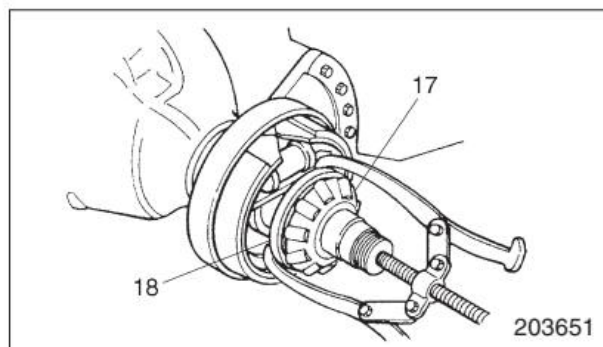

4. Removal of front axle support and/or front axle housing

These parts cannot be removed without dismounting the power train assembly from the vehicle body. Refer to "GROUP 3 POWER TRAIN" for the procedure.

Full Version Available

Caterpillar EP20K Forklift Service Manual (99759-6D100)

Caterpillar EP20K Forklift service manual, covers hydraulics, drive unit, wiring, mast, and traction controls. Searchable PDF download.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/caterpillar-ep20k-forklift-service-manual-99759-6d100/)

<https://machinecatalogic.com/caterpillar-ep20k-forklift-service-manual-99759-6d100/>