




Service Manual

Chassis & Mast

MC

GC20N	AT90-10121 to 30120
GC25N	AT90-10121 to 30120
GC28N	AT83F-10121 to 30120
GC30N	AT83F-10121 to 30120
GC33N	AT83F-60121 to 80120

Electrical Schematic (2/2)

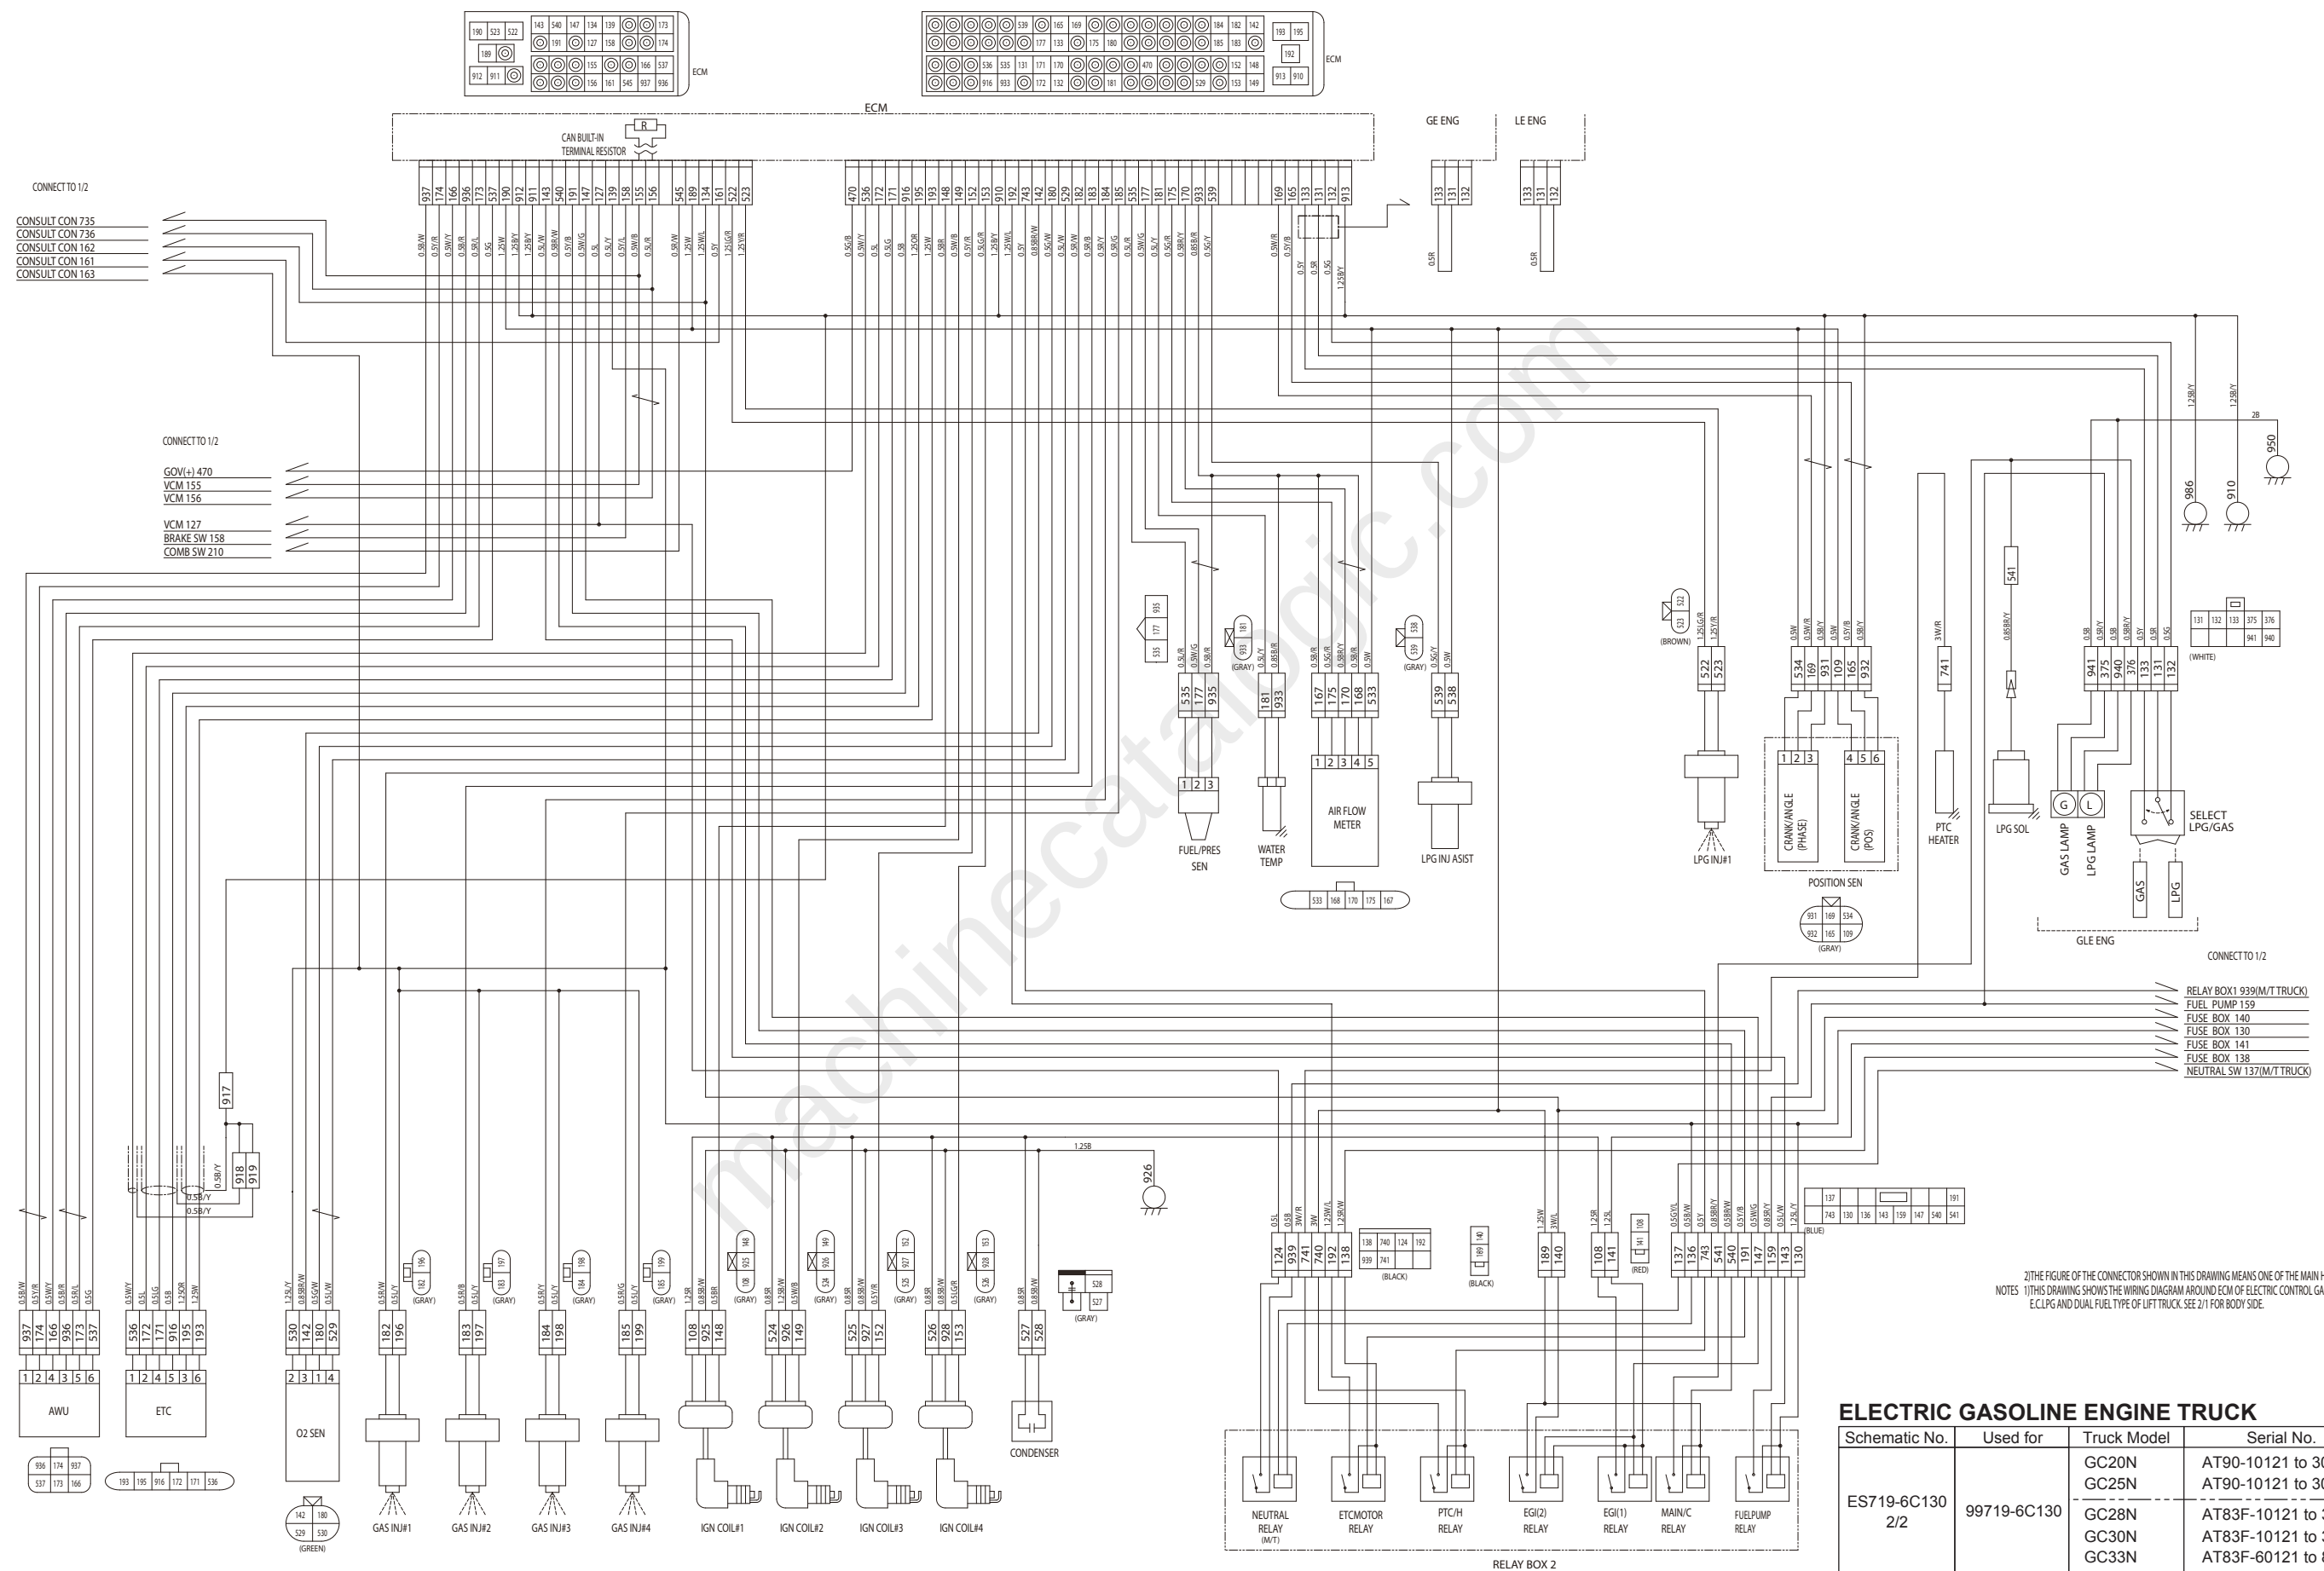

ELECTRIC GASOLINE ENGINE TRUCK

Schematic No.	Used for	Truck Model	Serial No.
ES719-6C130 2/2	99719-6C130	GC20N	AT90-10121 to 30120
		GC25N	AT90-10121 to 30120
		GC28N	AT83F-10121 to 30120
		GC30N	AT83F-10121 to 30120
		GC33N	AT83F-60121 to 80120

4.4 Assembly


To assemble follow the disassembly sequence in reverse, paying attention to the following points.

Oil seals

Replace with new.

Front wheel hub

- (1) Fill grease (Autolex A or equivalent) in the front wheel hub as shown.
Stuff grease in the roller holder of the tapered roller bearing (inner) using the palm.
Apply grease to the lip groove of oil seal.

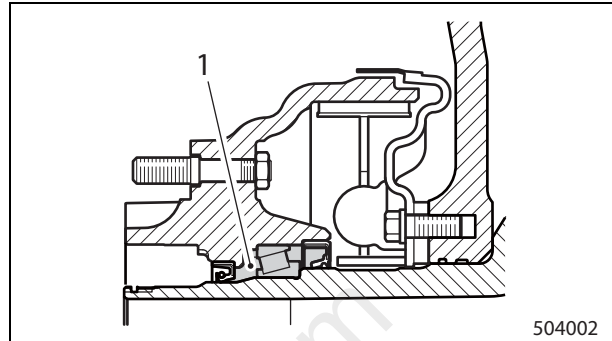


1. Grease

⚠ WARNING

Use care not to let grease enter the brake drums.

- (2) Using the installer (special tool), install the inner race and oil seal retainer of the wheel hub bearing.

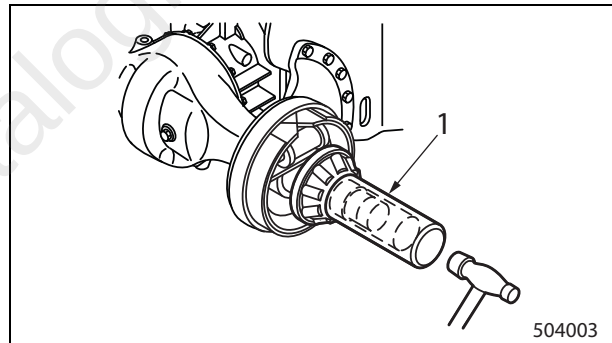


1. Installer

Special tool		
Installer	2, 3 ton classes	91468 - 00300

- (3) Apply sealant (ThreeBond #1184) to the flange surfaces of the axle shaft.

23. Disassembling Tilt Cylinder

23.1 Disassembly Sequence

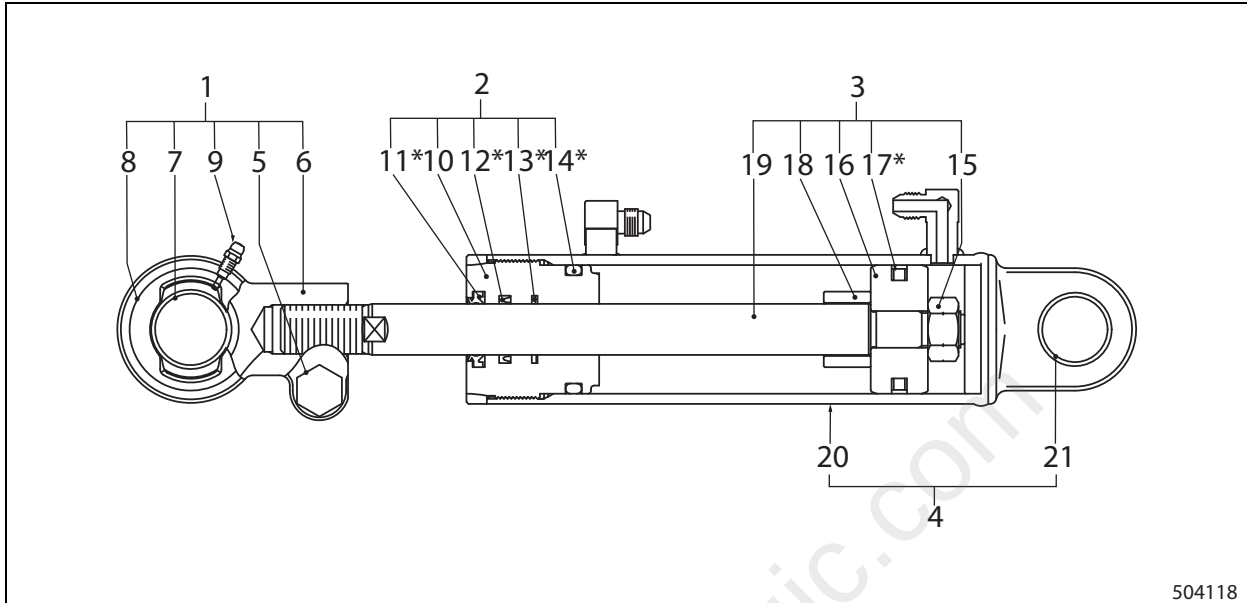

504118

- | | |
|-------------------------------|---------------------------------|
| 1. Tilt socket sub-assembly | 12. Rod seal* |
| 2. Guide bushing sub-assembly | 13. Piston seal* |
| 3. Piston rod sub-assembly | 14. O-ring* |
| 4. Cylinder sub-assembly | 15. Nut |
| 5. Bolt, Nut | 16. Piston |
| 6. Tilt socket | 17. Buffering*, Energizer ring* |
| 7. Seal | 18. Spacer |
| 8. Bearing | 19. Rod |
| 9. Grease nipple | 20. Cylinder assembly |
| 10. Guide bushing | 21. Bushing |
| 11. Wiper* | |

Note:

- (1) Before disassembly, make a record of the dimension from the holder edge to the socket edge when the rod is fully pushed in. The record will be helpful for assembly.
- (2) Do not disassemble the tilt socket bearing and cylinder tube bushing unless abnormality is found on inspection.
- (3) Do not disassemble the piston and nuts unless abnormality is found on inspection.

Full Version Available

Caterpillar GC28N Forklift Service Manual (99719-6C130)

Caterpillar GC28N forklift service manual, covers hydraulics, mast, wiring, power train, and engine repair. Downloadable PDF format.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/caterpillar-gc28n-forklift-service-manual-99719-6c130/)

<https://machinecatalogic.com/caterpillar-gc28n-forklift-service-manual-99719-6c130/>