



Service Manual

Chassis & Mast

GC15K

AT81C-00011-up
AT81D-00011-up
AT81E-00011-up

GC25K

AT82C-00011-up
AT82D-00011-up
AT82E-00011-up

GC18K

AT81C-00011-up
AT81D-00011-up
AT81E-00011-up

GC25K HP

AT82C-90011-up
AT82D-90011-up
AT82E-90011-up

GC20K

AT82C-00011-up
AT82D-00011-up
AT82E-00011-up

GC30K

AT83C-00011-up
AT83D-00011-up
AT83E-00011-up

GC20K HP

AT82C-90011-up
AT82D-90011-up
AT82E-90011-up

Start by:

- (a) Drain coolant from the engine cooling system.
- (b) Drain oil from the transmission, reduction gear and differential.


Suggestions for Removal

Fasten a hoist to the engine-power line combination. Carefully lift the combination from the frame and move it backward into position for removal.

Weight of components

Unit: kg (lb)

Component	GC15K GC18K	GC20K GC20K HP GC25K GC25K HP	GC30K
Mast [3.3 m (130 in.) simplex]	520 (1147)	725 (1599)	830 (1830)
Overhead guard	60 (132)	65 (143)	65 (143)
Power line	320 (706)	360 (794)	360 (794)

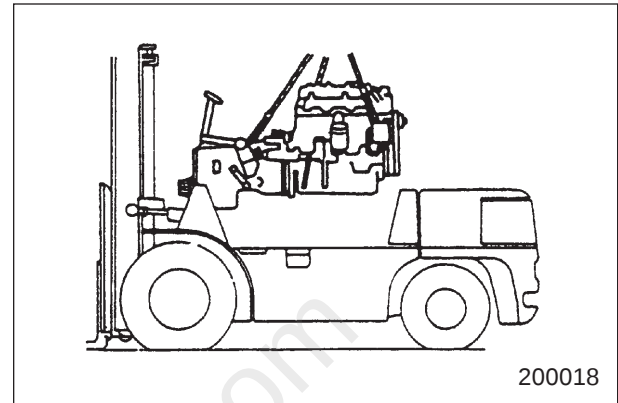

Installation

To install, follow the reverse of removal sequence.

Hints for reduction gear and differential installation

- (1) Fill the cooling system with soft water and add antifreeze.

NOTE

For the concentration of antifreeze, see "GROUP 13 SERVICE DATA".

- (2) Fill the transmission, reduction gear and differential, front axle and torque converter after making adjustments.
- (3) Bleed air out of the brake fluid lines.
- (4) Check the oil level in the hydraulic tank and add oil, if necessary.
- (5) Start the engine and check it for operating condition. If the engine vibrates, retighten the mounting bolts to see if this tightening has any effect.

3. Brake drums

Inspect the inside (friction) surfaces of the drum for abnormal wear, grooving and other defects. Minor grooving can be removed by grinding, provided that the service limit on the inside diameter is not exceeded.


A: Standard value B: Repair or service limit

Unit: mm (in.)

Truck Model		GC15K GC18K	GC20K/20K HP GC25K/25K HP GC30K
Item			
Brake drum inner diameter	A	$254^{+0.13}_0$ ($10.0^{+0.006}_0$)	$310^{+0.15}_0$ ($12.20^{+0.006}_0$)
	B	256 (10.08)	312 (12.28)

4. Adjusting screws

Check the wheel teeth for wear. Turn the screw by hand to see if its rotating parts turn smoothly.

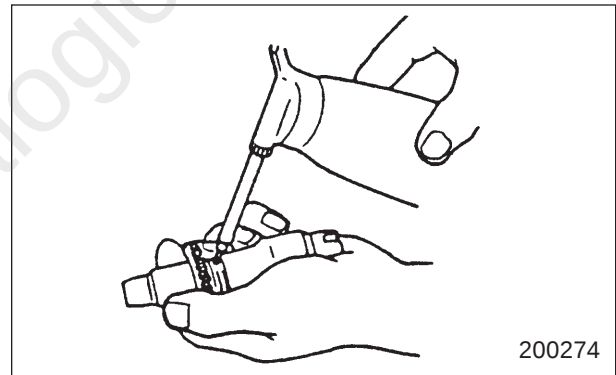

5. Parking brake cable

Replace a cable found permanently stretched, rusted or damaged.

6. Others

- (1) Check the return springs for cracks or fatigue.
- (2) Check the adjusting springs for cracks or fatigue.
- (3) Check the fitting cables for stretching.

Fuel and Lubricant Specifications

Fuel or lubricant		Recommendation	Recommendation for ambient temperature, °C (°F)						
			-30 (-22)	-20 (-4)	-10 (14)	0 (32)	10 (50)	20 (68)	30 (86)
Fuel		—	Consult your dealer.						
Engine oils		API service classification SH	SAE 10W-30						
Differential oil		API service classification GL-4 or GL-5 (multi-purpose)	SAE 80W		SAE 90				
Powershift transmission oil		Dexron	See “Recommended Brands of Lubricants”.						
Hydraulic oil		ISO VG32							
Brake fluid		FMVSS No.116 – DOT 3 or DOT 4 (SAE J1703)							
Grease	Wheel bearings	NLGI No. 2 grade multi-purpose type (lithium base) Consistency: 265 to 295	See “Recommended Brands of Lubricants”.						
	Chassis	NLGI No. 1 grade multi-purpose type (lithium base) Consistency: 310 to 340							

Antifreeze solution (Long Life Coolant)	Ambient temperature °C (°F)	-45 (-49)	-39 (-38.2)	-30 (-22)	-25 (-13)	-20 (-4)	-15 (5)	-10 (14)
	Concentration %	60	55	50	45	40	35	30

Remarks: Avoid mixing lubricants. In some cases, different brands of lubricants are not compatible with each other and deteriorate when mixed. It is best to stick with one and the same brand at successive service intervals.

3. Others


- (1) Check the outer surface of the oil seal retainer for wear or damage.
- (2) Check the outer and inner oil seals for wear and damage.

Reassembly

To reassemble, follow the reverse of disassembly sequence, and do the following steps:

1. Axle housing

- (1) Install the O-ring in the outer groove (of the two grooves in the bore of each frame support).
- (2) Apply grease to the surfaces **A** of the support and axle housing.

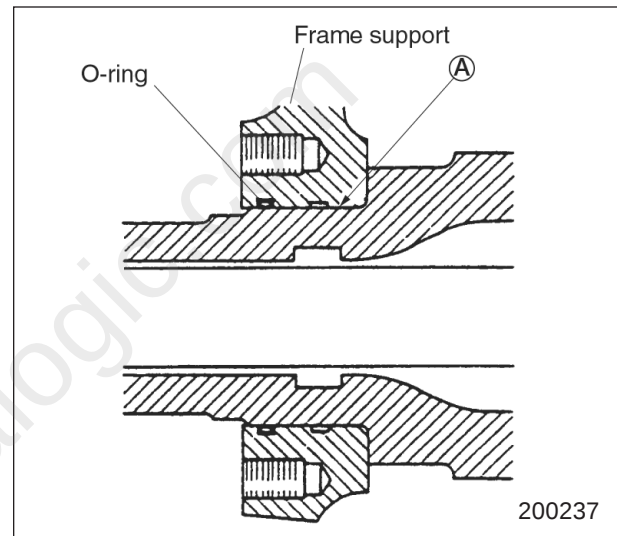


2. Front wheel hub

- (1) Fill the front wheel hub, especially the roller holder and oil seal lip groove, with grease.

NOTE

Take care not to apply grease to the brake drum.

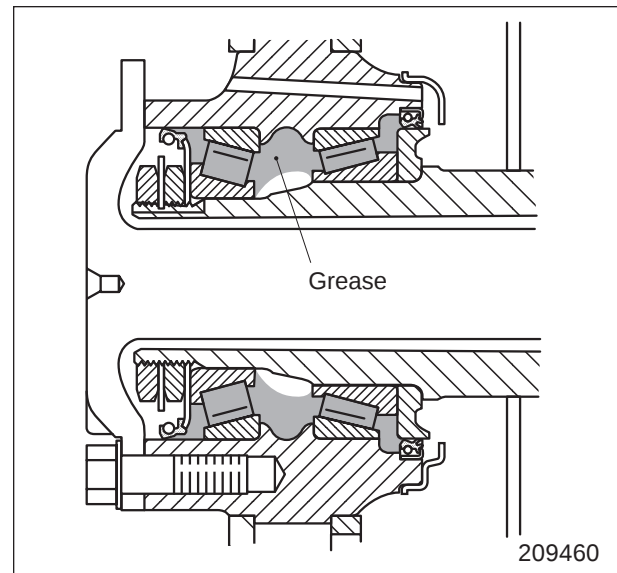

Full Version Available

Caterpillar GC30K Forklift LPG Service Manual (99719-80150)

Caterpillar GC30K LPG service manual, covers converter, regulator, mixer, tank lines, and fuel diagnostics. Searchable PDF download.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/caterpillar-gc30k-forklift-lpg-service-manual-99719-80150/)

<https://machinecatalogic.com/caterpillar-gc30k-forklift-lpg-service-manual-99719-80150/>