



Service Manual

Chassis, Mast & Options

GP40K	T29C-00011-up	DP40K	T19C-00011-up
GP40KL	T29C-50001-up	DP40KL	T19C-50001-up
GP45K	T29C-80001-up	DP45K	T19C-80001-up
GP50K	T33B-50001-up	DP50K	T28B-50001-up

- (2) To install the differential case assembly to the front axle housing, clean the mounting flange surfaces, and apply sealant to the surfaces, then tighten the bolts.
- (3) To install the engine mount nuts, first tighten the nuts until they come in contact with the mounts. From that position, retighten them more 1/4 turn to align the split pin grooves of the nut with the pin hole of the bolt.
- (4) Fill the radiator with antifreeze coolant up to the specified level. Unless otherwise specified, use a solution of 35% concentration. Water should be free from scale forming minerals.
- (5) Fill the transmission, reduction bevel gear and differential, front axle and torque converter with the specified amount (and type) of oil upon adjustment.
- (6) Bleed air out of the brake lines.
- (7) Check the oil level in the hydraulic tank, and add oil, if necessary.
- (8) Inspection after starting the engine
After starting the engine for the first time, observe its running condition. If the engine vibrates excessively, retighten the mounting bolts to see if this tightening has any effect.
- (9) Installation of the overhead guard
Tighten the overhead guard mounting bolts to the following torque.

Tightening torque	14.5 N·m (6.6 kgf·m) [10.7 lbf·ft]
-------------------	--

Service Data

A: Standard value B: Repair or service limit

Unit: mm (in.)


Item		Truck Model	GP40K, GP40KL, GP45K DP40K, DP40KL, DP45K	GP50K DP50K
Oscillating angle (each side)		A	3°	
Toe-in		A	0	
Caster		A	0°	
Camber		A	1°	
Length of tie rod (center to center of ball studs)	Left 1	A	550.7 (21.68)	
	Right 2	A	543.6 (21.40)	
As installed length (thread length) of ball studs	Left 3	A	14.35 (0.56)	
	Right 4	A	10.8 (0.43)	
Tightening torque of tie rod end lock nuts 5 N·m (kgf·m) [lbf·ft]		A	98 (10) [72.3]	
Tightening torque of knuckle stopper bolt lock nuts 6 N·m (kgf·m) [lbf·ft]		A	16.7 (1.7) [12.3]	
Back-and-forth play of axle center pin 7 (total)		A	0.8 (0.031)	
		B	1.2 (0.05)	
Tightening torque of bearing support mounting bolts 8 N·m (kgf·m) [lbf·ft]		A	291 (29.7) [215]	
Tightening torque of tie rod ball joint castle nuts 9 N·m (kgf·m) [lbf·ft]		A	157 (16) [116]	
Steering angle	Inside 10	A	83°	
	Outside 11	A	56°33'	

203589

203589

Triplex Mast

Disassembly

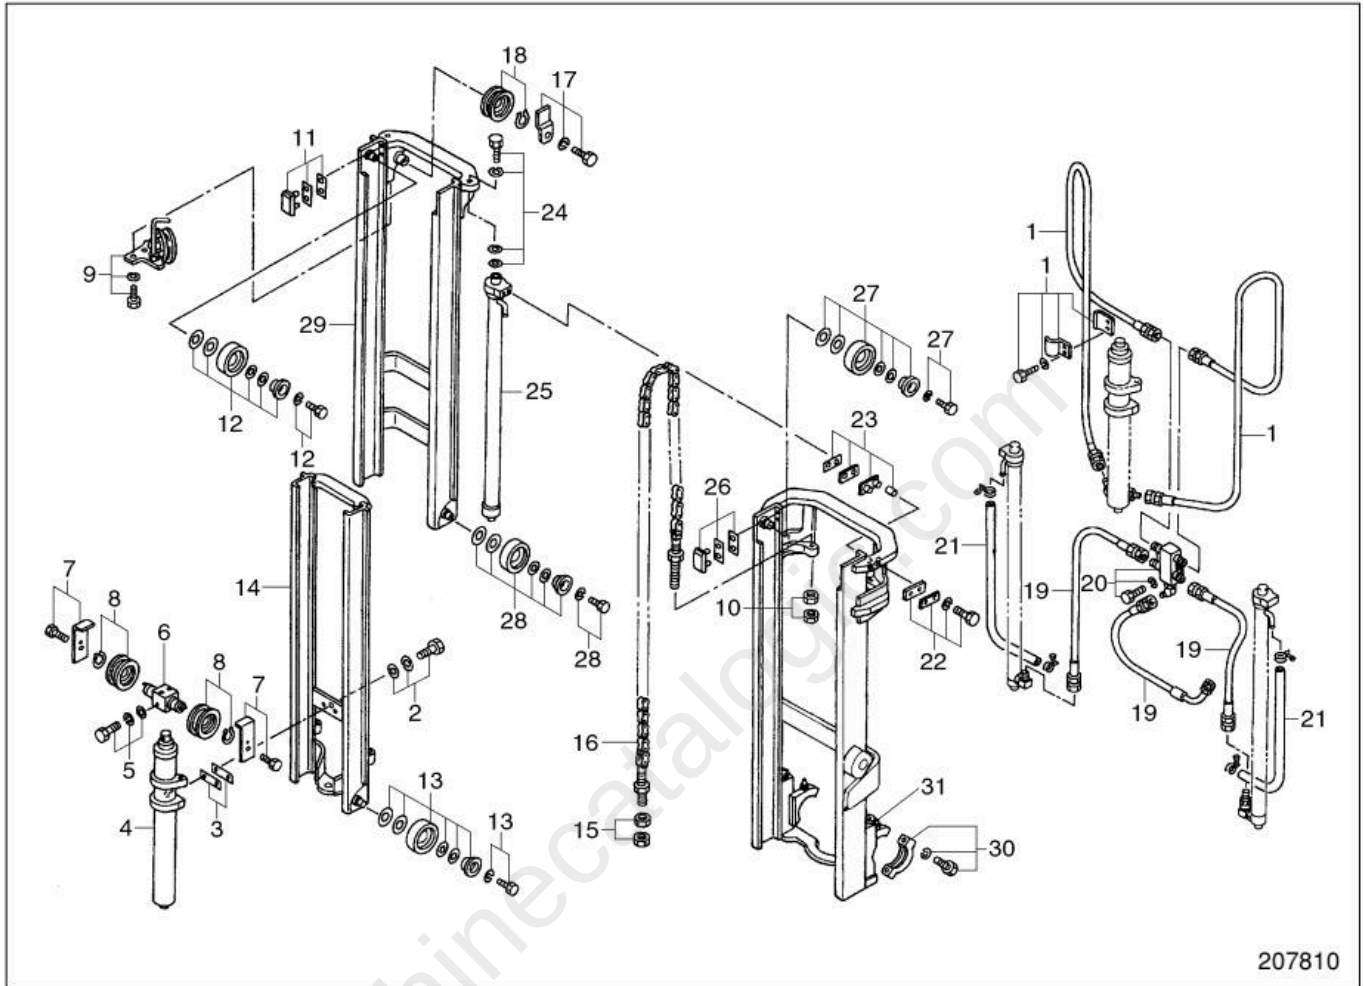

207810

Sequence

- 1 Hose for first lift cylinder, Clamp, Bolt, Washer
- 2 Bolt, Washer
- 3 Shims
- 4 First lift cylinder
- 5 Stopper bolt, Washer
- 6 Chain wheel support
- 7 Chain guard, Plug
- 8 Snap ring, Chain wheel
- 9 Pulley bracket, Pulley, Bar, Bolt
- 10 Nut (chain for second lift cylinder)
- 11 Mast strip, Shims
- 12 Main roller, Shims
- 13 Main roller, Shims
- 14 Inner mast
- 15 Nuts
- 16 Lift chain (for second lift cylinder)
- 17 Chain guard, Bolt
- 18 Snap ring, Chain wheel
- 19 Hose, Band
- 20 Joint, Connector, Bolt, Washer
- 21 Hose, Clamp
- 22 Bolt, Seat, Cushion, Collar
- 23 Cushion, Shims, Bracket
- 24 Bolt, Washer, Shims
- 25 Second lift cylinder
- 26 Mast strip, Shims
- 27 Main roller, Shims
- 28 Main roller, Shims
- 29 Middle mast
- 30 Cap, Bolt, Washer
- 31 Outer mast, Grease nipple

Full Version Available

Caterpillar GP40KL Forklift Service, Operator and Schematic Manual (99739-36130)

Caterpillar GP40KL Forklift service manual, covers hydraulics, mast, drive unit, wiring, and engine work. Searchable PDF download.

[VIEW THE FULL MANUAL](#)