

Service Manual

High level order picker

NOH10N, NOH10NH

Date:
30.09.2008

Revision: 0

NOTE

Do not turn the steering wheel unnecessarily when the truck is not moving.

Safety

The steering system performs a self-test every time the truck's power is turned on. The test lasts for less than a second, after which the truck is ready for operation.

If a fault is detected, the steering system's control unit stops the truck and engages the magnetic brake.

Malfunctions in the steering system are reported on the truck's display. If there is a malfunction notification on the display, the truck cannot be operated.

NOTE

In case of malfunction, turn off power. Wait for three seconds before turning the power back on. If the malfunction persists, contact service personnel.

General driving instructions

Practice steering and controlling the truck carefully in a safe area.

- Drive slowly at intersections and when turning.
- Handle the truck responsibly and always keep it under control.
- Avoid sudden starts and stops.
- Steer and brake smoothly.
- Decrease the speed if the floor is slippery, e.g. because of humidity.
- Take great care when driving on a slanted surface.
- Do not drive over any loose objects on the floor.
- Keep the load lowered and, if possible, tilted backwards.
- Do not lift the load except when stacking (this does not apply to trucks designed to be driven with the load raised).
- Always drive with the lift cabin lowered when not operating within the aisles (applies only to order picker trucks).

When driving, keep the load lowered and, if possible, tilted backwards. Do not lift the load except when stacking. This does not apply to trucks designed to be driven with the load raised.

Be especially careful

- when there are other people or objects in the working area.
- when the load reduces visibility.
- when driving in narrow aisles. Make sure that there is enough space for the truck and the load.

Driving position

Always drive the truck from the operator's position, foot on the safety pedal. Keep your left hand on the steering wheel and the right on the control panel handle. When driving, always keep your body completely within the outlines of the truck and both safety gates closed. Make your driving position ergonomic; adjust the arm rest correctly (if available).

Use the two-hand control device button with your left hand to activate right hand control devices when the truck is used guided in aisles. Similarly use the button to activate hydraulic functions when the truck is used outside the aisles.

Speed

Control the speed according to the situation. Take into consideration the load, visibility, people in the working area and the working environment. Slow down at cross aisles and whenever vision is obstructed. If the visibility is inadequate, use an assistant to help guide you.

Uncontrolled acceleration or braking, excessive speed at turning points, and fast and sudden turning may overturn the load and cause an accident. In all conditions, drive the truck at a speed that enables you to stop it safely.

Travel speed limits


Travel speed is related to the lifting height.

1. Travel speed limits outside the aisles:

- lifting height 0 - 1200 mm - maximum travel speed 9 km/h


Lubricant recommendation

- Hydraulic oil ISO VG 32
- In cold storage: ISO VG 15
- In hot temperatures: ISO VG 46

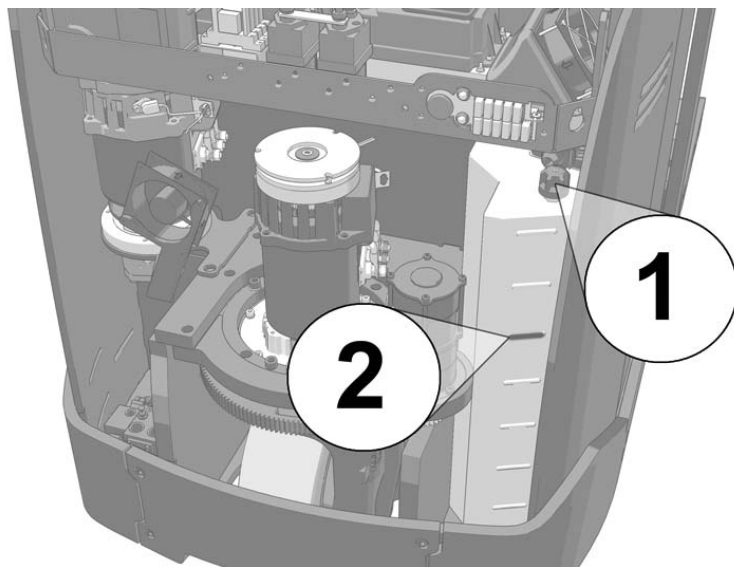

Filling hole (1) for hydraulic oil with maximum filling level (2).

- Transmission oil: SAE 80W/90, API: GL-4 Fill to the volume of 2.9 l.
- Lubricating grease: NLGI No. 2, containing molybdenumdisulphide.
- In cold storage: NLGI No. 1 or No. 0

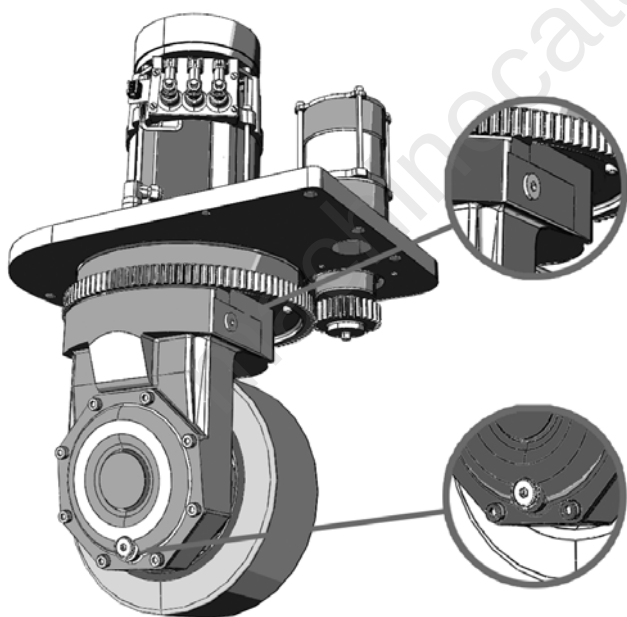


Truck Parameters

BDI Curve

Range/value: 0-9

Battery discharge curve select.

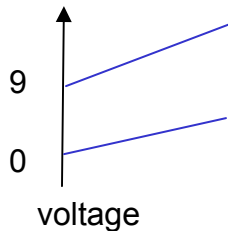

BDI Timer

Range/value: Default 310s, do not change

Battery discharge indicator level change timer

BDI Reset

Range/value: Default 50.5V, do not change

Voltage level to reset BDI reading to 100%

Low Battery Level

Range/value: 0-20%

Empty battery warning level.

Lift Battery Level

Range/value: 0-20%

Empty battery lift cut-out level.

Safety Switch Timeout

Range/value: 1-5sec

Delay to de-activate two hand control device.

Maintenance Period

Range/value: 0-1000h

Parameter to adjust default maintenance period. If set to zero, maintenance warning disabled.

Maintenance Warning

Range/value: 0-50h

1-50 is maintenance warning time in hours

0 (zero) = no maintenance warning.

Stand-By Timer

Range/value: 0/30/60sec

Delay to truck sleeping mode. Line contactor (K2) opens.

0/30/60 is delay time in seconds

0 (zero) = sleep mode is disabled.

Mast Height

Range/value: 0-10000mm

Maximum cabin floor lifting height.

Full Version Available

Caterpillar NOH10NH Order Picker Service and Operator Manual (WHSM0007)

Caterpillar NOH10NH Order Picker service manual, covers mast, hydraulics, wiring, drive systems, and diagnostics. Instant PDF download.

[VIEW THE FULL MANUAL](#)