



SERVICE MANUAL

NPP

16N2/18N2/20N2/20N2E

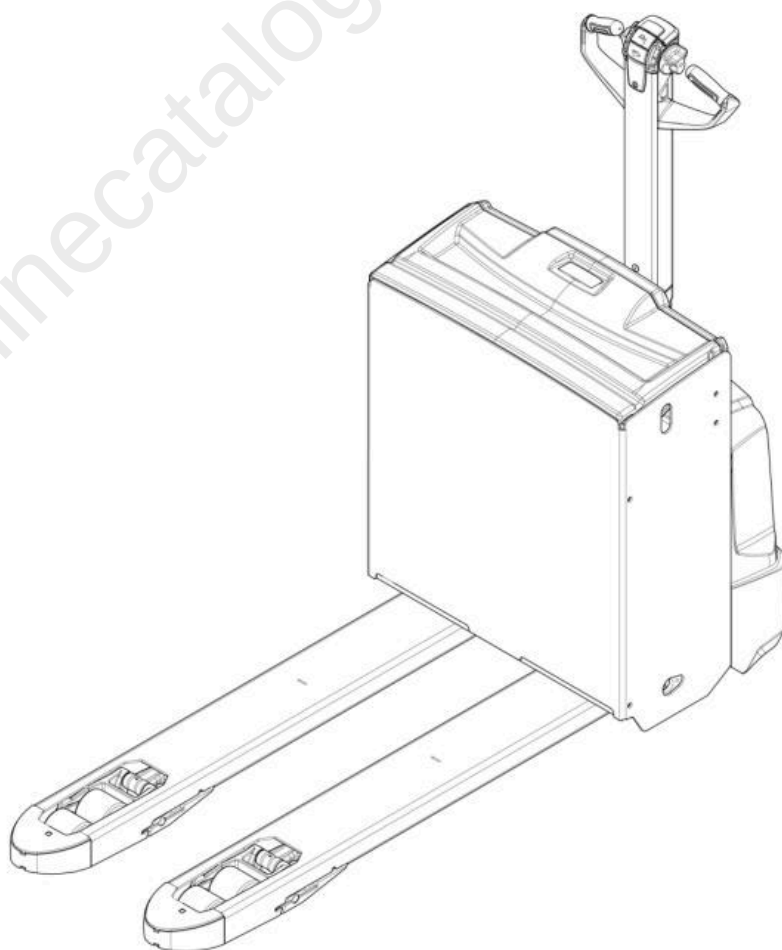

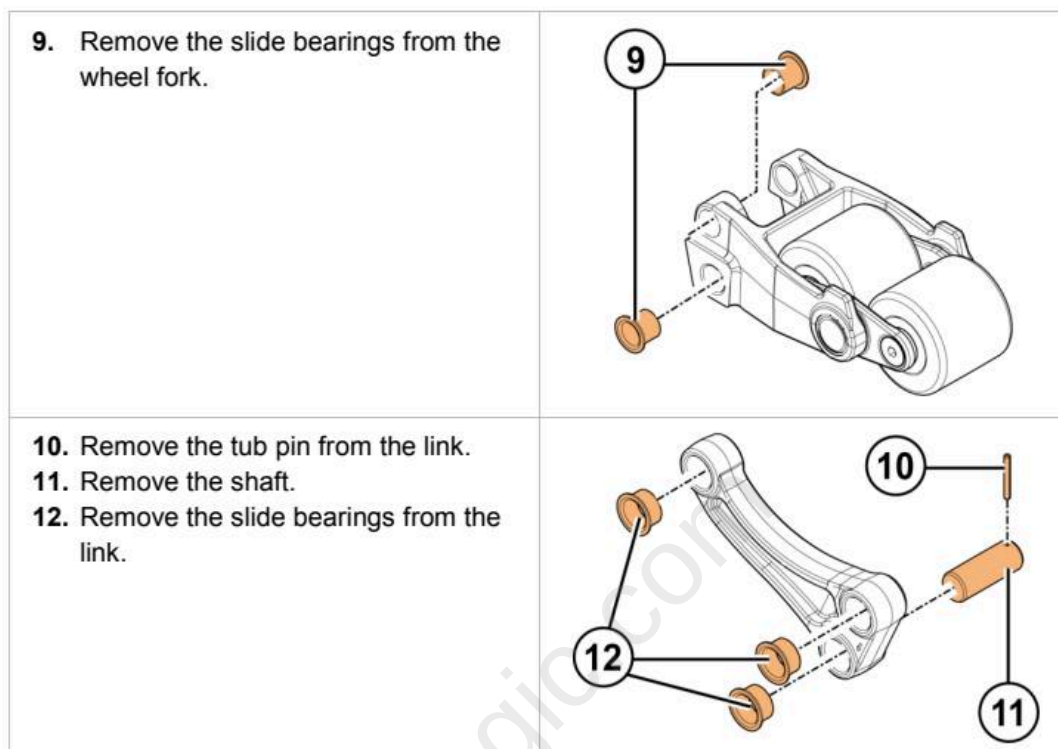

5.10 Castor wheels

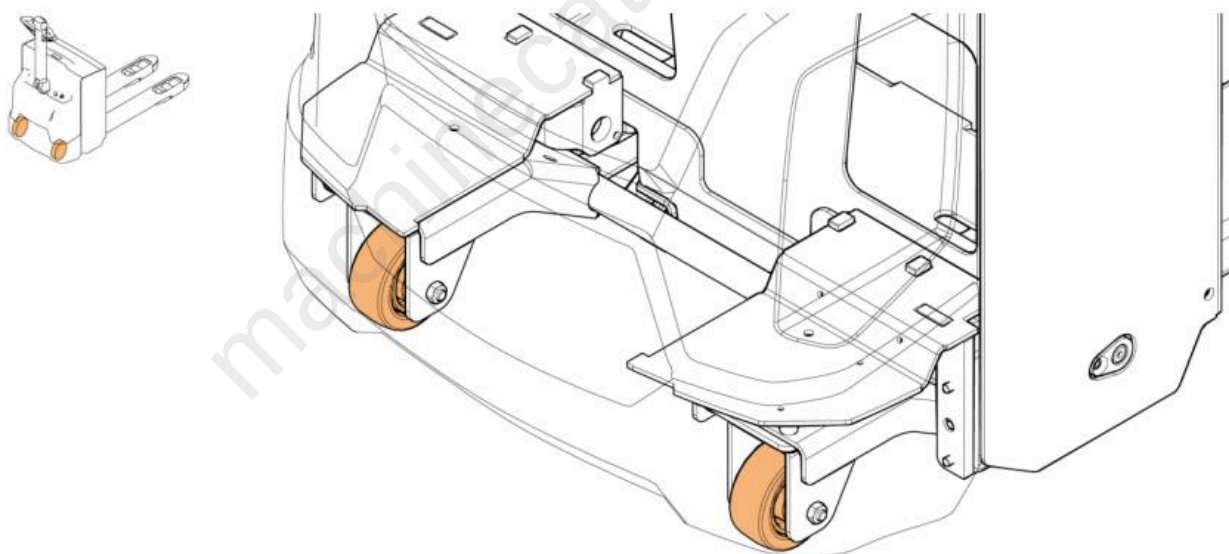


Figure 31. Castor wheel overview

Check the wear of the castor wheels:

- The diameter of a new castor wheel is 98 mm.
- It is recommended that the castor wheel is replaced when its diameter reaches 90 mm.

10.4 Hydraulic aggregate

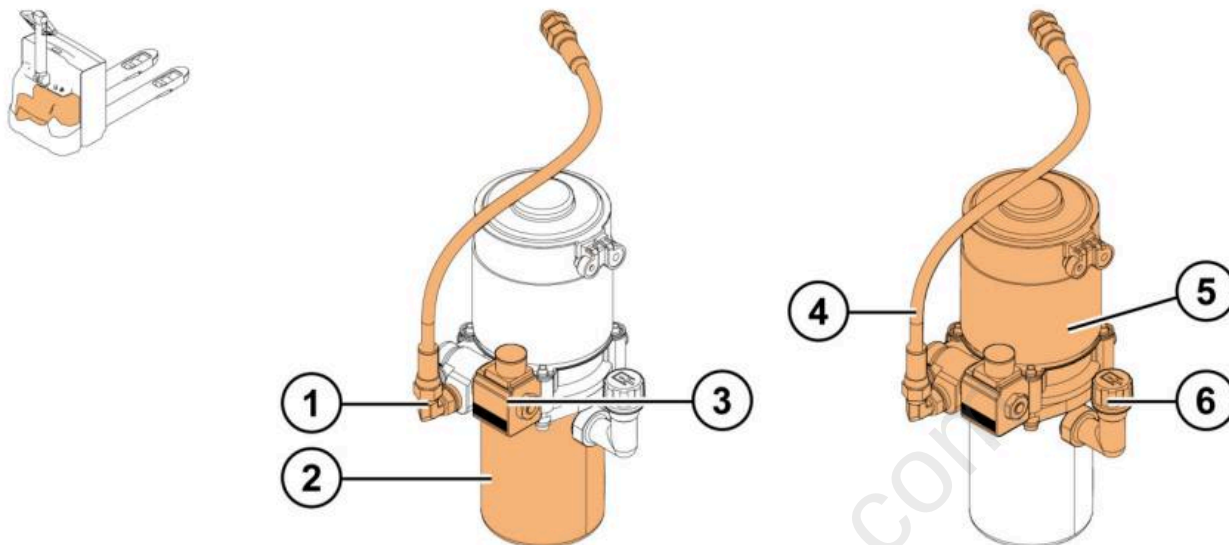


Figure 85. Hydraulic aggregate overview

- | | |
|------------------------|-----------------------------------|
| 1. Hydraulic connector | 4. Hydraulic hose |
| 2. Oil tank | 5. Pump motor |
| 3. Solenoid valve | 6. Filling hole for hydraulic oil |

The hydraulic aggregate consists of the electric pump motor, the hydraulic gear pump unit, the oil tank, the suction filter, the pressure relief valve, the solenoid valve, hydraulic hoses and connections for various hydraulic equipment.

The hydraulic aggregate is used to control the load handling device.

14.3 Maintenance check list


Legend: C = Check, R = Repair, Clean or Change, G = Grease

	BEFORE DAILY USE (USER)	MONTHLY (OWNER)	600 h OR ONCE A YEAR (SERVICE)	1,200 h OR EVERY SECOND YEAR (SERVICE)
Drive unit				
Transmission leakage check	C	C	C	C
Steering bearing			C	C
Fastening of the gearbox			C	C
Hydraulics				
Leakage check		C	C	C
Cleaning the oil filter				R
Hydraulic oil change				R
Oil level		C	C	C
Hose and cylinder		C	C	C
Operation of the hydraulics	C	C	C	C
Pressure relief valves			C	C
Linkage				
Bearings			C	C
Linkage			C	C
Wheels				
Traction wheel	C	C	C	C
Traction wheel has to be replaced when its diameter reaches 218 mm			C	C
Load wheels	C	C	C	C
Castor wheel suspension			C	C
Battery				
Battery water level	C	C	C	C
Battery cable and connector	C	C	C	C
Battery automatic watering system		C	C	C

8.2.5 Removing the electric panel


Instructions for removing the electric panel are provided below.

1. Lift the forks of the truck to their upmost position.

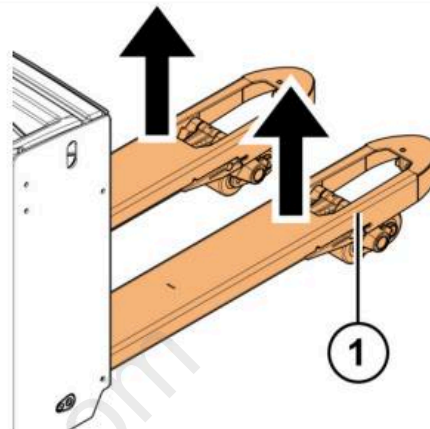


2. Switch the truck's power off.
3. Disconnect the battery connector.

4. Remove the two 10 mm bolts from the electric panel.

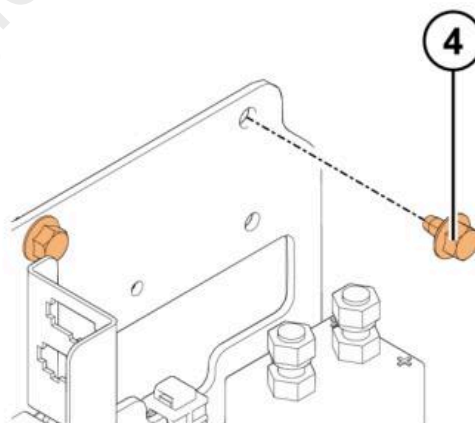

5. Remove the cable tie attaching the wires of the electric panel to the truck frame. Record the places of the connectors and wires you remove.

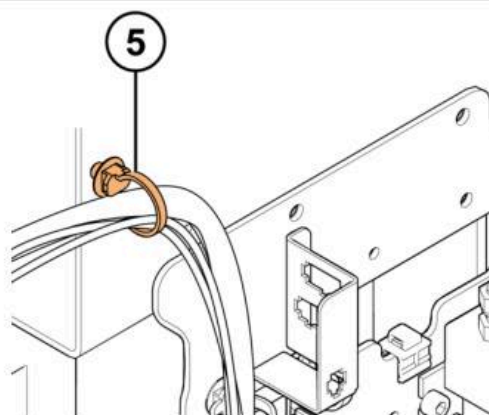

Full Version Available

Caterpillar NPP20N2E Pallet Truck Service and Operator Manual (618021)

Caterpillar NPP20N2E Pallet Truck service manual, covers hydraulics, drive unit, wiring, brakes, and battery service. Searchable PDF download.

[VIEW THE FULL MANUAL](#)