




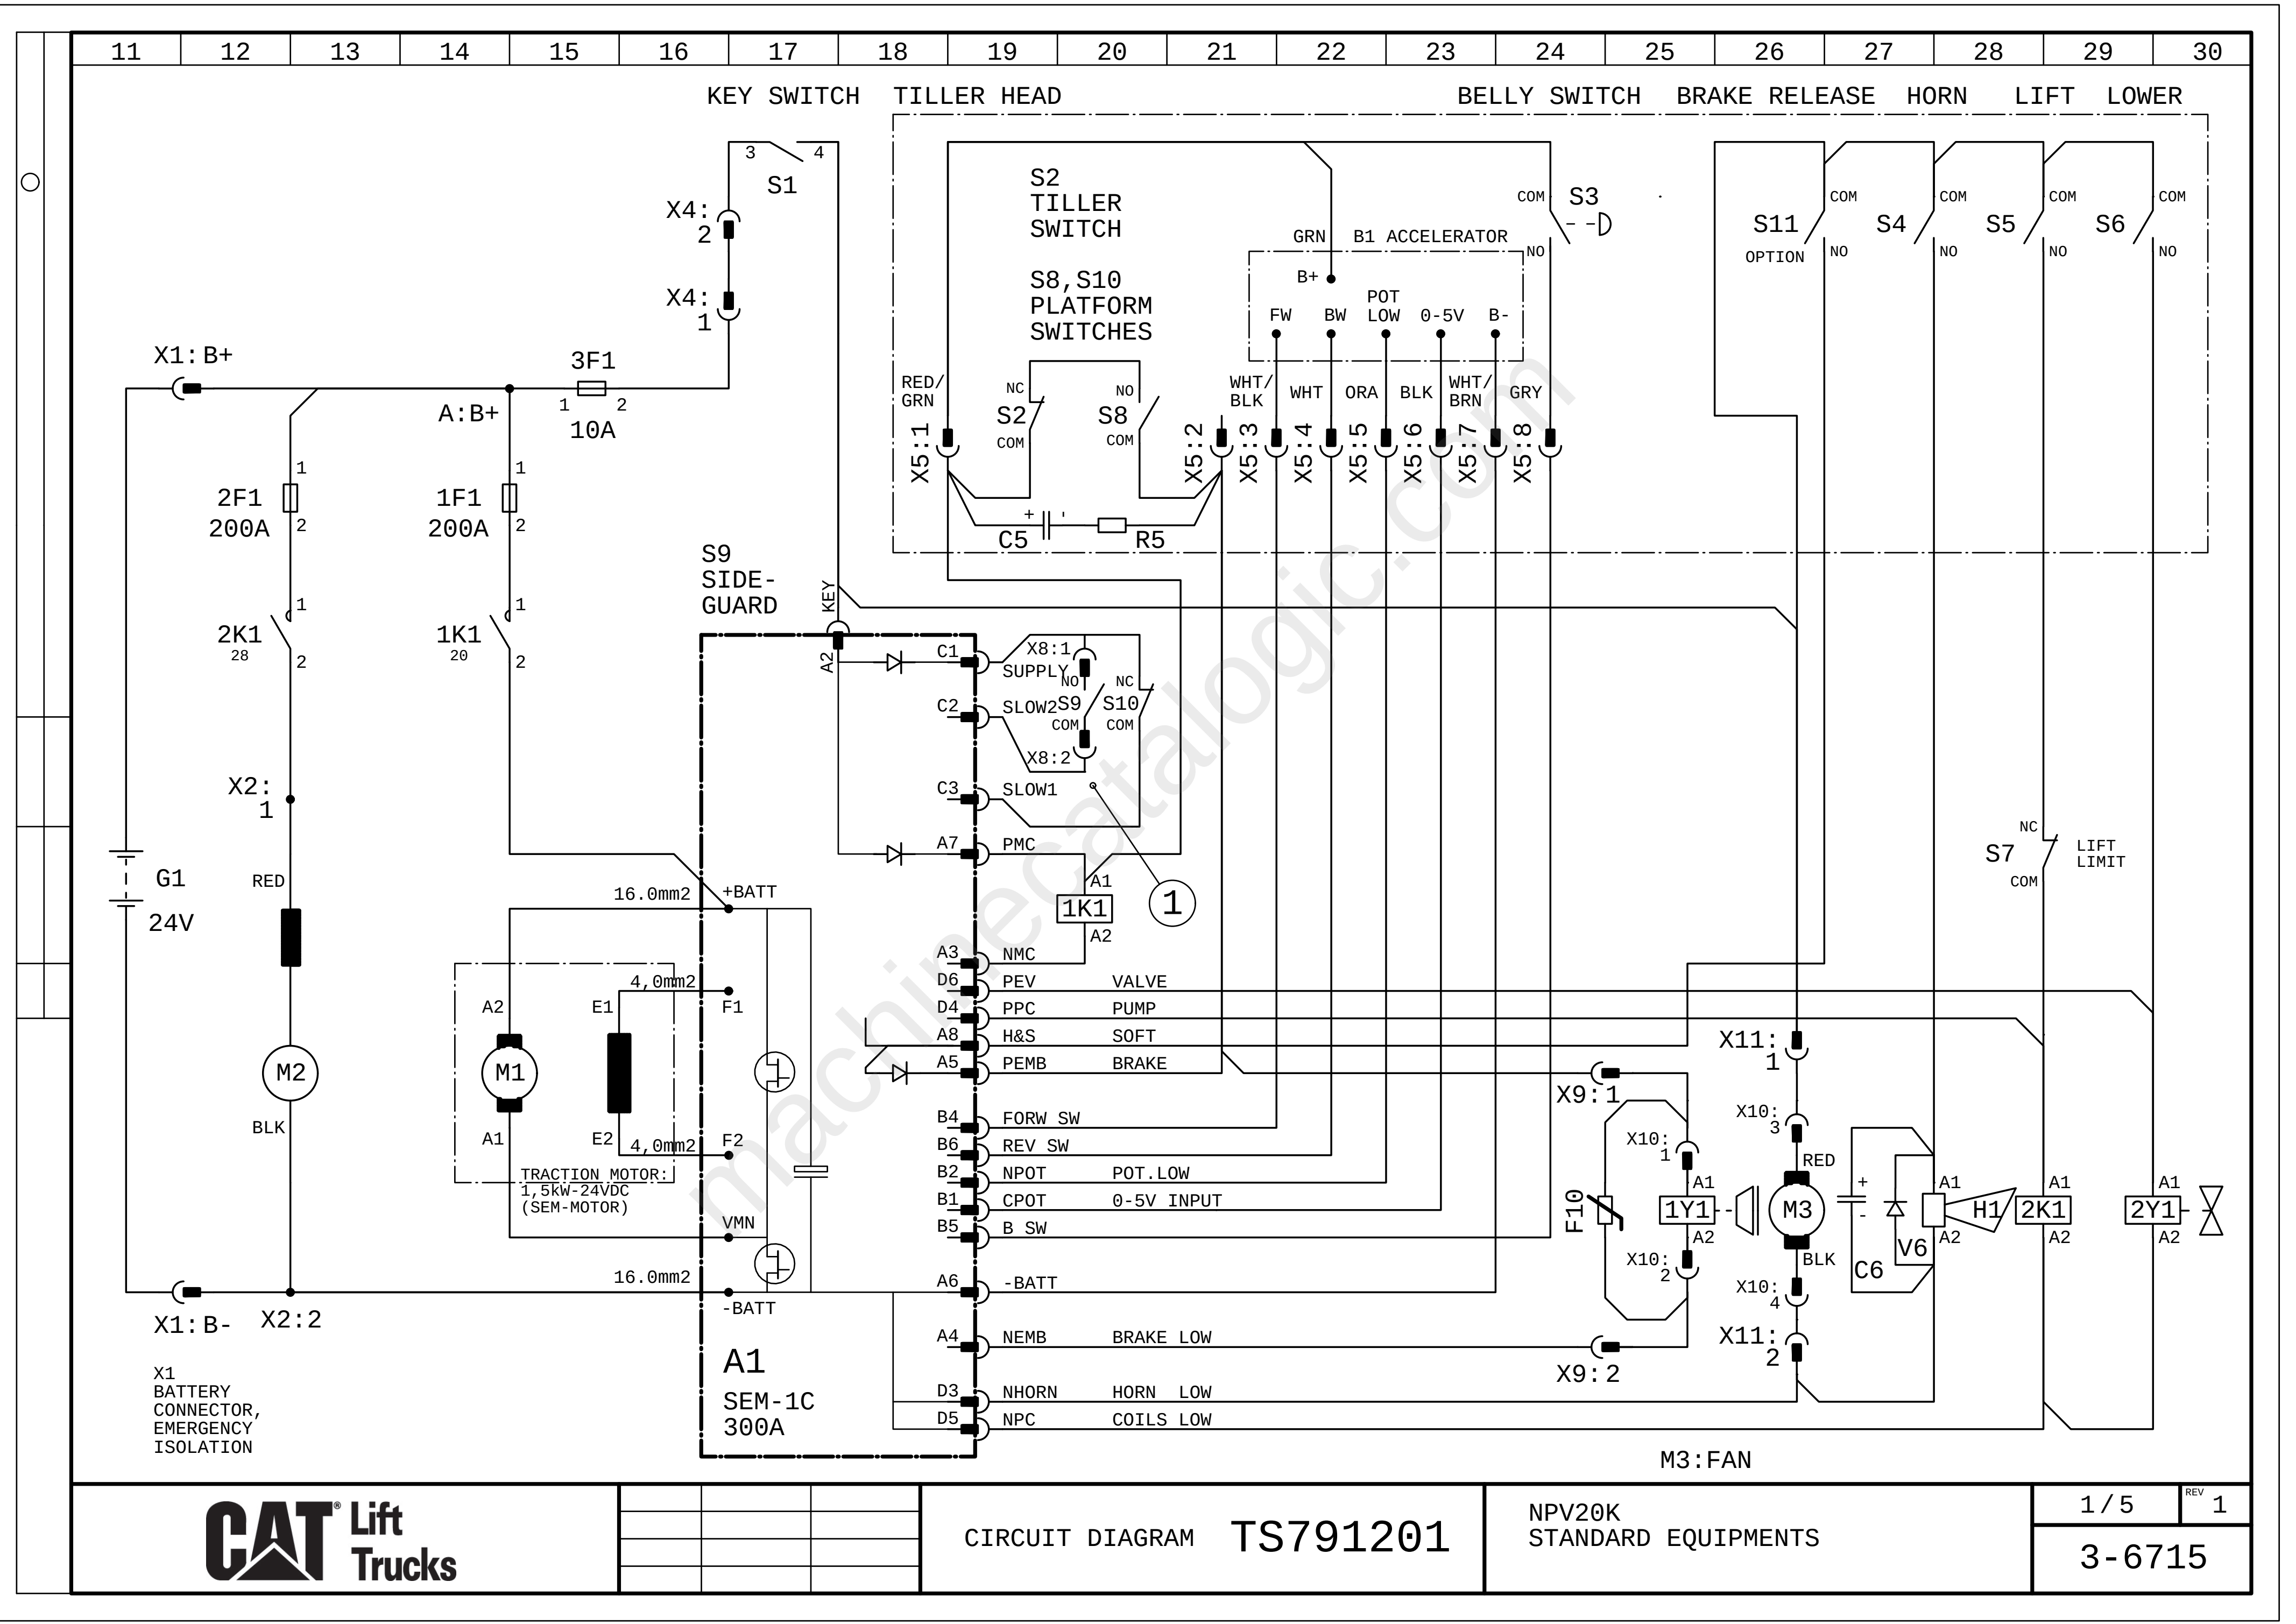

5.2 CONNECTIONS

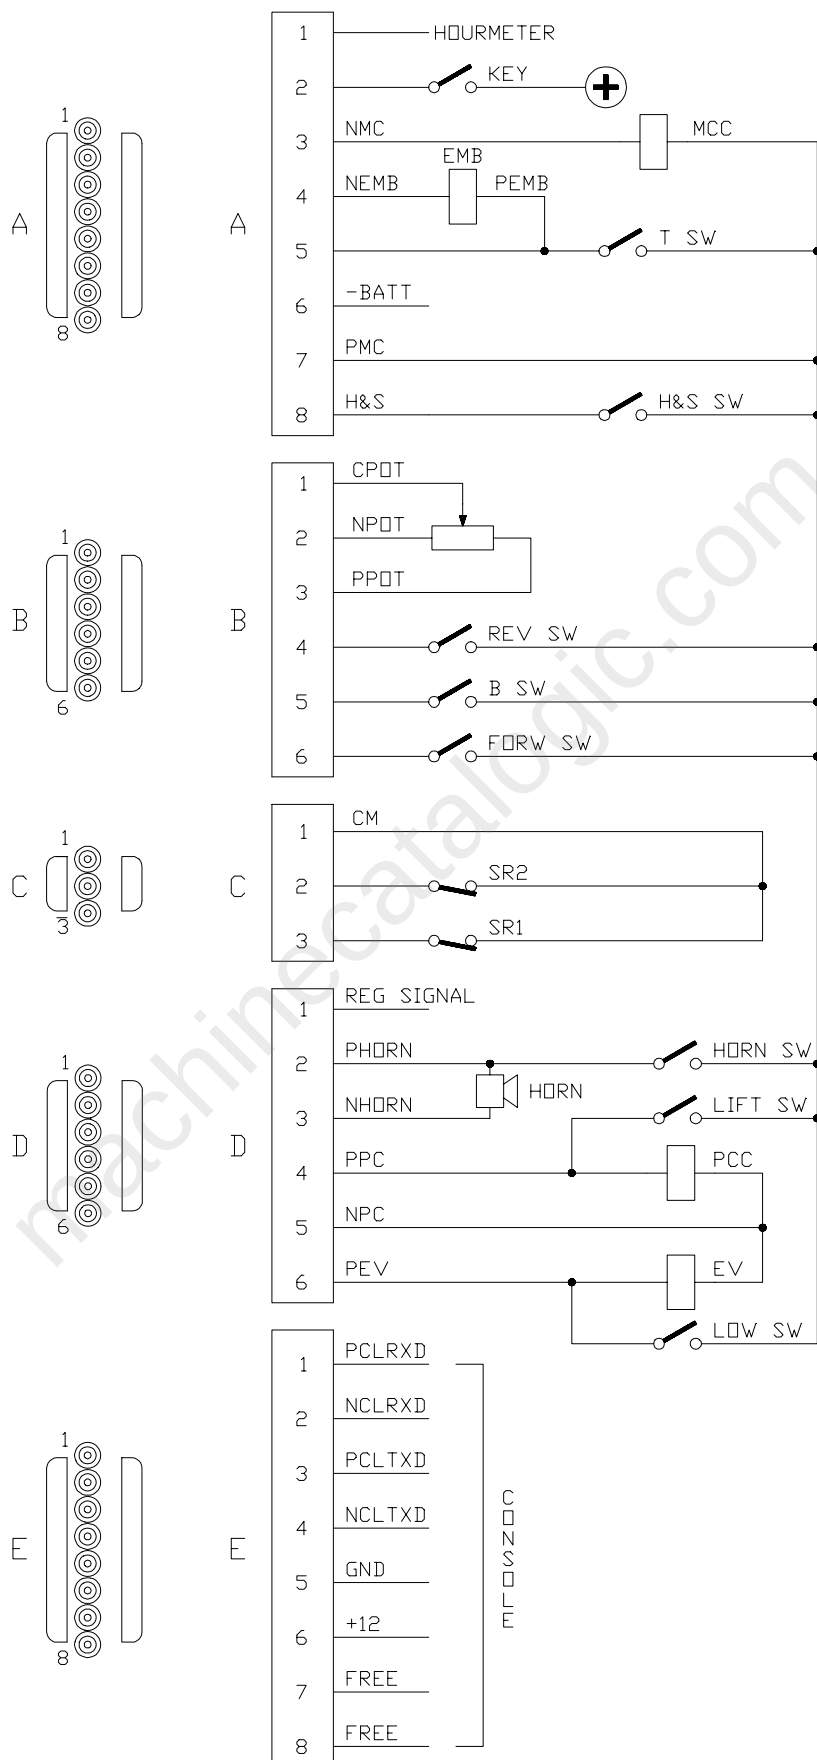

1 SPEED LIFT / 2 SPEED LOWER
OR
PROPORTIONAL LIFT / LOWER,
NOT BOTH IN SAME TRUCK

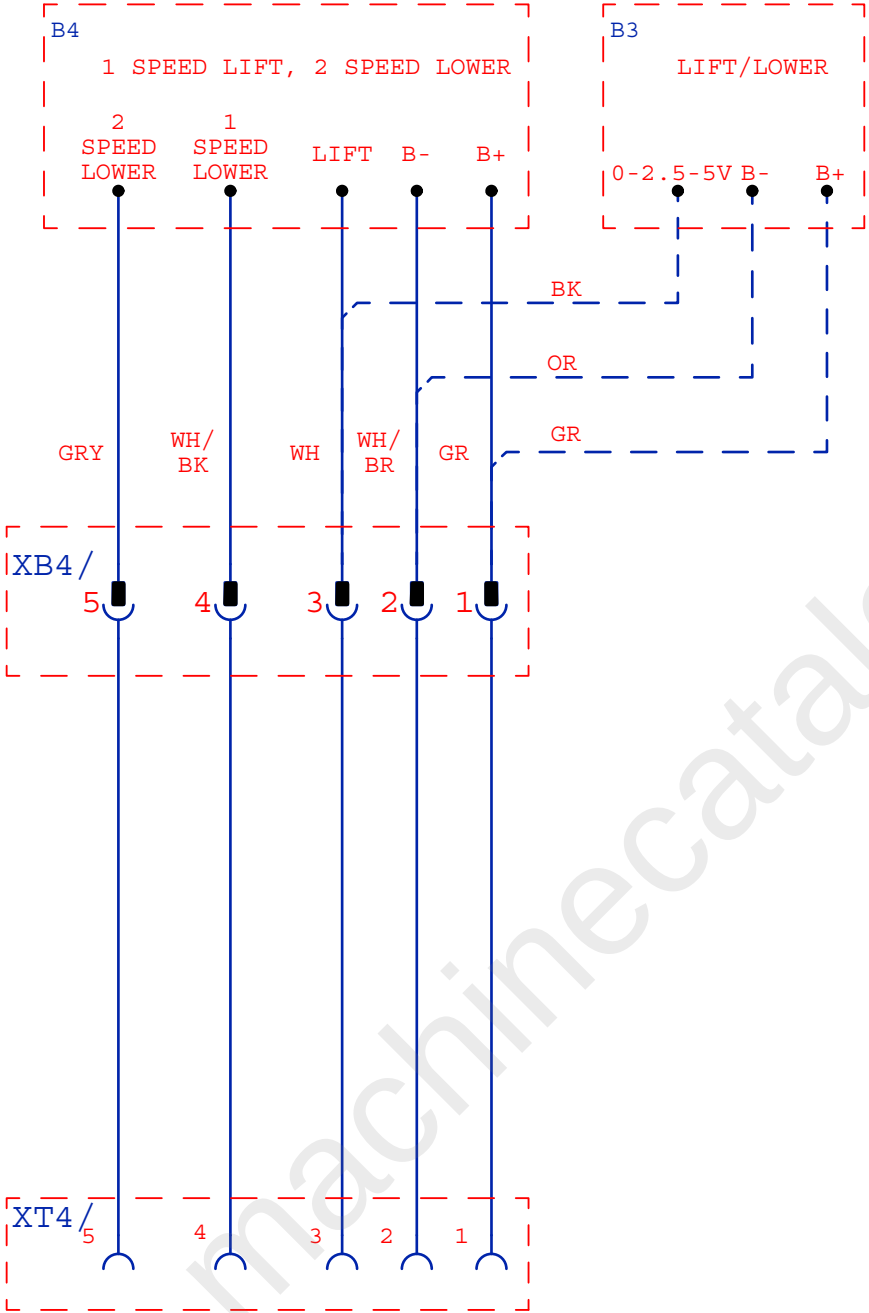

DATE:
2006-09-14

CIRCUIT DIAGRAM

TS1150908

NEW TILLER


STACKER TRUCKS

2 / 2

REV
E


3-6969

3.6 MECHANICAL DRAWING & DIMENSIONS

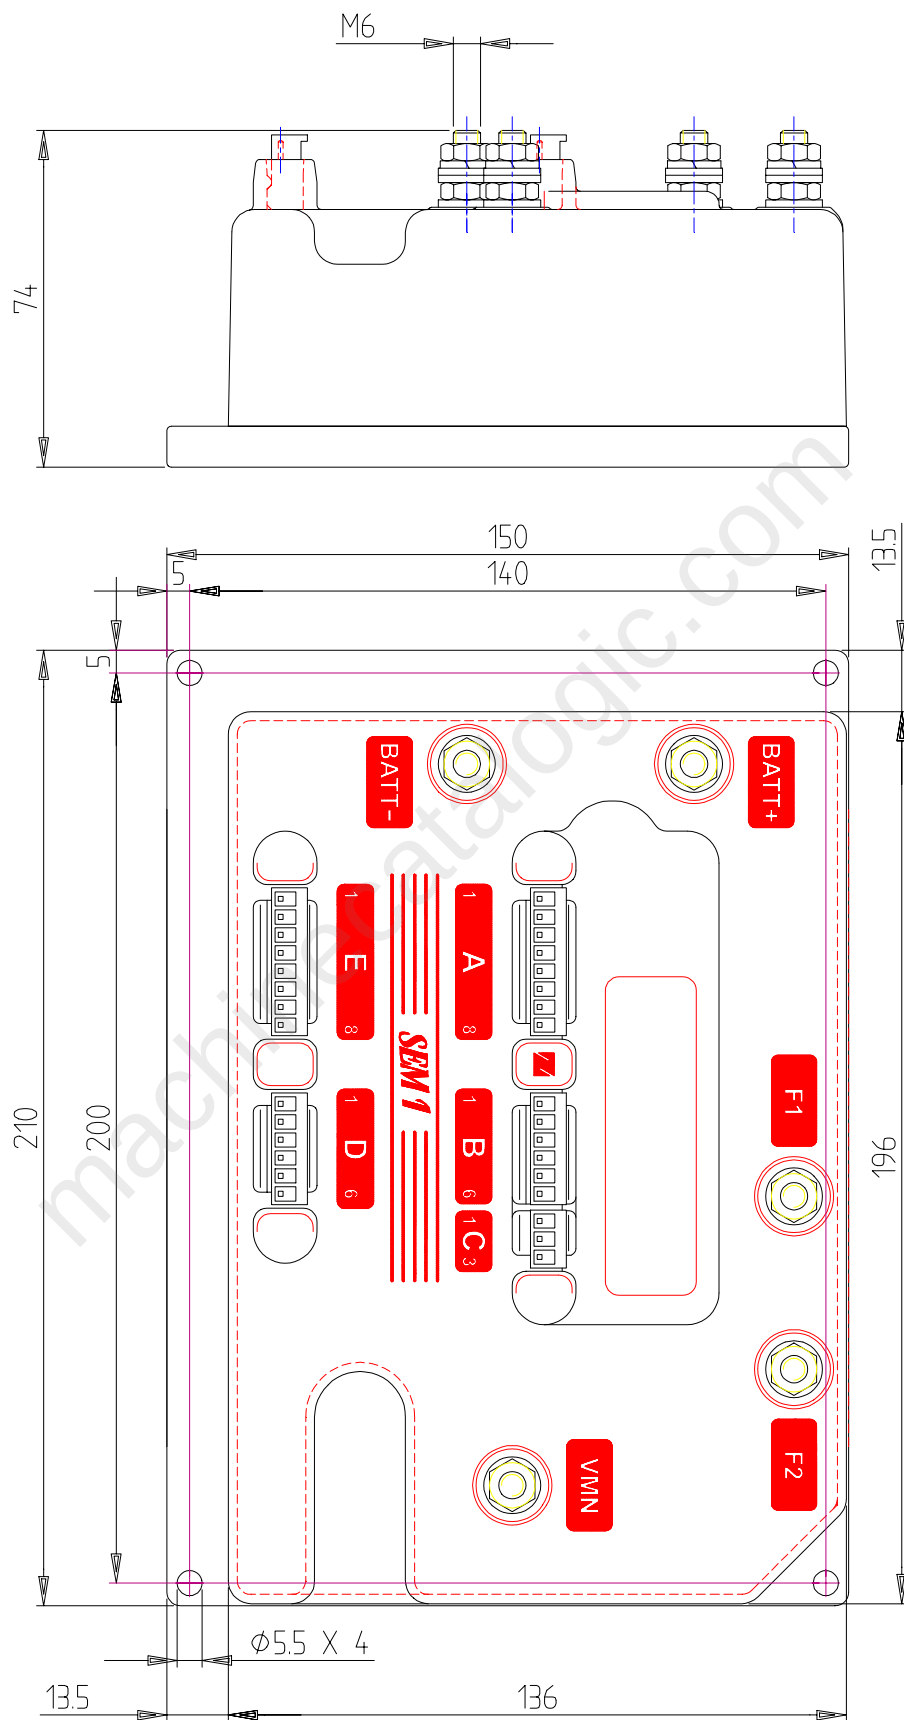

Flow Chart showing how to make changes to Configuration Menu using Digital Console.
(Standard Eprom CK ULTRA fitted).

- 1) Opening Zapi Menu.
- 2) Press Top Left & Top Right Buttons simultaneously to enter the Config.Menu.
- 3) The Display will show :
- 4) Press ROLL UP (Top Left Button) until SET OPTIONS appears.
- 5) The Display will show :
- 6) Press ENTER to go into this part of the menu.
- 7) The first "Option" of the menu appears on the Display.
- 8) Press either ROLL UP or ROLL DOWN to bring up the next the Option.
- 9) A new Option appears on the Display.
- 10) When the desired Option is displayed, press PARAM (Top Right) or SET (Bottom Right) button to change the configuration
- 11) The new Configuration for the selected Option appears on the Display.
- 12) Press OUT to exit the Menu.
- 13) Press ENTER to accept the changes, or Press OUT if you do not accept the changes and wish to make further modifications to the particular Option.
- 14) The Display now shows:
- 15) Press OUT again. Display now shows the Opening Zapi Menu.

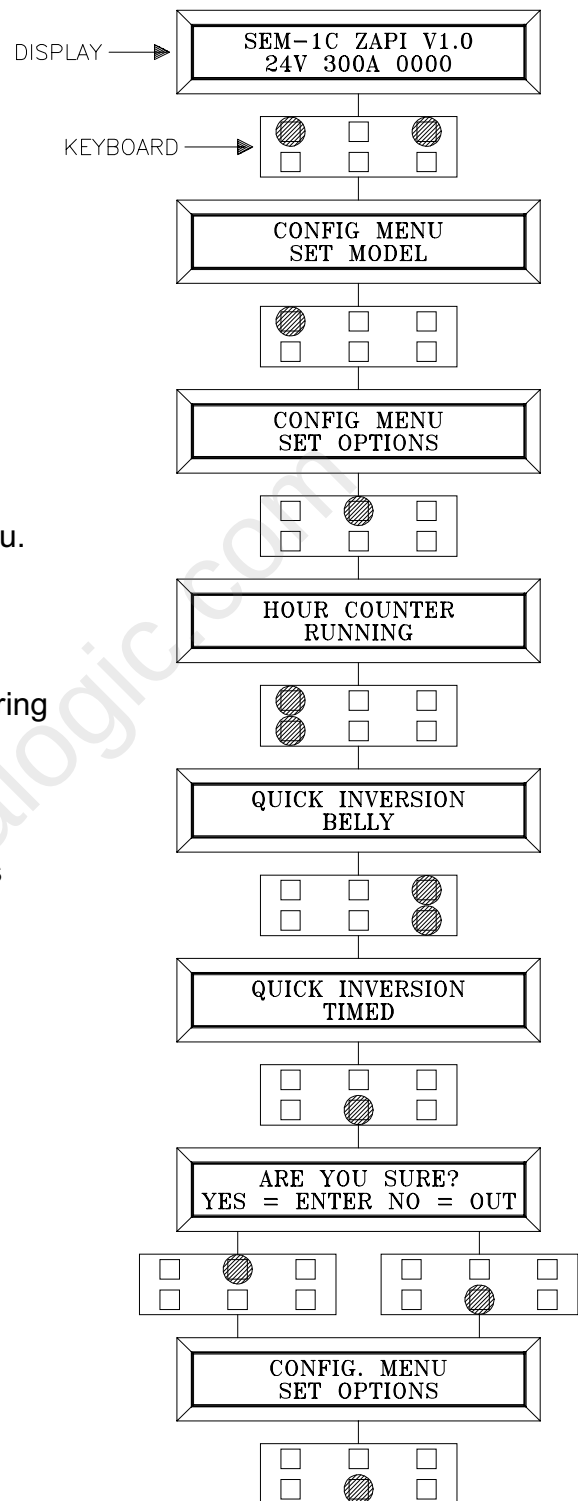

5.6 SEM-1C TRACTION STANDARD WIRING DIAGRAMS

[illegible]

Full Version Available

Caterpillar NPV20K Pallet Truck Service Manual (791201)

Caterpillar NPV20K Pallet Truck service manual, covers hydraulics, drive unit, wiring, brakes, and controls. Searchable PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/caterpillar-npv20k-pallet-truck-service-manual-791201/>