



INDEX

	Page
LEGEND	3
COLOUR CODES (Single Colours)	3
1 Introduction to the ZAPI-MOS family	4
2 General characteristics	5
2.1 Technical Specification	5
2.2 Control Units	5
2.2.a Microswitches	5
2.2.b Potentiometer	6
2.3 Safety & Protection Features	7
2.4 Direction Orientation	7
2.5 Operational Features	8
2.6 SEM-1C chopper diagnosis	9
2.7 Thermal Considerations	9
2.8 General Instructions and Precautions	10
3 Installation	11
3.1 Connection Cables	11
3.2 Contactors	11
3.3 Fuses	11
3.4 Description of SEM-1C Connectors.	12
3.5 Description of Power Connections	13
3.6 Mechanical Drawing & Dimensions	14
4 Programming & Adjustments using Digital Console	15
4.1 Adjustments via Console	15
4.2 Description of Console & Connection	15
4.3 Description of Standard Console Menu	16
5 SEM-1C: cabling and configuration	17
5.1 Power diagram	17
5.2 Connections	18
5.3 Description of Programmable Functions (Options)	19
5.4 Description of Parameters that may be Programmed	21
5.5 Table of Adjustments	23
5.6 SEM-1C Traction Standard Wiring Diagrams	25
5.7 Sequence for SEM-1C Traction Settings.	26
6 SEM-1C Diagnostics	27
6.1 Analysis of Alarms displayed on the Console	28
6.2 Tester Description of the Functions	31
6.3 Description of the Console SAVE Function	33
6.4 Description of Console RESTORE Function.	34
6.5 Description of Alarms Menu.	35
6.6 Description of Console PROGRAM VACC function.	36

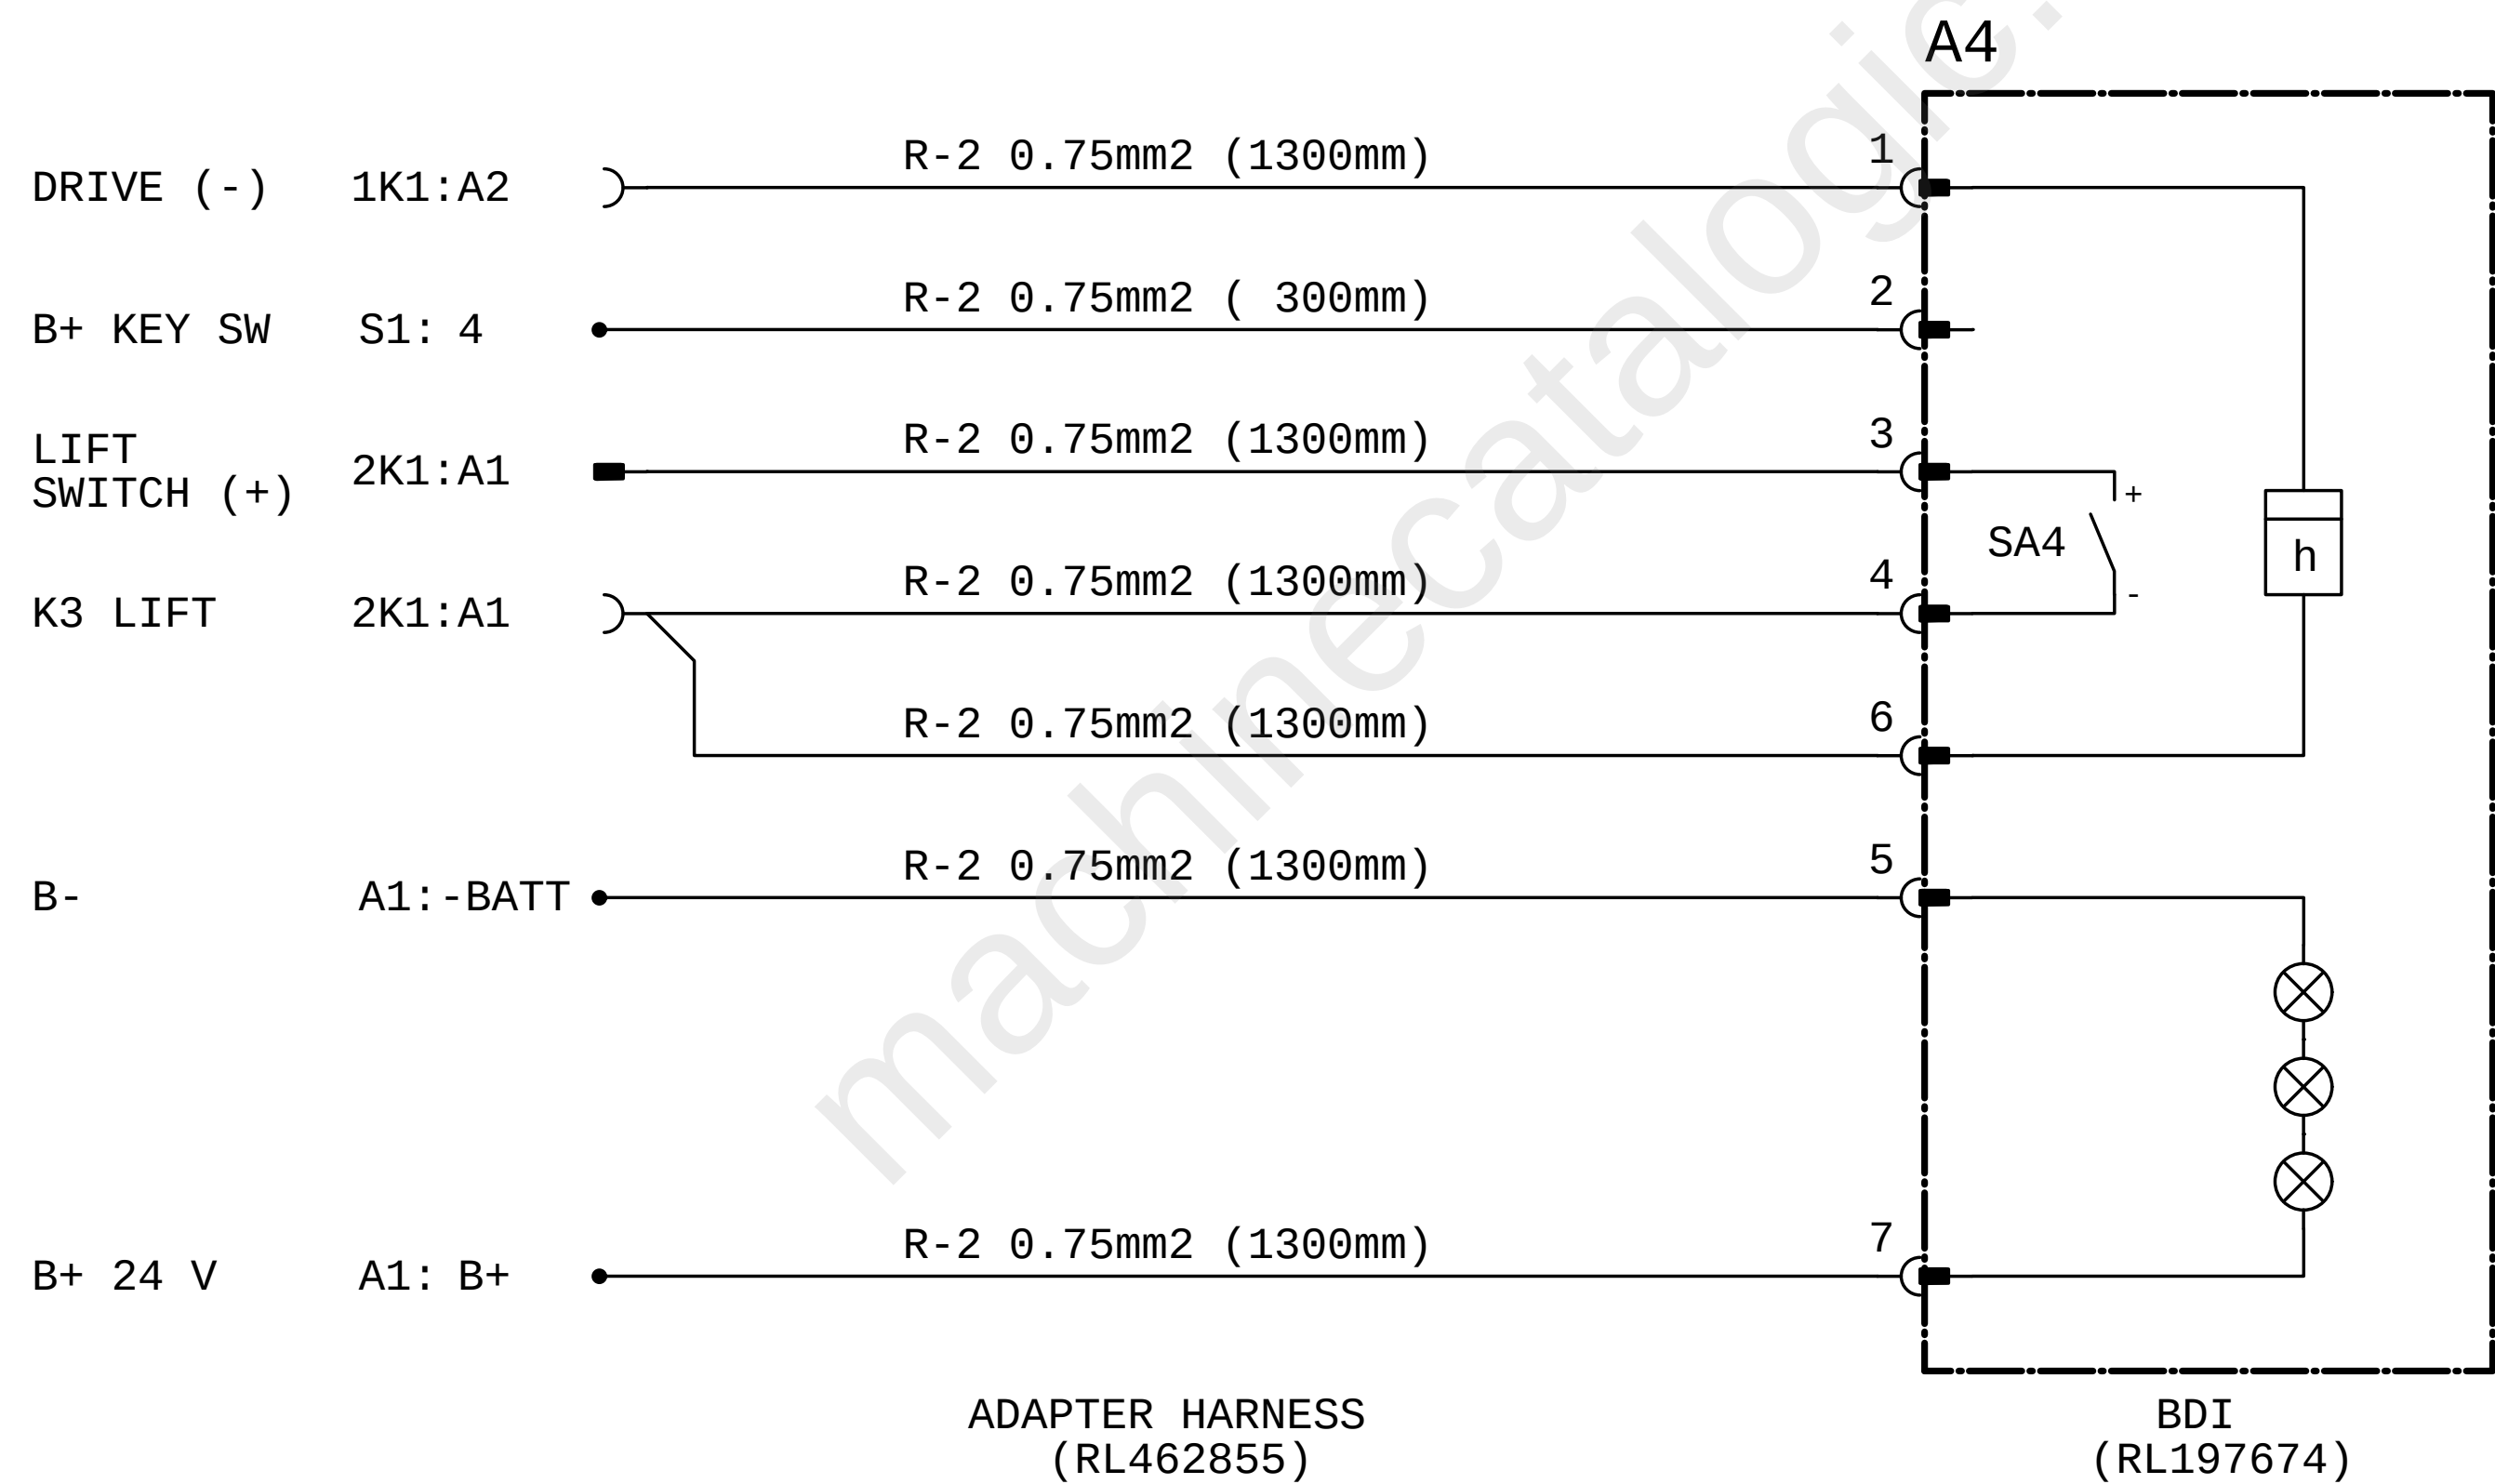



SA4
LIFT CUT-OFF WHEN THE
STATE OF DISCHARGE OF
THE BATTERY IS LOW.
(NOTE THE POLARITY!)

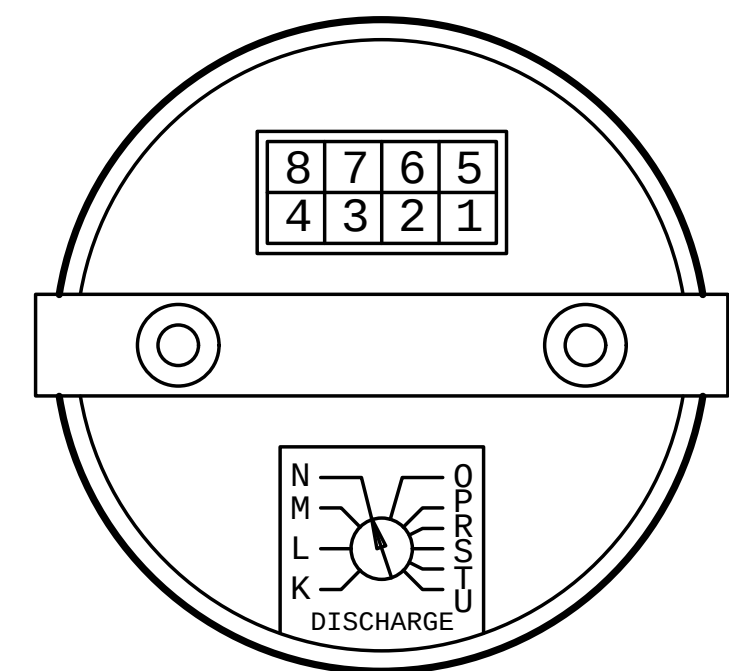

CONNECTIONS
& ADJUSTMENT

1 SPEED LIFT / 2 SPEED LOWER
OR
PROPORTIONAL LIFT / LOWER,
NOT BOTH IN SAME TRUCK

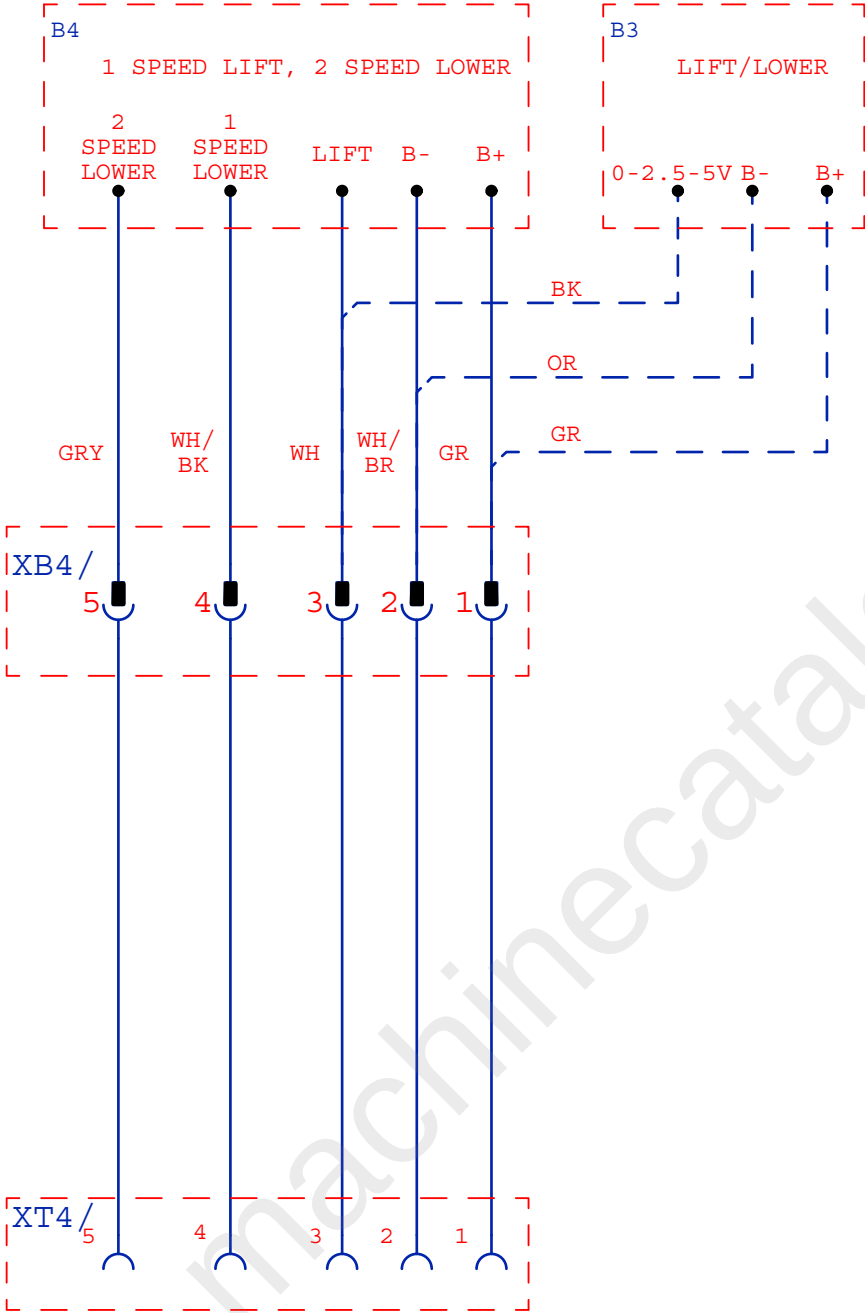

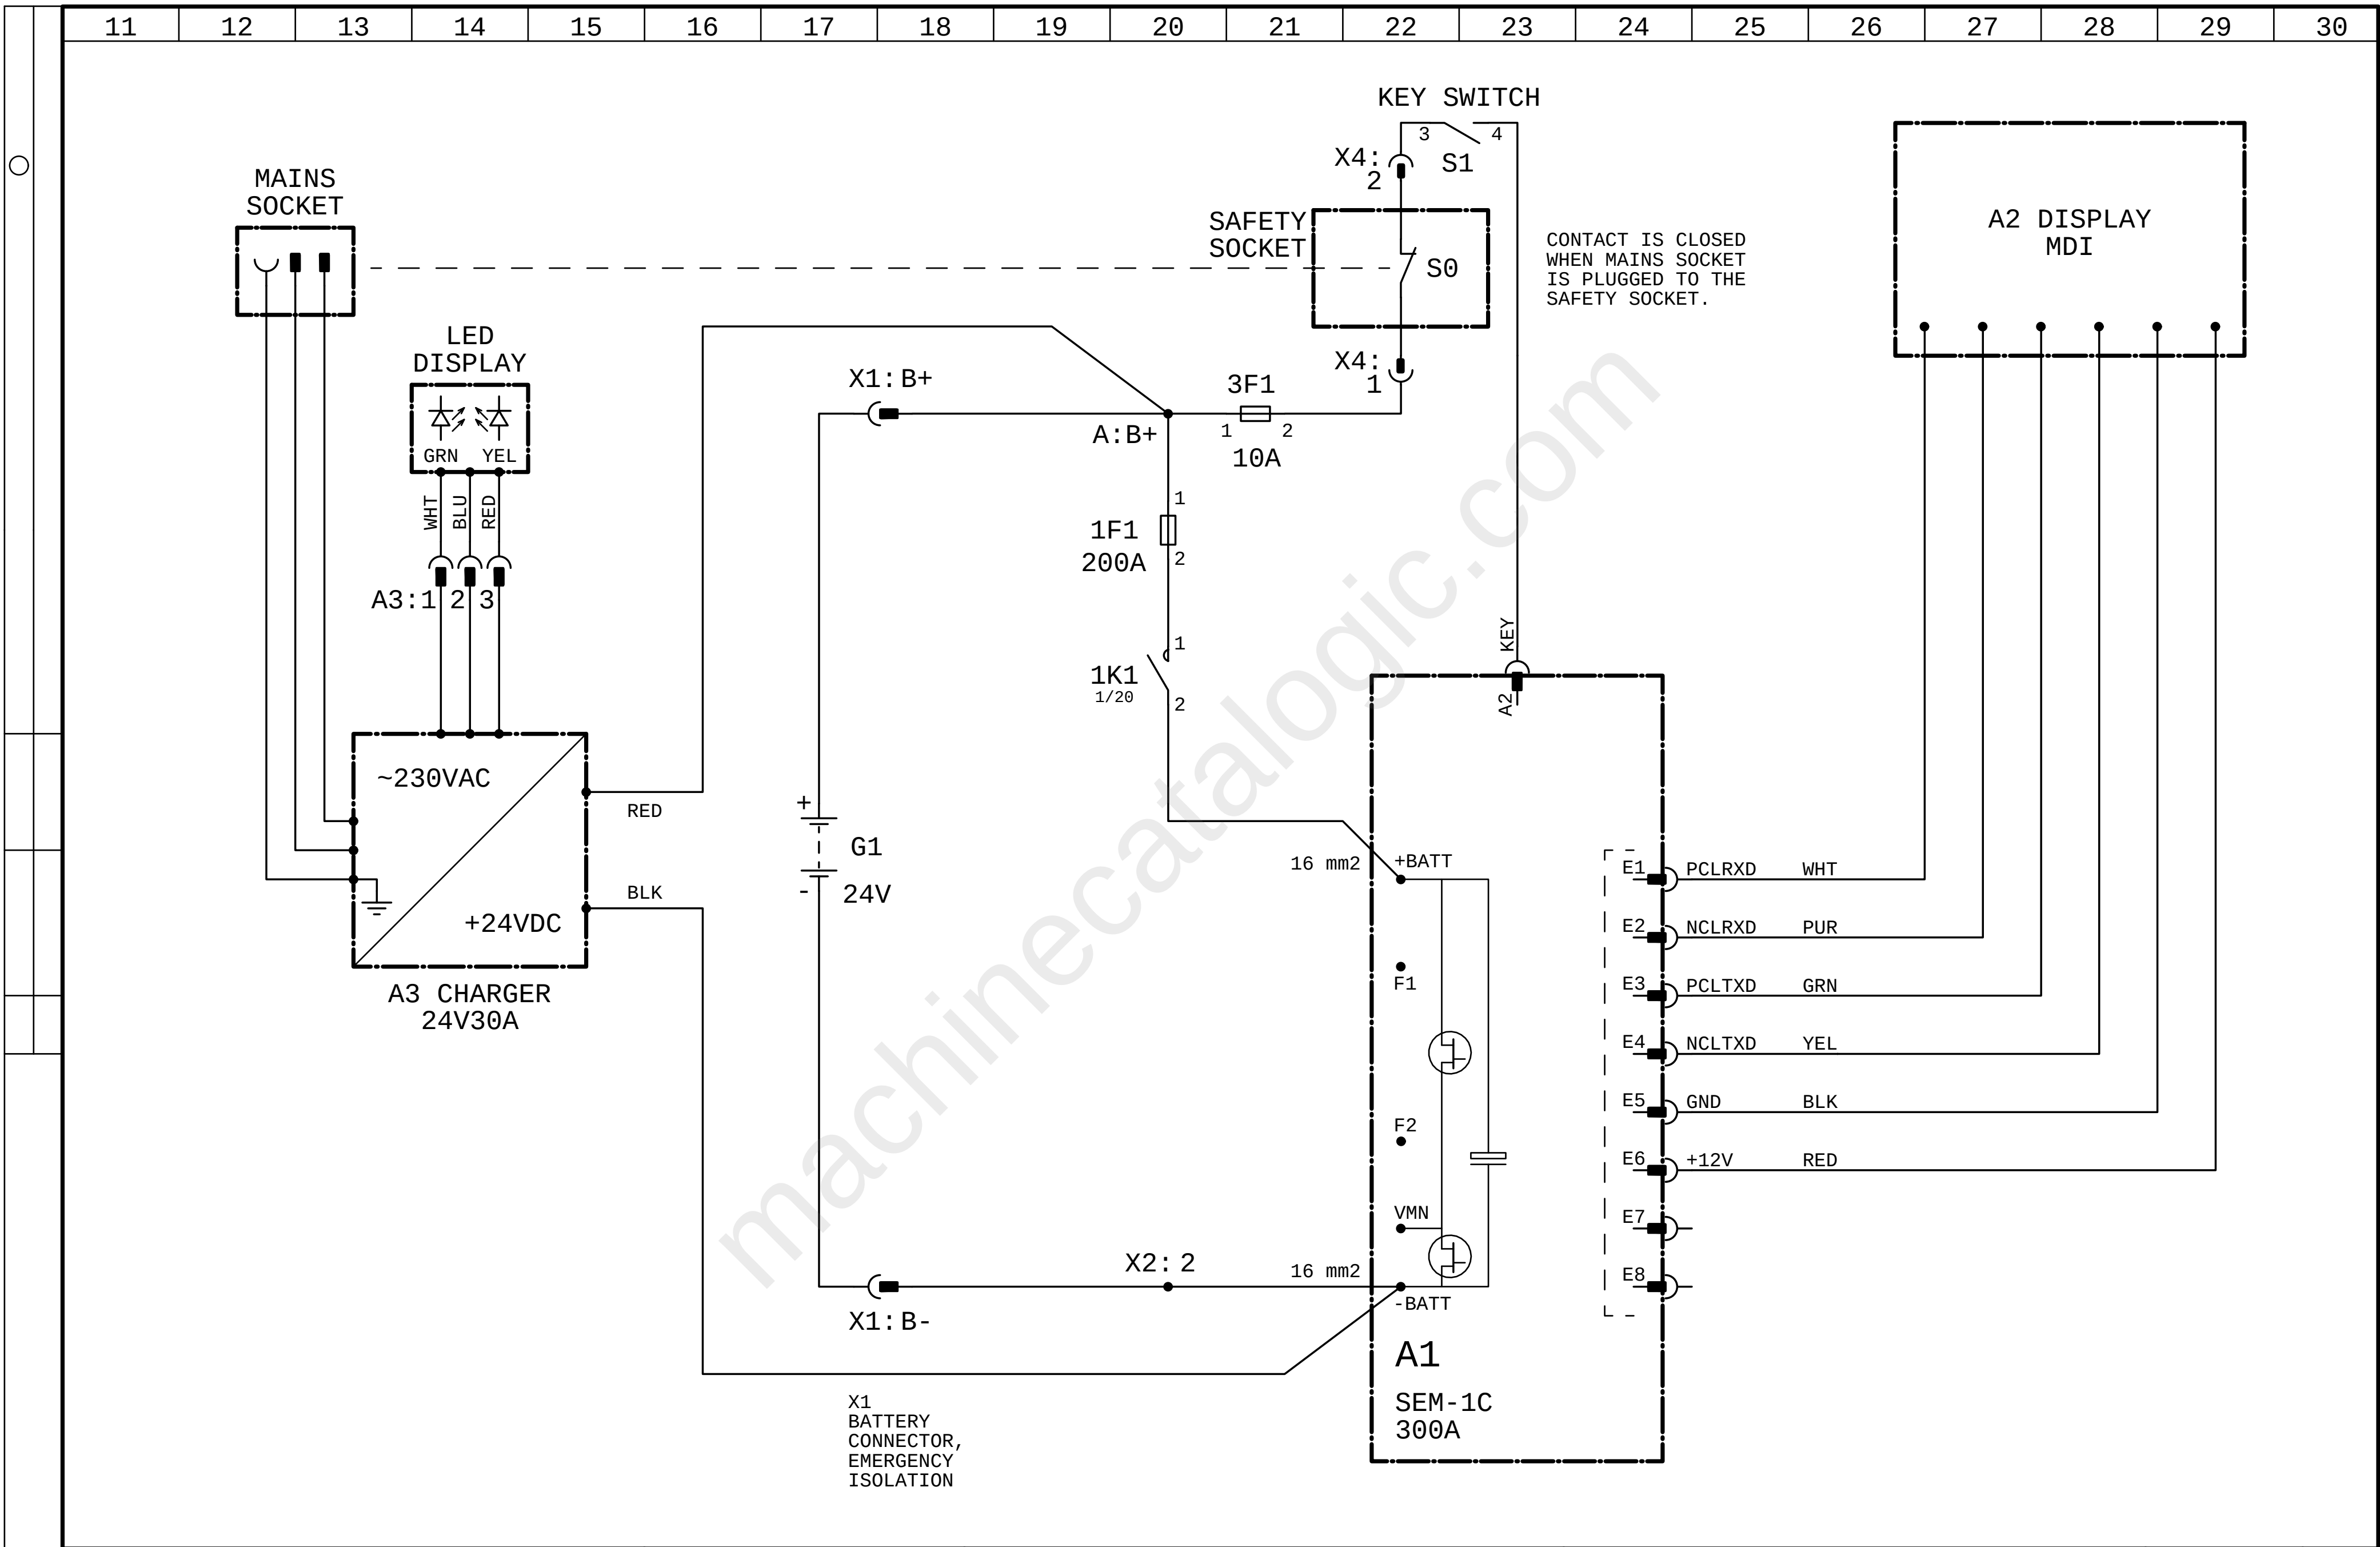

Full Version Available

Mitsubishi PBV20K Pallet Truck Service Manual (WHSM0026)

Mitsubishi PBV20K Pallet Truck service manual, covers drive unit, hydraulics, and wiring diagnostics in searchable PDF. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/mitsubishi-pbv20k-pallet-truck-service-manual-whsm0026/>