



VARAOSAT, ERSATZTEILE, RESERVDELAR, SPARE PARTS

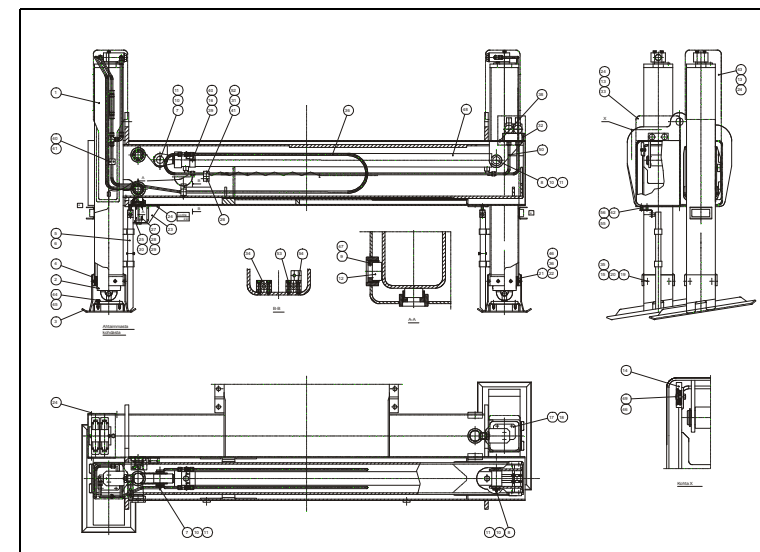

	G009908E		TUKIJALKA	STÜTZBEIN	STÖDBEN	OUTRIGGER	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
35	86013140	4	Ruuvi	Schraube	Skruv	Screw	
36	81100420	4	Ruuvi	Schraube	Skruv	Screw	
37	00004994	16	Mutteri	Mutter	Mutter	Nut	
38	B0475500	4	Suoja	Schutz	Skydd	Cover	
39	00000345	16	Ruuvi	Schraube	Skruv	Screw	
40	86011460	16	Ruuvi	Schraube	Skruv	Screw	
41	00009985	48	Ruuvi	Schraube	Skruv	Screw	
42	86011680	16	Ruuvi	Schraube	Skruv	Screw	
43	86017070	16	Aluslevy	Scheibe	Bricka	Washer	
44	86011450	16	Ruuvi	Schraube	Skruv	Screw	
45	86017060	16	Aluslevy	Scheibe	Bricka	Washer	
46	A0538610	16	Säätölevy	Regelungsplatte	Regleringsplatta	Regulating plate	
47	00004680	32	Ruuvi	Schraube	Skruv	Screw	
48	86016050	32	Mutteri	Mutter	Mutter	Nut	
49	86013150	8	Ruuvi	Schraube	Skruv	Screw	
50	86017040	40	Aluslevy	Scheibe	Bricka	Washer	
51	86013300	8	Ruuvi	Schraube	Skruv	Screw	
52	86013100	24	Ruuvi	Schraube	Skruv	Screw	

	G002549A		JALUSTA	DREHTURM	VRIDSTATIV	TURNTABLE	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
82	86040020	2	Voidenippa	Schmiernippel	Smörjnippel	Grease nipple	
83	A0534520	1	Kannatinkisko	Trägerleiste	Stödskena	Supporting rail	
84	00000722	4	Ruuvi	Schraube	Skruv	Screw	
85	A051883F	1	Kannatin	Träger	Stöd	Support	
87	A051883A	4	Kannatinkisko	Trägerleiste	Stödskena	Supporting rail	
88	A051884C	8	Holkki	Hülse	Hylsa	Sleeve	
89	00001911	8	Ruuvi	Schraube	Skruv	Screw	
91	C0284970	1	Suoja	Schutz	Skydd	Cover	
92	G0028270	1	Suoja	Schutz	Skydd	Cover	
93	00002209	8	Ruuvi	Schraube	Skruv	Screw	
94	00006823	8	Aluslevy	Scheibe	Bricka	Washer	

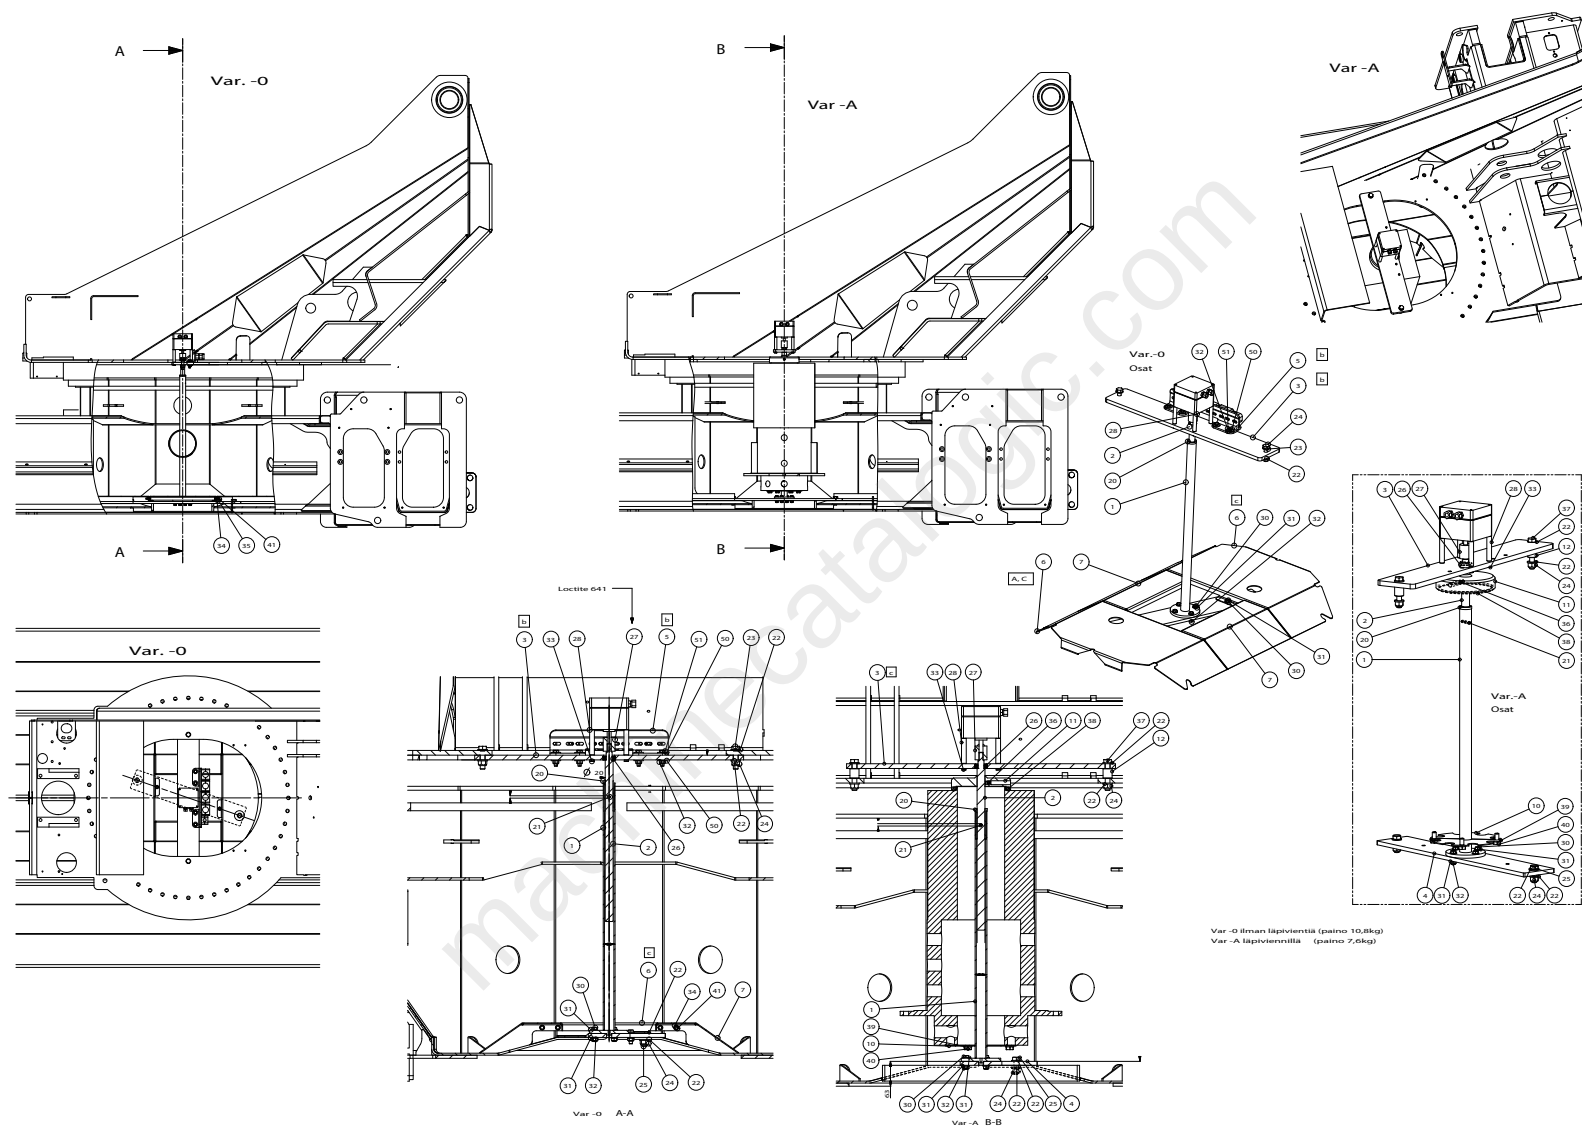

G010483Ac

PYÖRITYSANTURI


DREHUNGSgeber

VRIDSGIVARE

ROTATION SENSOR

	G006183A		VARSISTO	ARME	ARMARNA	BOOMS	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
301	A0589220	4	Vaijerin kiinnitys	Befestigung der Seil	Vajers fästning	Fastening of the wire	
302	A0589230	2	Kiristystanko	Stange	Stång	Rod	
303	A0589260	2	Kiristystanko	Stange	Stång	Rod	
304	86016090	8	Mutteri	Mutter	Mutter	Nut	
305	00000833	2	Ruuvi	Schraube	Skruv	Screw	
310	B047316D	2	Sisäänvetovaijeri	Inziehungsseil	Indragningsvajer	Retracting wire	
311	G006985B	2	Ulosvetovaijeri	Ausziehungsseil	Utdragningskedja	Extraction wire	
312	B0473500	2	Ohjain	Steuer	Styrning	Steering	
313	86011200	16	Ruuvi	Schraube	Skruv	Screw	
314	A0587680	16	Mutteri	Mutter	Mutter	Nut	
315	B0473850	2	Ohjain	Steuer	Styrning	Steering	
316	86016330	8	Mutteri	Mutter	Mutter	Nut	
320	A0589410	2	Taittopyörä	Falzenrad	Brytskiva	Pulley	
321	A0589430	4	Kiinnityslaippa	Befestigungs- flansche	Fästningsfläns	Fastening flange	
322	A0589440	4	Tappi	Zapfen	Tapp	Pin	
323	B0473280	2	Hyppyeste	Hinderung	Hinder	Barrier	

	D0181930		KORIVARREN NIVEL	GELENK FÜR KORBARM	KORGARMENS LED	CAGE BOOM ELBOW	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
22	00006605	2	Laakeriholkki	Laufbuchse	Lagerbussning	Bushing	
23	00006606	3	Laakeriholkki	Laufbuchse	Lagerbussning	Bushing	
24	A0555580	2	Laakeriholkki	Laufbuchse	Lagerbussning	Bushing	
25	86040120	4	Voidenippa	Schmiernippel	Smörjnippel	Grease nipple	
26	A0584880	2	Soviterengas	Passring	Passring	Fitting ring	
27	A0584890	4	Soviterengas	Passring	Passring	Fitting ring	
28	A0539810	1	Hammaspyörä	Zahnrad	Kugghjul	Gear	
29	00002837	6	Ruuvi	Schraube	Skruv	Screw	
32	86011460	20	Ruuvi	Schraube	Skruv	Screw	

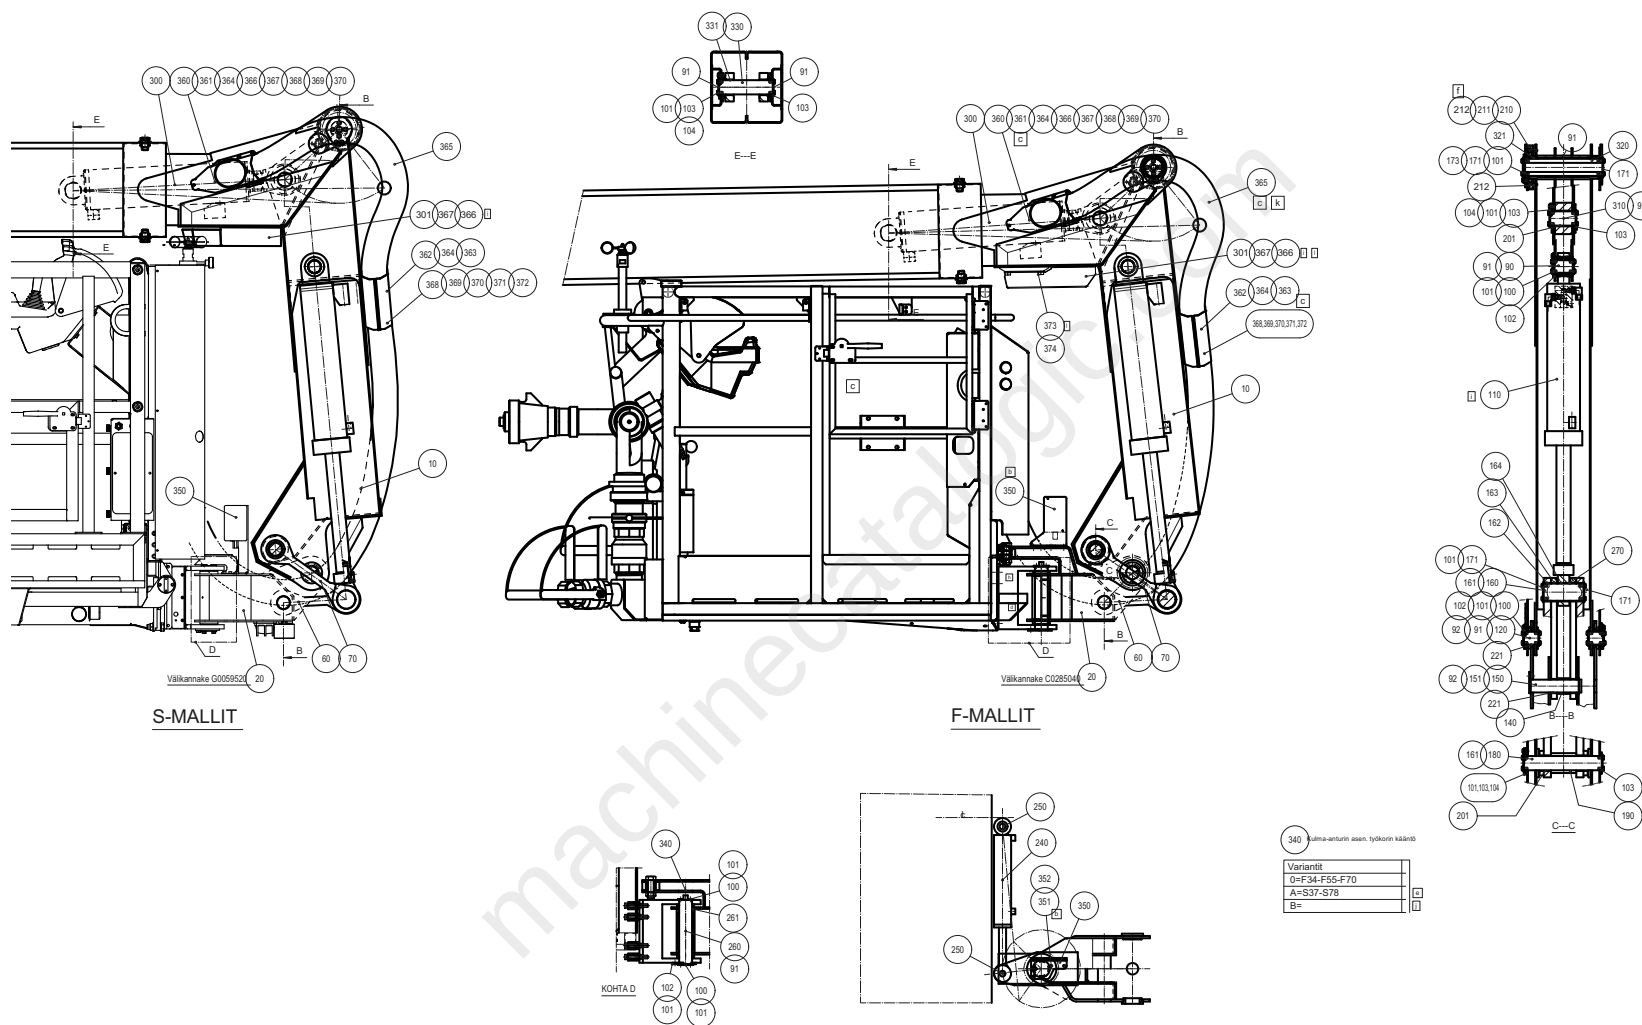

D018441AI

VAKAAJALAITE

STABILISIERUNGSVORRICHTUNG

STABILISATORANORDNUNG

LEVELLING DEVICE

	G0086730		KAITEET, ASENNUS	LEHNE, MONTAGE	HANDTAG, MONTERING	HAND RAIL, MOUNTING	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
1	G0086760	1	Työkorin kaiteet	Arbeitskorblehne	Arbetkorgens handtag	Working cage hand rail	
4	G0028320	2	Työkorin ovi	Tür	Dörr	Door	
6	G0028340	2	Lukon vaste	Gegenteil der Schloss	Låsens motstycke	Counter part of the lock	
8	G0084350	1	Letkukotelo	Schlauchdose	Slangdosa	Hose container	
9	G0084360	1	Letkukotelo	Schlauchdose	Slangdosa	Hose container	
20	86032670	4	Jousisarana	Federspring	Fjäderspring	Spring	
21	86032070	2	Ovilukko	Schloss	Lås	Lock	
22	00006744	14	Mutteri	Mutter	Mutter	Nut	
23	86017050	32	Aluslevy	Scheibe	Bricka	Washer	
24	00003669	14	Ruuvi	Schraube	Skruv	Screw	
25	00009761	8	Ruuvi	Schraube	Skruv	Screw	
26	86017030	8	Aluslevy	Scheibe	Bricka	Washer	
27	00004974	54	Vetoniitti	Pop-Niet	Pop-nit	Pop-rivet	
28	86011140	4	Ruuvi	Schraube	Skruv	Screw	
29	86011060	4	Ruuvi	Schraube	Skruv	Screw	

	D016142D		VARAKÄYTTÖ HATZ	HATZ BETRIEB	HATZ DRIFT	HATZ DRIVE	
Viite Pos. Det. Ref.	Osa n:o Teil Nr. Del nr Part No.	Kpl St. Antal Qty	Nimitys	Benennung	Benämning	Description	Huom. Anmerkung Anmärkn. Notes
1	00000665	1	Dieselmoottori	Dieselmotor	Dieselmotor	Diesel engine	
10	B0406350	1	Alusta	Motorbasis	Motorbasis	Motor base	
11	B0406360	1	Suoja	Schutz	Skydd	Cover	
30	C0281380	1	Ohjauskeskus	Steuerungszentrum	Styrningscentral	Steering centre	
40	C0281400	1	Ohjauskytkentä	Koppelung	Koppling	Coupling	
45	A0567090	1	Lisäohjauskytkentä	Zusatzkoppelung	Extra koppling	Additional coupling	
50	C026900A	1	Polttoainejärjestelmä	Kraftstoffsystem	Bränslesystem	Fuel system	
60	G0087310	1	Hydraulikaavio	Hydraulschema	Hydraulschema	Hydraulic scheme	
70	A0506110	1	Suoja	Schutz	Skydd	Cover	

Full Version Available

Bronto S 46 XDT Aerial Work Platform Parts Manual

Bronto S 46 XDT aerial work platform parts manual, parts lists, exploded views and assemblies in PDF. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/bronto-s-46-xdt-aerial-work-platform-parts-manual/>

Book No: 56304-020 · File Pages: 70 · File Count: 1 · File Language: English, German