

Manufacturer's Specifications

Foreword

Index

1	Safety Instructions	3
1.1	General	3
1.2	Intended Use	3
1.3	Operating Conditions and Computed Design of the Crane	5
1.3.1	General	5
1.3.2	Workplace Ergonomics	7
1.3.3	Load and Utilisation of the Crane	7
1.3.4	Required Ambient Conditions	9
1.3.5	Service Life	11
1.3.6	Standards and Calculation Regulations	11
1.3.7	Dangers to Air Traffic	13
1.4	Safety Regulations	15
1.4.1	Organisational Measures	15
1.4.2	Selection and Qualifications of Personnel	17
1.4.3	Particular Hazards	19
1.4.3.1	Electrical Energy	19
1.4.3.2	Gas, Dust, Steam, Smoke	21
1.4.4	Combination of Hazards with Combined Operation of Two or More Cranes	27
1.4.4.1	Operating Areas of Several Cranes Overlap	27
1.4.4.2	Raising a Load Using More than One Crane	29
1.4.5	Before Operating the Crane	31
1.4.6	During Operation of the Crane	33
1.4.7	After Crane Operation	41
1.4.8	When Mounting and Dismantling Crane Components	43
1.5	Hand Signals	47
1.5.1	General Hand Signals	49
1.5.2	Hand Signals for Working Movements	51
1.5.3	Hand Signals for Driving Movements	53
1.6	Power Failure	55
2	Structure of the Crawler-mounted Crane	3
2.1	Overview	3
2.2	Superstructure	5
2.3	Undercarriage	7
2.4	Boom Variants	9
2.5	Technical Data	19
2.5.1	Drive Motor	19
2.5.2	Pump Distributor Gear	19
2.5.3	Hydraulic Pumps	19
2.5.4	Slew Gear	21
2.5.5	Winches	21
2.5.6	Safety Equipment	23
2.5.7	Heater	23

7	Slewing and Braking the Superstructure	3
7.1	General	3
7.1.1	Speed Control	3
7.2	Slewing	5
7.2.1	Slewing Against Increased Resistance	5
7.3	Braking the Superstructure	7
8	Operating the Safety Equipment	3
8.1	General	3
8.2	Electronic Crane Information System (PDC)	5
8.2.1	General	5
8.2.2	Controls and Displays	11
8.2.3	Monitor (LCD Display)	13
8.2.4	Description of the Screen Displays and Function Keys	15
8.3	Operating the Electronic Crane Information System (PDC)	37
8.3.1	Switching On	37
8.3.2	Language Selection	37
8.3.3	Entering the Operating Mode	39
8.3.3.1	Direct Operating Mode Selection – Entering the DS Code	41
8.3.3.2	Menu-prompted Operating Mode Selection	45
8.3.4	Setting the Configuration Programs for Crane Assembly	53
8.3.4.1	Configuration Program “RG 0 – Assembling”	55
8.3.4.2	Configuration Program “RG 0 Lower Limit Switch Bridging”	59
8.3.4.3	Configuration Program “SMAB1” without Track Frame	61
8.3.4.4	Configuration Program “SMAB2” with Track Frame	63
8.3.4.5	Configuration Program “SMMA2” with Track Frames	65
8.3.4.6	Erection Operation	67
8.3.5	Entering the Reeving Number	69
8.3.6	Synchronous Display	71
8.3.6.1	Switching On the Synchronous Display	71
8.3.6.2	Working with the Synchronous Display	73
8.3.6.3	Monitoring the Counter Status	73
8.3.7	Entering the Load on the 2nd Hook (Two-hook Operation)	75
8.3.8	Load Monitoring Assembly	79
8.3.9	Tilt Display	81
8.3.10	Relative Working Radius	83
8.3.11	Troubleshooting	87
8.4	Bridging the Load Limit Device	95
8.4.1	Bridging the Shut-Off Function for Movements Which Reduce the Load Moment	95
8.4.2	Bridging the Shut-Off Function for all Movements	97
8.5	Limit Switches for Switching Off Various Crane Functions	99
8.5.1	General	99
8.5.2	Functions of the Limit Switches	101

9	Working with the Crane Equipment	3
9.1	Simultaneous Crane Movements	3
9.2	Operating Hoist 1 (H1)	5
9.2.1	General	5
9.2.2	Preparing for Operation	5
9.2.3	Operation at Normal Speed	7
9.2.4	Operation at High Speed	9
9.3	Operating Hoist 2 (H2 = OE) (OE = optional equipment)	11
9.3.1	General	11
9.3.2	Preparing for Operation	11
9.3.3	Operation at Normal Speed	13
9.3.4	Operation at High Speed	15
9.4	Crane Operation with Double Hook Block, Hoist 1 and Hoist 2 in Combined Operation	17
9.4.1	Preparing for Operation	17
9.4.2	Operation at Normal Speed	19
9.4.3	Operation at High Speed	21
9.5	Operating the Derricking Gear (E)	23
9.5.1	General	23
9.5.2	Operating the Derricking Gear (E) when Erecting and Lowering a Boom Combination	25
9.5.2.1	Operation at Normal Speed	25
9.5.2.2	Operation at High Speed	27
9.5.2.3	Simultaneous Operation of Derricking Gear (E) and Luffing Gear 1 (W1)	29
9.5.2.4	Simultaneous Operation of Derricking Gear (E) and Luffing Gear 2 (W2)	33
9.5.3	Operating the Derricking Gear (E) during Crane Operation	37
9.5.3.1	Operation at Normal Speed	37
9.5.3.2	Operation at High Speed	39
9.5.3.3	Simultaneous Operation of Derricking Gear (E) and Hoist 1 (H1)	41
9.5.3.4	Simultaneous Operation of Derricking Gear (E) and Hoist 2 (H2)	45
9.5.4	Operating Range of the Main Boom	49
9.6	Operating Luffing Gear 1 (W1 = OE)	51
9.6.1	General	51
9.6.2	Operating Luffing Gear 1 (W1) when Erecting and Lowering a Boom Combination	53
9.6.2.1	Operation at Normal Speed	53
9.6.2.2	Operation at High Speed	55
9.6.2.3	Simultaneous Operation of Luffing Gear 1 (W1) and Luffing Gear 2 (W2)	57
9.6.3	Operating Luffing Gear 1 (W1) during Crane Operation	61
9.6.3.1	Simultaneous Operation of Luffing Gear 1 (W1) and Hoist 1 (H1)	61
9.6.3.2	Simultaneous Operation of Luffing Gear 1 (W1) and Hoist 2 (H2)	65
9.6.3.3	Simultaneous Operation of Luffing Gear 1 (W1) and Hoist 3 (H3)	69
9.6.4	Operating Range of the Fly Jib	71

9.7	Operating Luffing Gear 2 (W2 = OE)	73
9.7.1	General	73
9.7.2	Operating Luffing Gear 2 (W2) during Crane Operation	75
9.7.2.1	Simultaneous Operation of Luffing Gear 2 (W2) and Hoist 1 (H1)	75
9.7.3	Operating Range of the Fly Jib	79
9.8	Operating Luffing Gear 2 (W2 = OE)	81
9.8.1	General	81
9.8.2	Operating Luffing Gear 2 (W2) during Crane Operation	83
9.8.2.1	Simultaneous Operation of Luffing Gear 2 (W2) and Hoist 1 (H1)	83
9.8.3	Operating Range of the Main Boom	87
9.9	Operating the Reeving Winch	89
9.9.1	General	89
9.9.2	Operation	89
9.10	Working with the Superlift	91
9.10.1	Description of the Superlift	91
9.10.2	Operating Principle	93
9.10.3	Safety Instructions for Working with the Superlift	95
9.10.4	Operating the Crane without a Superlift Counterweight	99
9.10.5	Operating the Crane with the Superlift Counterweight	101
9.10.5.1	Preparations for Raising the Load	101
9.10.5.3	Setting Down the Load	109
9.11	Working Instructions	111
9.11.1	General	111
9.11.2	Positioning the Crane	113
9.12	Wind Speeds - Dynamic Pressure	115
9.12.1	General	115
9.12.2	Crane under Load (Crane Operation)	117
9.12.3	Parking the Crane	121
9.12.4	Lowering the Boom System	125
10	-	
11	Operating the Heating and Ventilation	3
11.1	General	3
11.2	Heating Operation	7
11.2.1	Setting the Timer	7
11.2.2	Heating Operation without Preselection with the Ignition "Off" ...	9
11.2.3	Heating Operation without Preselection with the Ignition "ON" ...	11
11.2.4	Heating Operation with Preselection	13
11.2.5	Safety Equipment	17
12	-	
13	-	

14	Radio Remote Control	3
14.1	General	3
14.2	Preparations for Assembly using the Radio Remote Control	3
14.3	Table Outline of the Assembly Procedures	11
14.3.1	Assembly Procedures on the Superstructure	11
14.3.2	Assembly Procedures on the Chassis	11
14.3.3	Assembly Procedures on the Counterweight Dolly (GW)	13
14.3.4	Assembly Procedures on the Jack-Up System	13
14.4	Assembly Procedures in Case of Failure on the Radio of Remote Control	15
14.5	Table Outline of the Assembly Procedures in Case of Remote Control Failure	17
14.5.1	Assembly Procedures on the Superstructure	17
14.5.2	Assembly Procedures on the Chassis (UW)	17
14.5.3	Assembly Procedures on the Counterweight Dolly (GW)	19
14.5.4	Assembly Procedures on the Jack-Up System	19

Manufacturer's Specifications

The operating, lubricating and maintenance instructions and mounting manual included here are valid for the mobile crane detailed below.

A **quality management system** as per DIN EN ISO 9001 forms the basis of this crane's construction and its manufacture.

Crane classification (as per DIN 15018) (as per DIN 15001-2)	Mobile crane
Crane type	CC 1800-1
Construction number	55 108
Maximum load	300 t
Manufacturer	Demag Mobile Cranes

Full Version Available

Demag CC 1800-1 Crawler Crane Operator Manual

Demag CC 1800-1 crawler crane operator manual covering controls, safe operation and setup. 13 PDF files, 466 pages in English. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/demag-cc-1800-1-crawler-crane-operator-manual/>

File Pages: 466 · File Count: 13 · File Language: English