

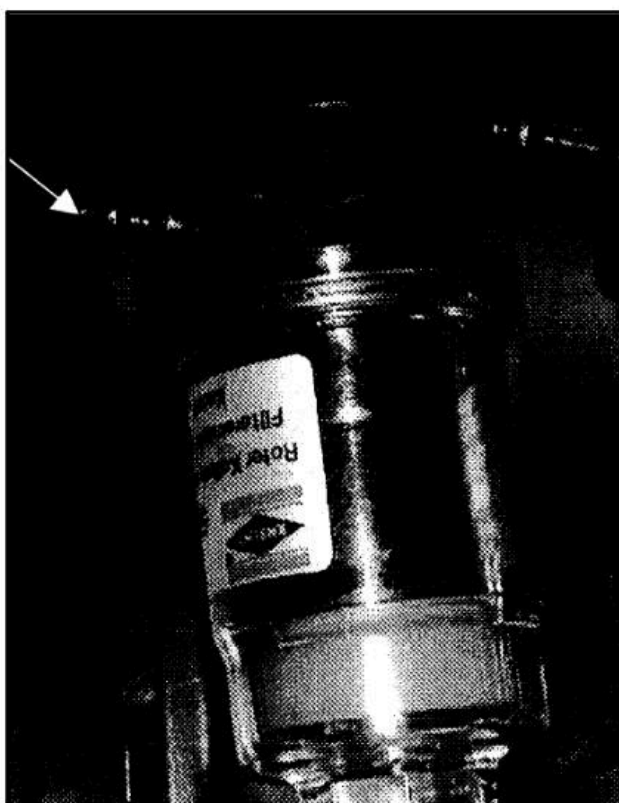
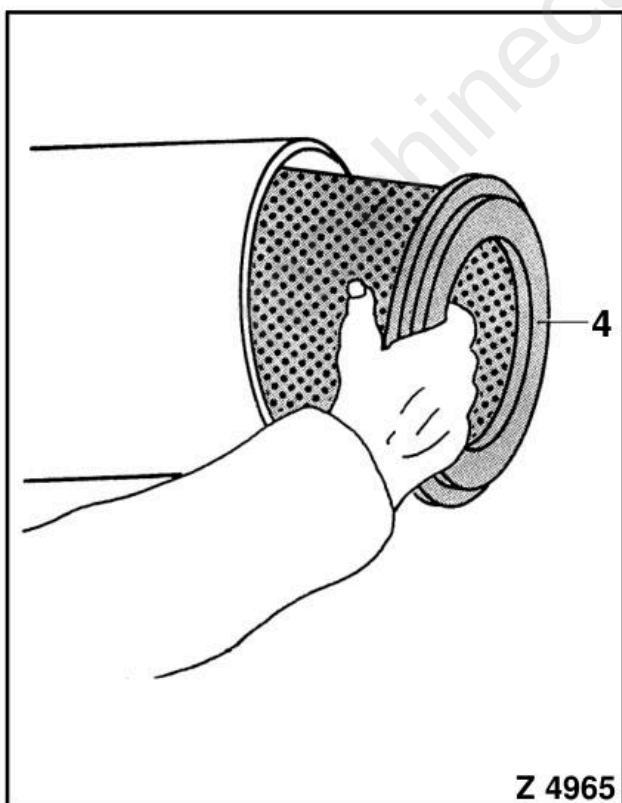


	Foreword	1
1	Safety Instructions	3
1.1	General	3
1.2	Personnel Selection and Qualifications	5
1.3	Particular Hazards	5
1.3.1	Risks from Crushing / Shearing	5
1.3.2	Risks from Entanglement and Dragging	5
1.3.3	Danger Due to Slipping, Tripping, Falling	5
1.3.4	Risks from Thermal Influences	7
1.3.5	Gas, Dust, Smoke	7
1.3.6	Risks from Residual Energy in the Hydraulic System	7
1.4	Before Commencing Lubrication and Maintenance Work	9
1.5	Carrying Out Lubrication and Maintenance Work	13
1.6	Repair Work	17
2	Oils, lubricants and capacities	3
4	Lubrication and Maintenance Schedule	3
4.1	Initial Lubrication and Maintenance	3
4.2	Regular, Routine Lubrication and Maintenance	3
4.3	Tips on Maintenance of the Crane	5
4.4	Measures for Maintaining the Crane	5
4.5	Maintenance List	9
5	Drive	3
5.1	Engine	3
5.2	Pump Distributor Gear – Checking the Oil Level	5
5.3	Pump Distributor Gear – Changing the Oil	7
5.4	Checking the Pump Distributor Gear for Leaks	7
5.5	Pump Distributor Gear – Checking the External Screw Connections	9
6	Roller bearing slewing rim	3
6.1	Lubricating the Slew Ring Connection	3
6.2	Lubricating the Ring Gear	5
6.3	Checking the Screws of the Slewing Rim	7
6.3.1	General	7
6.3.2	Checking the Torque of the Screws	7

Item	Task	Fuels	Interval (operating hours)															
			1*	2*	3*	50	100	150	200	250	500	1000	1500	2000	3000	4*	5*	6*
12.14	Outrigger Cylinder Fly Jib																x	
12.14.1	Outrigger Cylinders Fly Jib – Checking for Leaks																x	
12.14.2	Outrigger Cylinders Fly Jib – Checking the Oil Pressure																x	
12.14.3	Outrigger Cylinders Fly Jib – Checking the Gas Pressure																x	
12.14.4	Outrigger cylinders fly jib – correction of the oil and gas pressure and filling the outrigger cylinder																x	
13	Heating and Air conditioning																	
13.1	Heating – check function				x													
13.2	Checking the Water Level		x															
13.3	Replacing the Heat Exchanger																x	
13.4	Air Conditioning																	
13.4.1	Air conditioning equipment – check function				x													
13.4.2	Make visual inspection of air-conditioning				x													
13.4.3	Air conditioning equipment – have checked in garage																	
14	Electrical System																	
14.1	Checking the lighting system		x															
14.2	Checking the limit switches																x	
14.2.1	Lower limit switch – function test					x												
14.2.2	Hoist limit switch – function test		x															
14.3	Winches – checking the slip ring contacts				x													
14.4	Precautionary Measures Against Cable Fires		x														x	
1* – daily before commencing work 2* – weekly 3* – monthly 4* – at least once a year 5* – as required, – for main boom and fly jib components as well as SL mast components before each erecting procedure 6* – With regard to this maintenance interval, observe also the cautionary notes in section 11.9																		

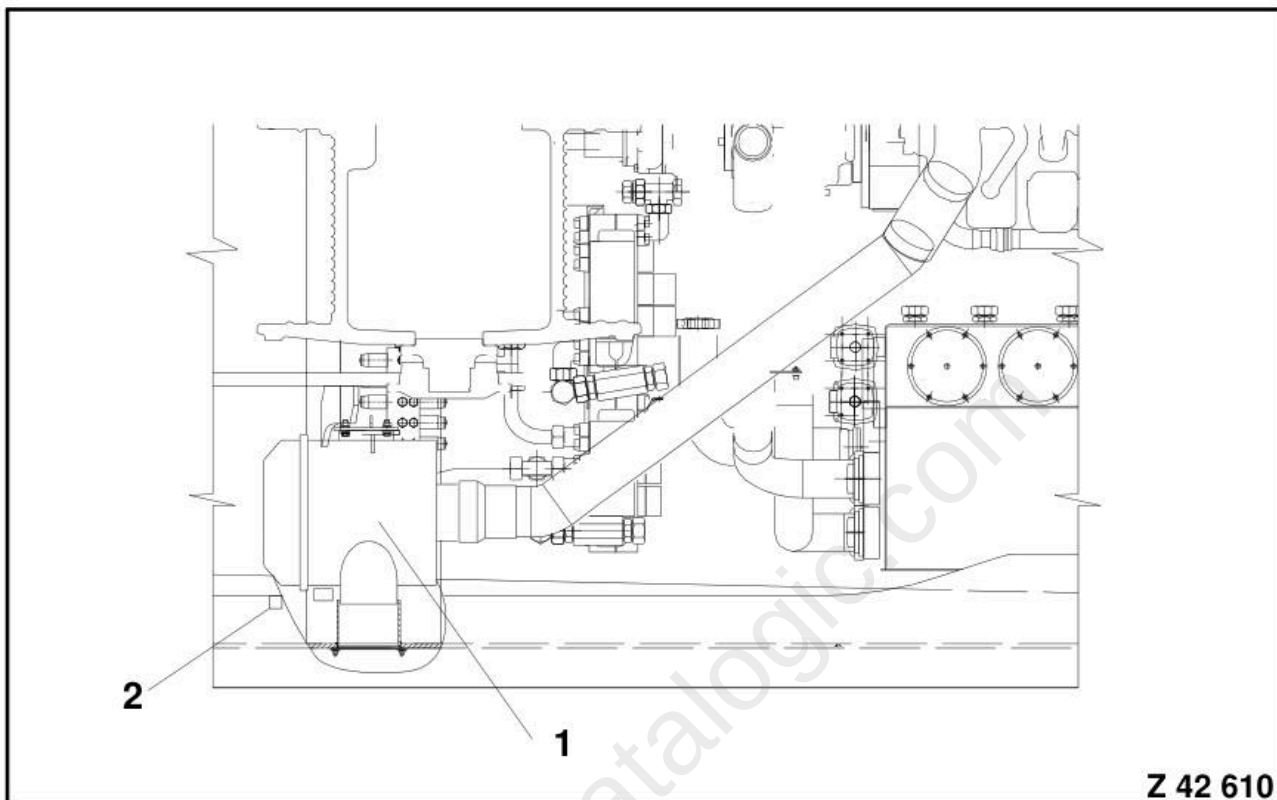

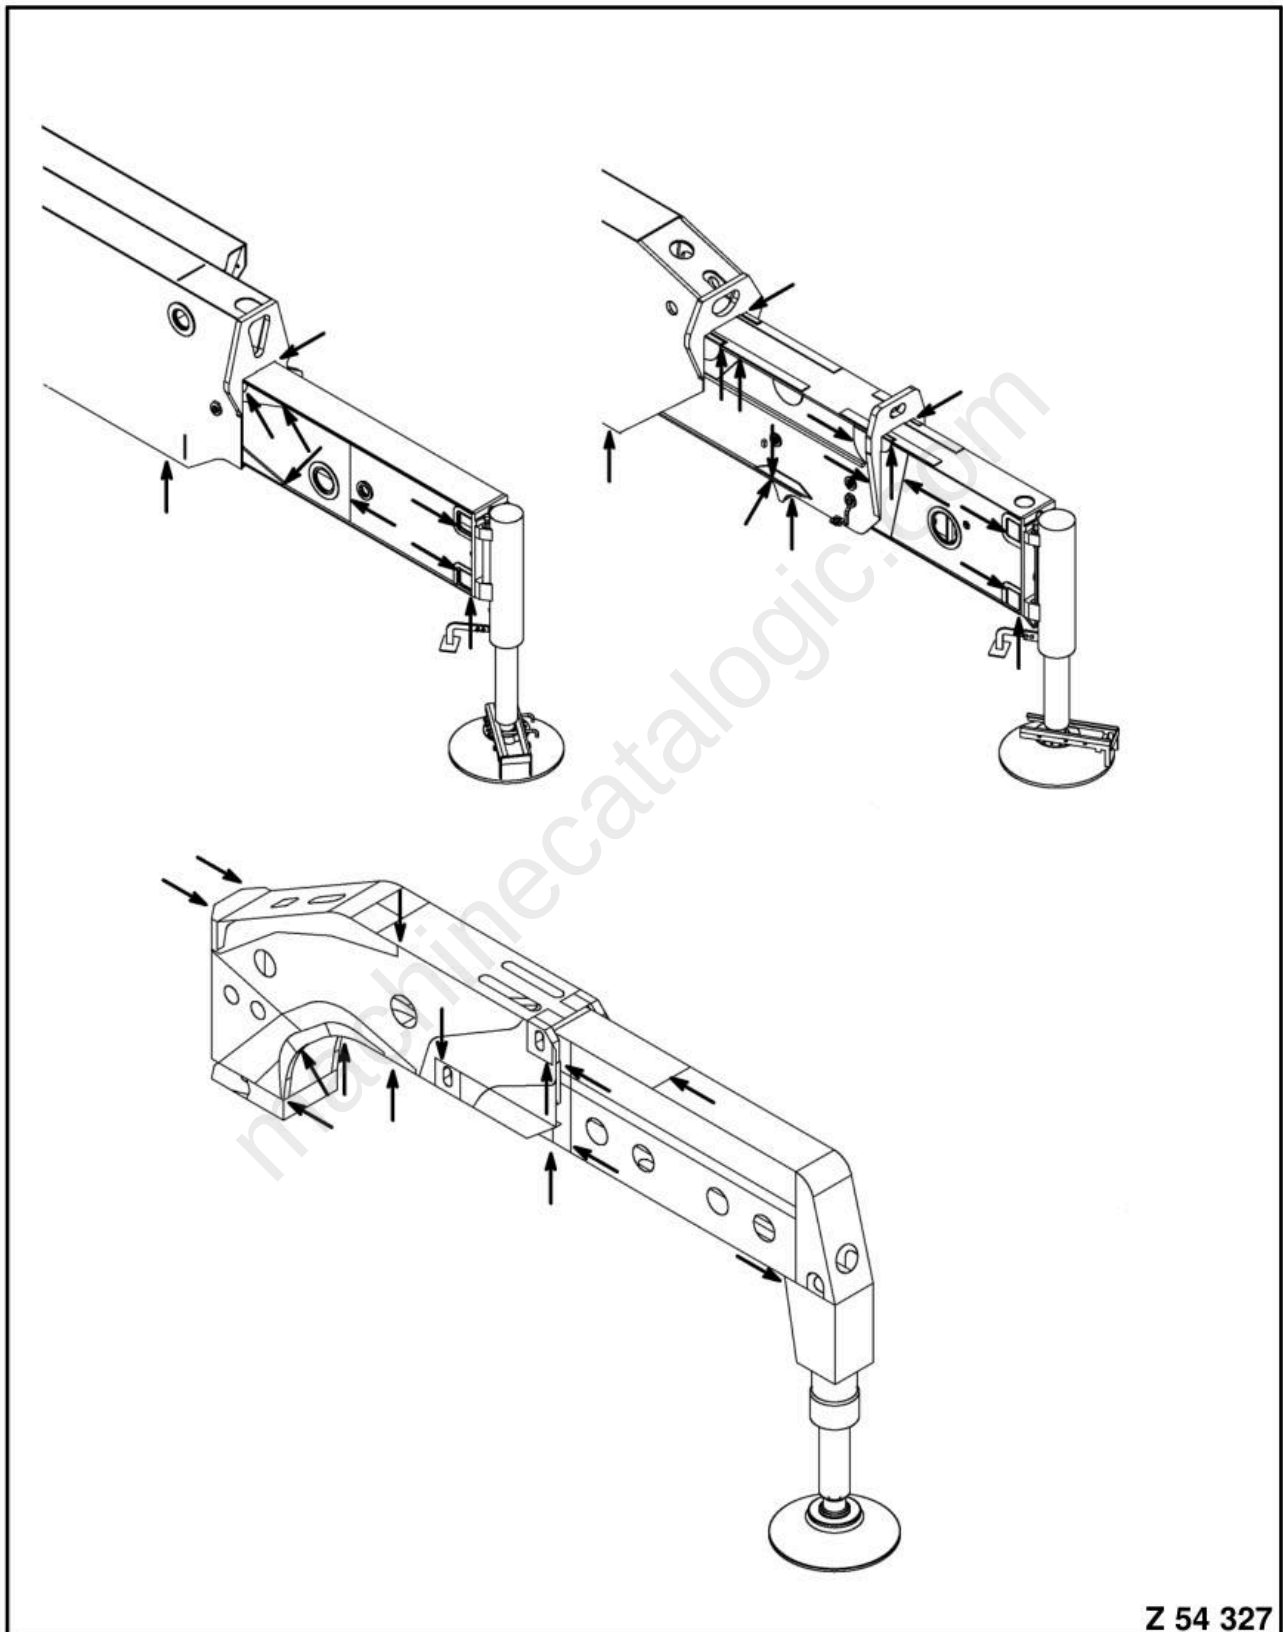

Full Version Available

Demag CC 2500-1 Crawler Crane Maintenance Manual

Demag CC 2500-1 crawler crane maintenance manual covering intervals, lubrication, fluids, filters and inspections. 2 PDF files, 616 pages.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/demag-cc-2500-1-crawler-crane-maintenance-manual/>

Book No: 059-2000-084 · File Pages: 616 · File Count: 2 · File Language: English