



GROVE[®]
CRANE

A GROVE WORLDWIDE COMPANY

**PARTS AND
INSTALLATION
MANUAL**

**CM20
LMI SYSTEM**

9-333-102682

TABLE OF CONTENTS

CM20 - LMI SYSTEM

3RD WRAP LIMIT INSTALLATION - AUX. HOIST

BILL OF MATERIAL

3RD WRAP DEVICE (SPECIAL) ASSEMBLY

BILL OF MATERIAL

CRAWLER EXTENSION INSTALLATION

BILL OF MATERIAL

PROXIMITY SWITCH WIRING (TRACKS EXTENDED)

AUXILIARY BOOM NOSE INSTALLATION

BILL OF MATERIAL

WIRING SCHEMATIC

JUNCTION BOX ASSEMBLY

BILL OF MATERIAL

FIXED SWINGAWAY EXTENSION INSTALLATION

BILL OF MATERIAL

WIRING SCHEMATIC

JUNCTION BOX ASSEMBLY

BILL OF MATERIAL

TELE-OFFSET SWINGAWAY EXTENSION INSTALLATION

BILL OF MATERIAL

WIRING SCHEMATIC

JUNCTION BOX ASSEMBLY


BILL OF MATERIAL

DECAL INSTALLATION

ENGLISH


SPANISH

FRENCH

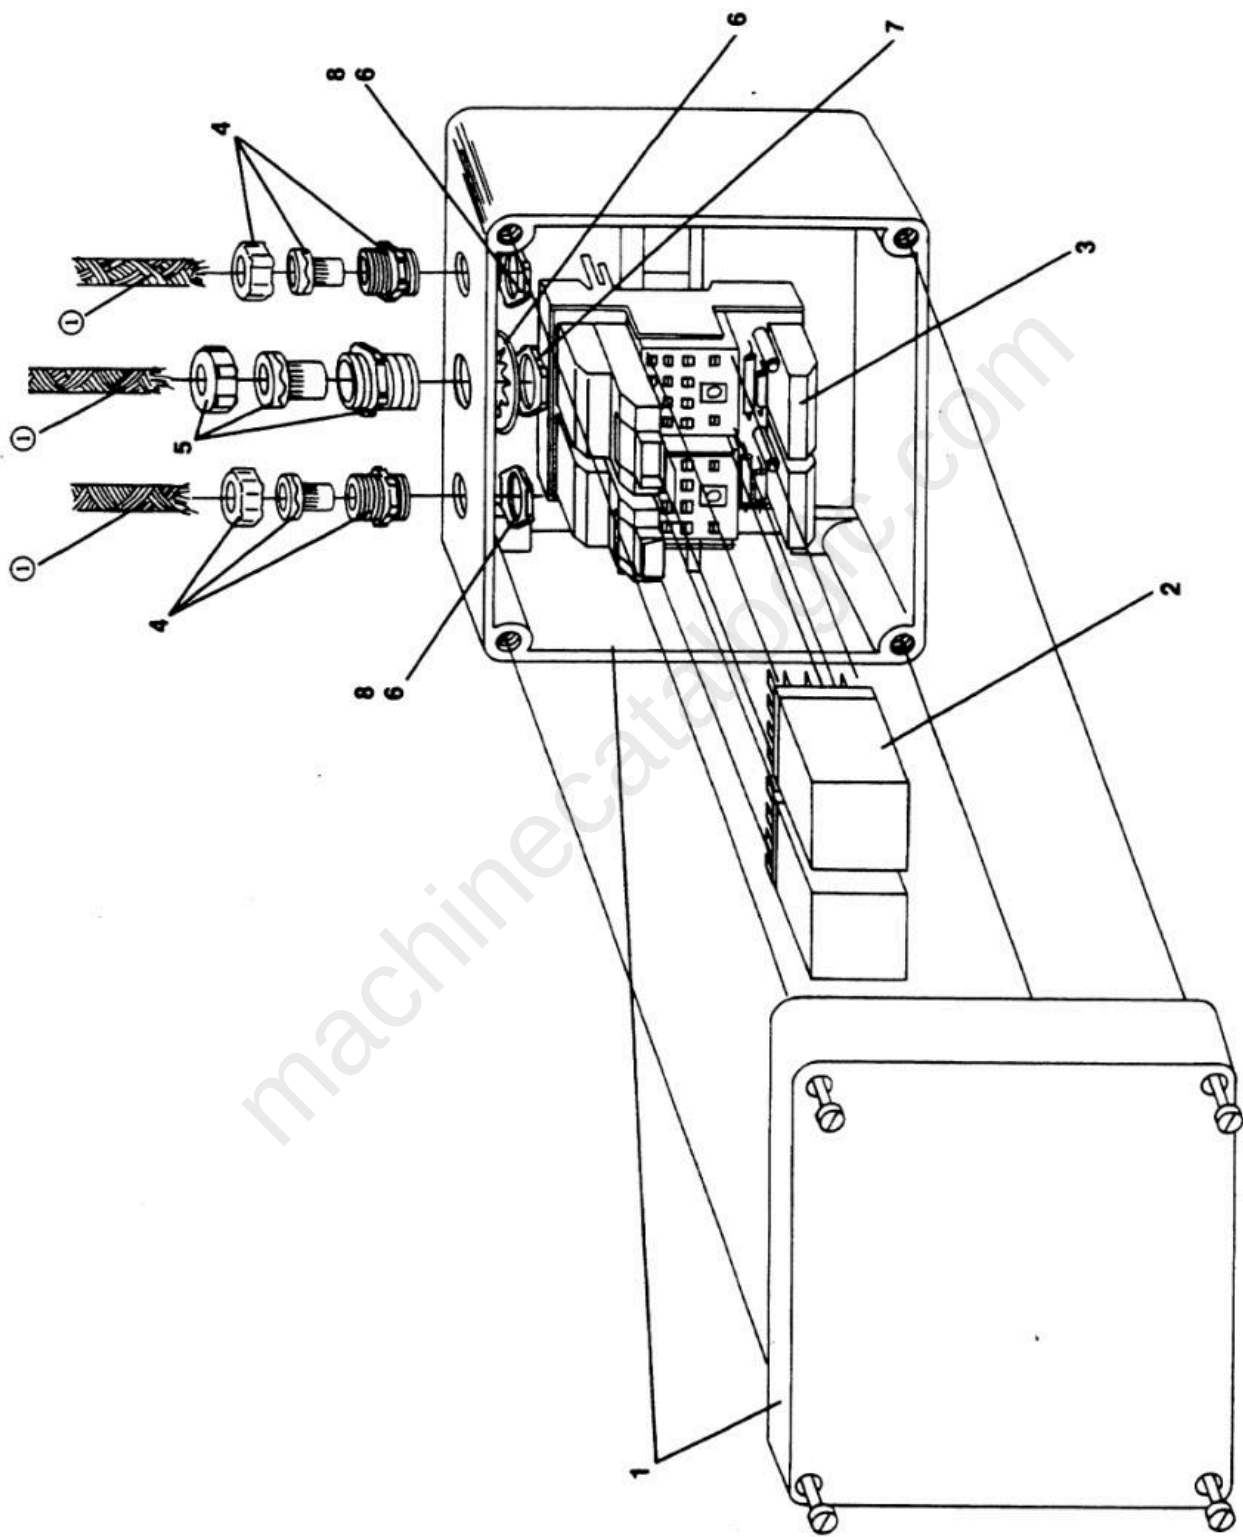

FIXED SWINGAWAY EXTENSION WIRING SCHEMATIC

CODE	COLOR
BR	BROWN
BL	BLACK
WY	WHITE/YELLOW
WG	WHITE/GRAY
WB	WHITE/BLUE
WR	WHITE/RED
WP	WHITE/PINK
WBL	WHITE/BLACK
WBR	WHITE/BROWN
P	PINK
W	WHITE
GN	GREEN
B	BLUE
R	RED
WGN	WHITE/GREEN
G	GRAY
I.S.	INNER SHIELD

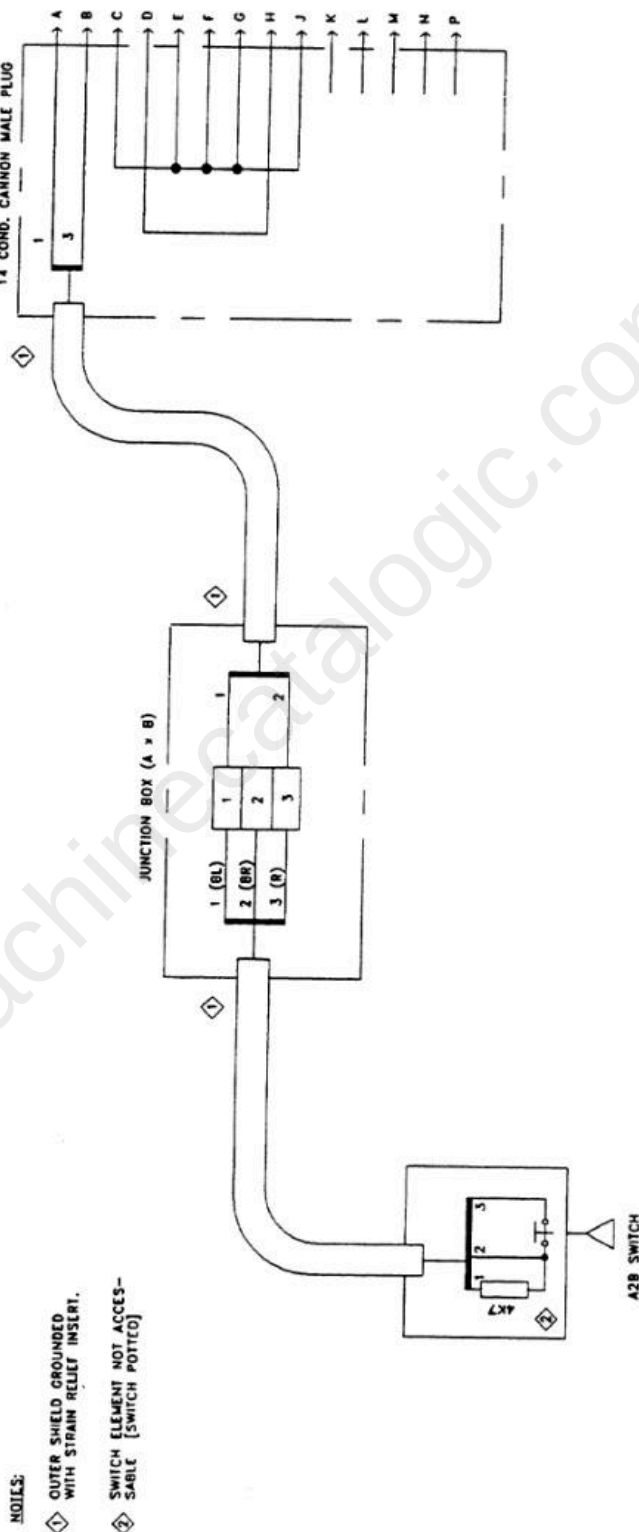

- NOTES:
- ① OUTER SHIELD GROUNDED WITH STRAIN RELIEF INSERT.
 - ② SWITCH ELEMENT NOT ACCESSIBLE [SWITCH POTTED]

THIS PAGE INTENTIONALLY LEFT BLANK.

Full Version Available

Grove CM20 Load Moment Indicator Parts Manual

Grove CM20 load moment indicator parts manual, parts lists, exploded views and assemblies in a PDF. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/grove-cm20-load-moment-indicator-parts-manual/>

Book No: 9-333-102682 · File Pages: 78 · File Count: 1 · File Language: English