

Service Manual

01

Rough Terrain Crane

GR-700EX-1


Model

GR-700EXL-1

Applicable Serial No. 545960 --


Hydraulic Pump (Double Variable Displacement Pump)

Enlarged view of the main body (the right side)

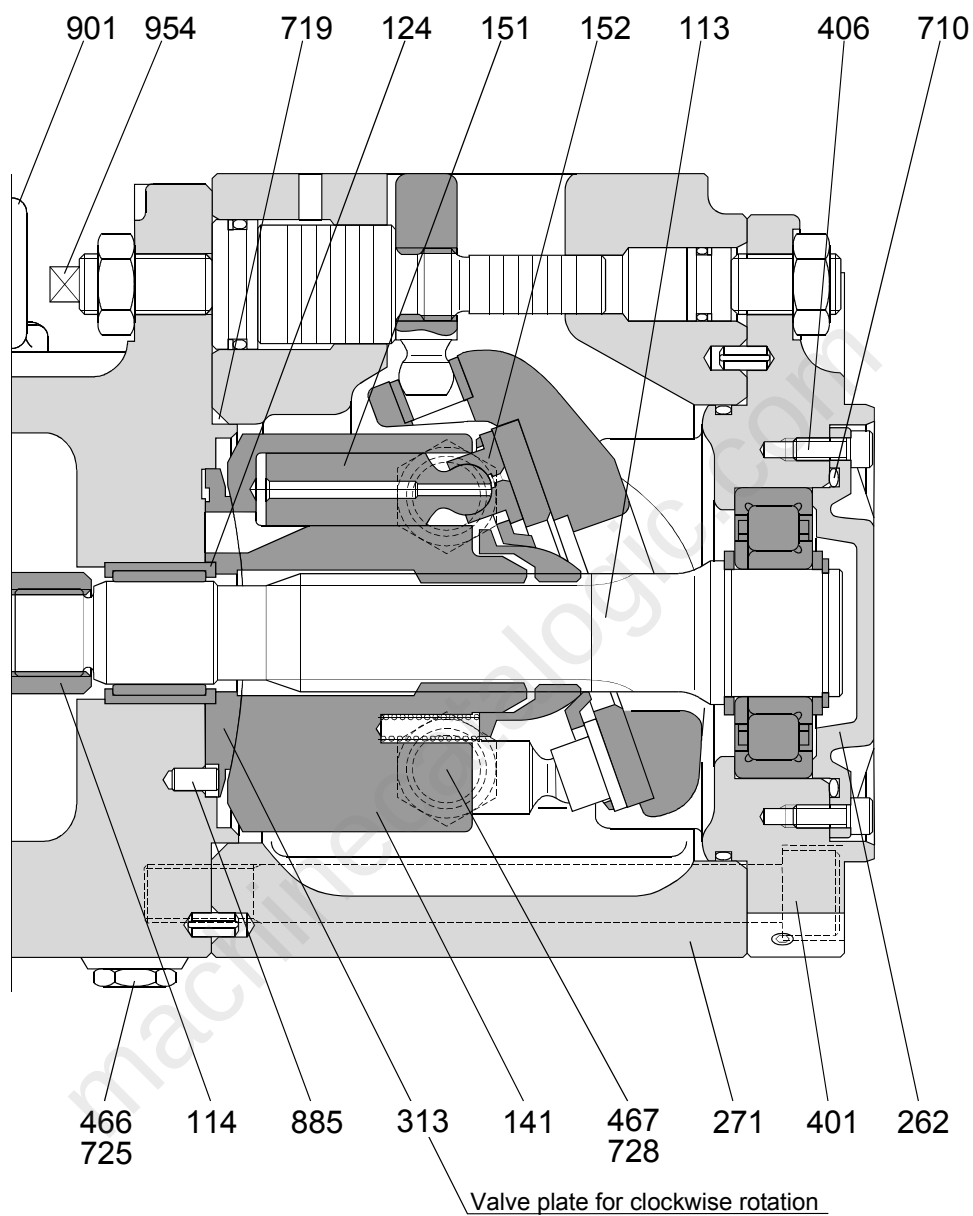

IW101-0270E03

Elevating Cylinder

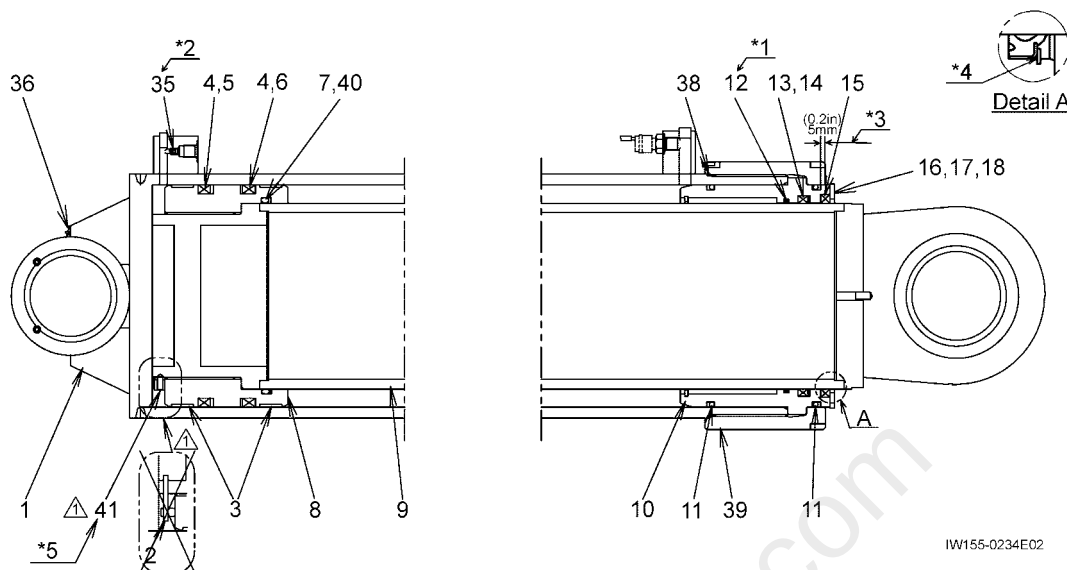Applicable serial No. $\triangle 1$: 546841 --

- | | | | |
|--------------------------------|-------------------|----------------|--------------------------------|
| 1. Cylinder | 11. O-ring | 21. O-ring | 31. Spring washer |
| 2. Spring pin $\triangle 1$ -- | 12. Damper ring | 22. Fitting | 32. Counter balance valve assy |
| 3. Plain bearing | 13. Packing | 23. O-ring | 33. Fitting |
| 4. Packing | 14. Backup ring | 24. Pipe | 34. O-ring |
| 5. Backup ring | 15. Dust seal | 25. Pipe | 35. Orifice |
| 6. Backup ring | 16. Retainer | 26. T-fitting | 36. Grease nipple |
| 7. O-ring | 17. Spring washer | 27. Pipe | 37. Pipe |
| 8. Piston | 18. Bolt | 28. Clamp assy | 38. O-ring |
| 9. Rod assy | 19. Support | 29. Sleeve | 39. Head cover |
| 10. Rod cover assy | 20. Fitting | 30. Bolt | 40. Backup ring |
| | | | $\triangle 1$ 41. Set screw |

*1: Face the notch or the lip toward the pressurized side.

*2: Apply Three-bond 1401 or equivalent. Do not close the hole [ϕ 0.6 mm (0.024 in)].

*3: Apply Three-bond 1104 or equivalent.

*4: Apply KONISHI car body sealer or equivalent (waterproof), however it is not possible to paint on the rubber side of dust seal.

 $\triangle 1$ *5: After tightening, punch (2 places).

Thread size and tightening torque

Sign / port	Thread size	Tightening torque		
		N-m	kgf-m	ft-lbf
A	G3/4	108 - 123	11 - 12.5	80 - 90
B	G1/2	54 - 64	5.5 - 6.5	40 - 47
C, D	G3/8	25 - 30	2.5 - 3	18.5 - 22.0
30	M8	23.5 - 27.4	2.4 - 2.8	17 - 20
$\triangle 1$ 41	M8	13.2 - 16.2	1.35 - 1.65	9.7 - 12


Solenoid Valve (Boom Telescoping/Aux. Winch)

L-5 Solenoid Valve (Boom Telescoping / Aux. Winch)


[NOTICE]

◆ There is a case that the appearance and so on differ from the parts for this machine. Although there is not so much difference in functions and disassembly procedures, make sure of the serial number of this machine and the part sales unit described in the parts catalog before starting disassembling operations.

1. Structure

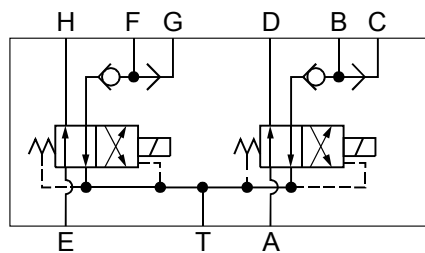


IW121-031001

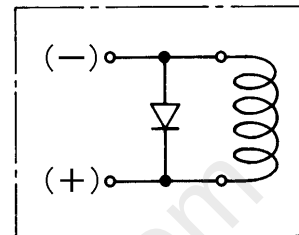

IW121-023002



 
Connector



(+): Red

(-): Black

IW121-0542E01

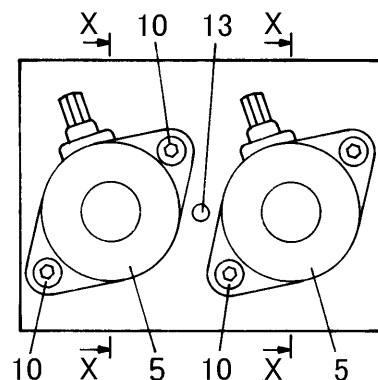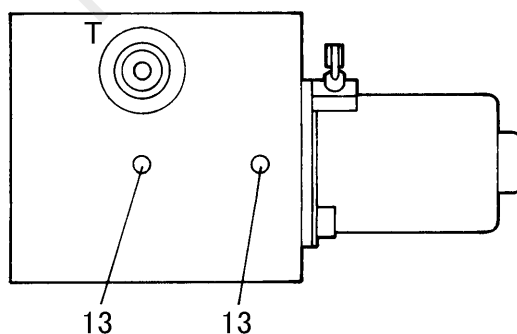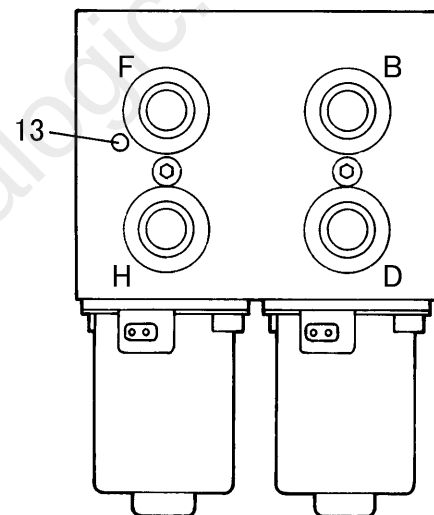

IW121-031002

Y-4 Electric Switch Adjustment..... 17

1. 3rd / top boom full retraction detection switch (CN859)..... 17
2. 2nd boom full retraction detection switch (CN553)..... 17
3. Jib stowed detection proximity switch (CN572)..... 17
4. Jib lock pin retraction detection switch (CN573)..... 18
5. Main winch drum rotation detection proximity switch (CN591) (option) 18
6. Aux. winch drum rotation detection proximity switch (CN592) (option) 18
7. Over-front detection proximity switch (CN521)..... 18
8. Control lever stand position detection switch (Swing control and boom telescoping/aux. winch) (CN529) . 19
9. Straight ahead detection proximity switch (CN408)..... 19
10. Counterweight equipped detection proximity switch (CN994)..... 19
11. Over-rear detection proximity switch (CN518) [for Europe only] 20

Y-5 Adjustment and Checks 21

1. Service brake adjustment 21
 - 1.1 Adjusting the brake pedal..... 21
 - 1.2 Tightening the cap of reserve tank of service brake fluid 21
2. Accelerator adjustment 21
 - 2.1 Accelerator pedal 21

3. Parking brake adjustment..... 22
 - 3.1 Adjusting the parking brake clearance (between pad and disc plate).....22
 - 3.2 Connecting the parking brake and spring chamber 22
4. Tire and steering angle adjustment 22
 - 4.1 Tire air pressure 22
 - 4.2 Adjusting the steering angle 22
5. Engine speed (and governor setting) 23
6. Torque converter and transmission 23
 - 6.1 Maximum allowable speed.....23
 - 6.2 Adding oil to the torque converter and transmission.....23
7. Braking force 24
 - 7.1 Parking brake force.....24
 - 7.2 Service brake force 24
8. Adjusting the headlight light axes 24
9. Adjusting boom telescoping wire ropes ... 25

Y-6 Check (Crane Operation) 29

1. Outrigger status indicator 29
2. Hoisting..... 30
3. Backward stability control 30
4. Outrigger emergency setting 30
5. Jib 30
6. Boom Telescoping Control..... 31
7. Alarms 32
8. Outrigger slide plate adjustment..... 32
9. Lower outrigger operation..... 32

Full Version Available

Tadano GR-700EX-1 Rough Terrain Crane Service Manual

Tadano GR-700EX-1 rough terrain crane service manual with repair procedures, adjustments and troubleshooting for the main systems. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/tadano-gr-700ex-1-rough-terrain-crane-service-manual/>

File Pages: 446 · File Count: 1 · File Language: English