

Operation and Maintenance Manual

Truck Crane

Model **GT-800EX-1**

Applicable Serial No. **475414** ~

▲ CAUTION : Read this manual before operating the crane. Save this manual for future reference.

TADANO LTD.

Operation and Maintenance Manual



Truck Crane


Model GT-800EX-1

Applicable Serial No. 475414 ~

⚠ CAUTION : Read this manual before operating the crane. Save this manual for future reference.

TADANO LTD.

Controls

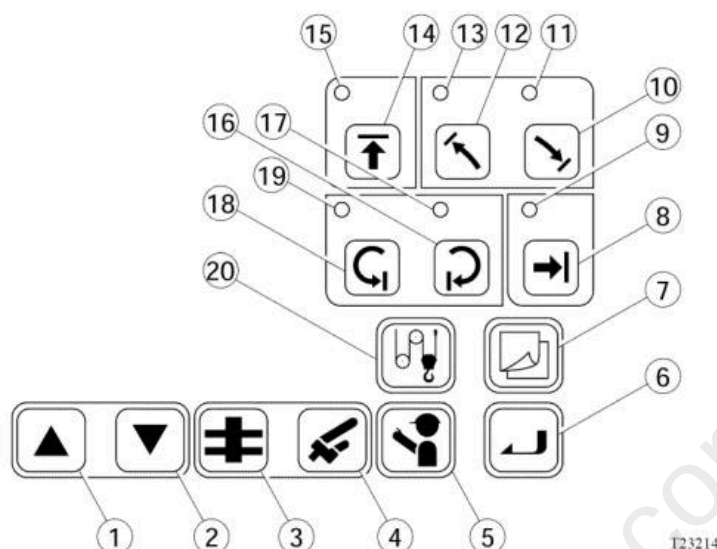

1. Increase key
Used to increase the selected value.

2. Decrease key
Used to decrease the selected value.

3. Outrigger mode select key
Used to select the outrigger status.

4. Lift mode select key
Used to select the lift status.

5. Check key
Used to check the AML system functions.

6. Register key
Used to register a selected state.

7. Display alteration key
Used to alternate the displays on display panel 1.

8. Load radius restriction key
Used to activate and cancel the load radius limiting function.

9. Load radius restriction indicator lamp
Lights up when the load radius limiting function is activated.

10. Lower boom angle limit restriction key
Used to activate and cancel the lower most boom angle limiting function.

11. Lower boom angle limit restriction indicator lamp
Lights up when the lower most boom angle limiting function is activated.

12. Upper boom angle limit restriction key
Used to activate and cancel the upper most boom angle limiting function.

13. Upper boom angle limit restriction indicator lamp
Lights up when the upper most boom angle limiting function is activated.

14. Lifting height restriction key
Used to activate and cancel the lifting height limiting function.


15. Lifting height restriction indicator lamp
Lights up when lifting height limiting function is activated.

16. Right swing restriction key
Used to activate and cancel the right swing limiting function.

17. Right swing restriction indicator lamp
Lights up when the right swing limiting function is activated.


13. Flip the jib lock pin switch downward to retract the jib lock pin.

◆ Jib will come apart from the center support on the boom.

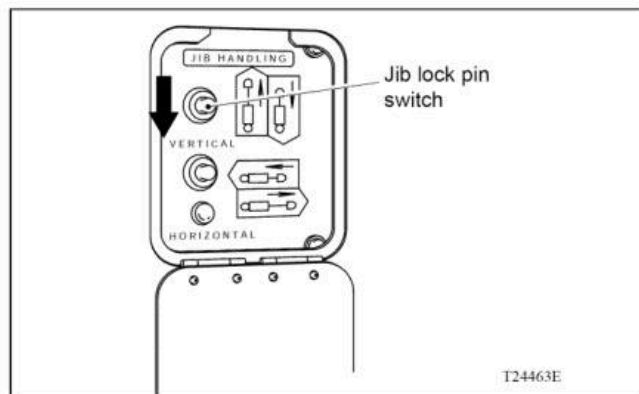


◆ After the jib lock pin at the center support on the boom is retracted, the jib mounting/stowing operability indicator lamp will light up.


If the jib lock pin is not retracted fully, the jib mounting/stowing operability indicator lamp remains unlit and the jib mounting/stowing cylinder cannot be moved.

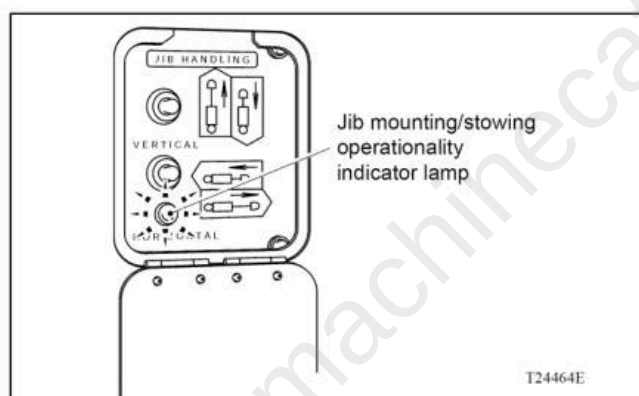

14. Swing the jib out using the jib mounting/stowing switch.

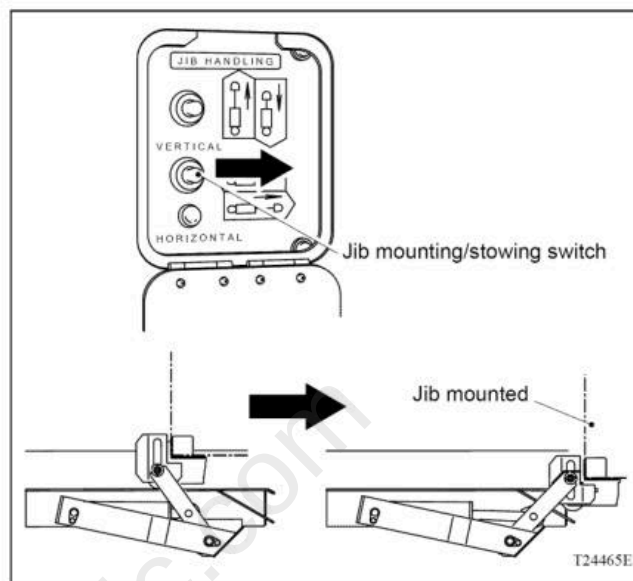

15. Pull out the set pin for the stowage support, and rotate it to hook it on the guide. The stowage support will come apart from the jib.

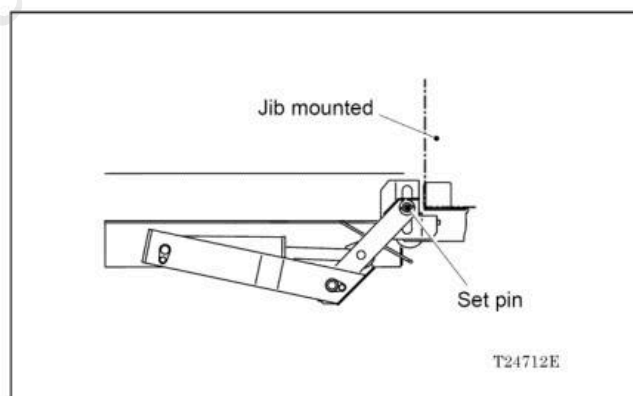

◆ Then stow the jib mounting/stowing cylinder. If the cylinder is left swung out, it can hinder crane operation or be damaged.

Full Version Available

Tadano GT-800EX-1 Truck Crane Operator Manual

Tadano GT-800EX-1 truck crane operator manual covering controls, safe operation, setup and daily checks. 253 pages in 3 PDF files. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/tadano-gt-800ex-1-truck-crane-operator-manual/>

Book No: GT-800EX-1_OM1-11E · File Pages: 253 · File Count: 3 · File Language: English