






Reparaturanleitung
Repair Manual
Manuel de Reparation
Manual de Reparaciones
Manuale di Riparazioni


ZF-TC TRONIC
heavy duty

TCHD for 12 TC 3040 SO

4245 751 101_en

 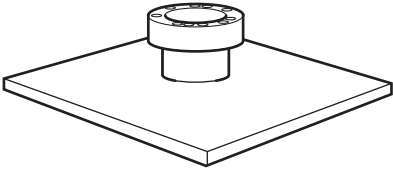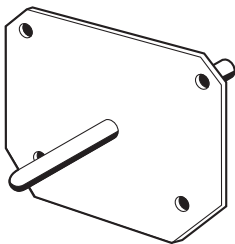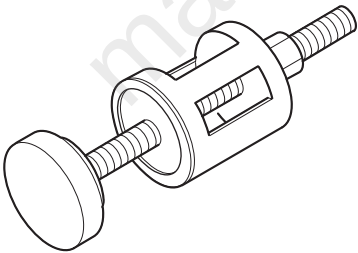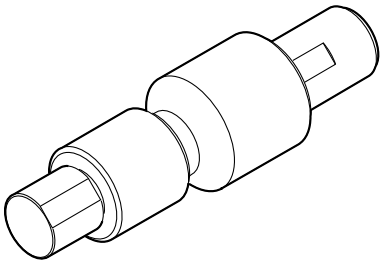

Figure no.	Illustration	Order no.	Application	Quantity	Comment
1		1X56 139 137 Assembly device for complete TC Tronic HD		1	Chapter 2
2		1X56 138 342 Fixing plate for replacing the clutch actuator or for delivery without clutch actuator		1	Chapter 4 Chapter 5
3		1X56 136 242 Lifting gear (hoist) for TCHD housing parts		1	Chapter 5 Chapter 8
4		1X56 138 159 Hold-down device for removal and installation of a release on the pressure plate		1	Chapter 6
5		1X56 138 250 Centering punch for clutch disk		1	Chapter 6

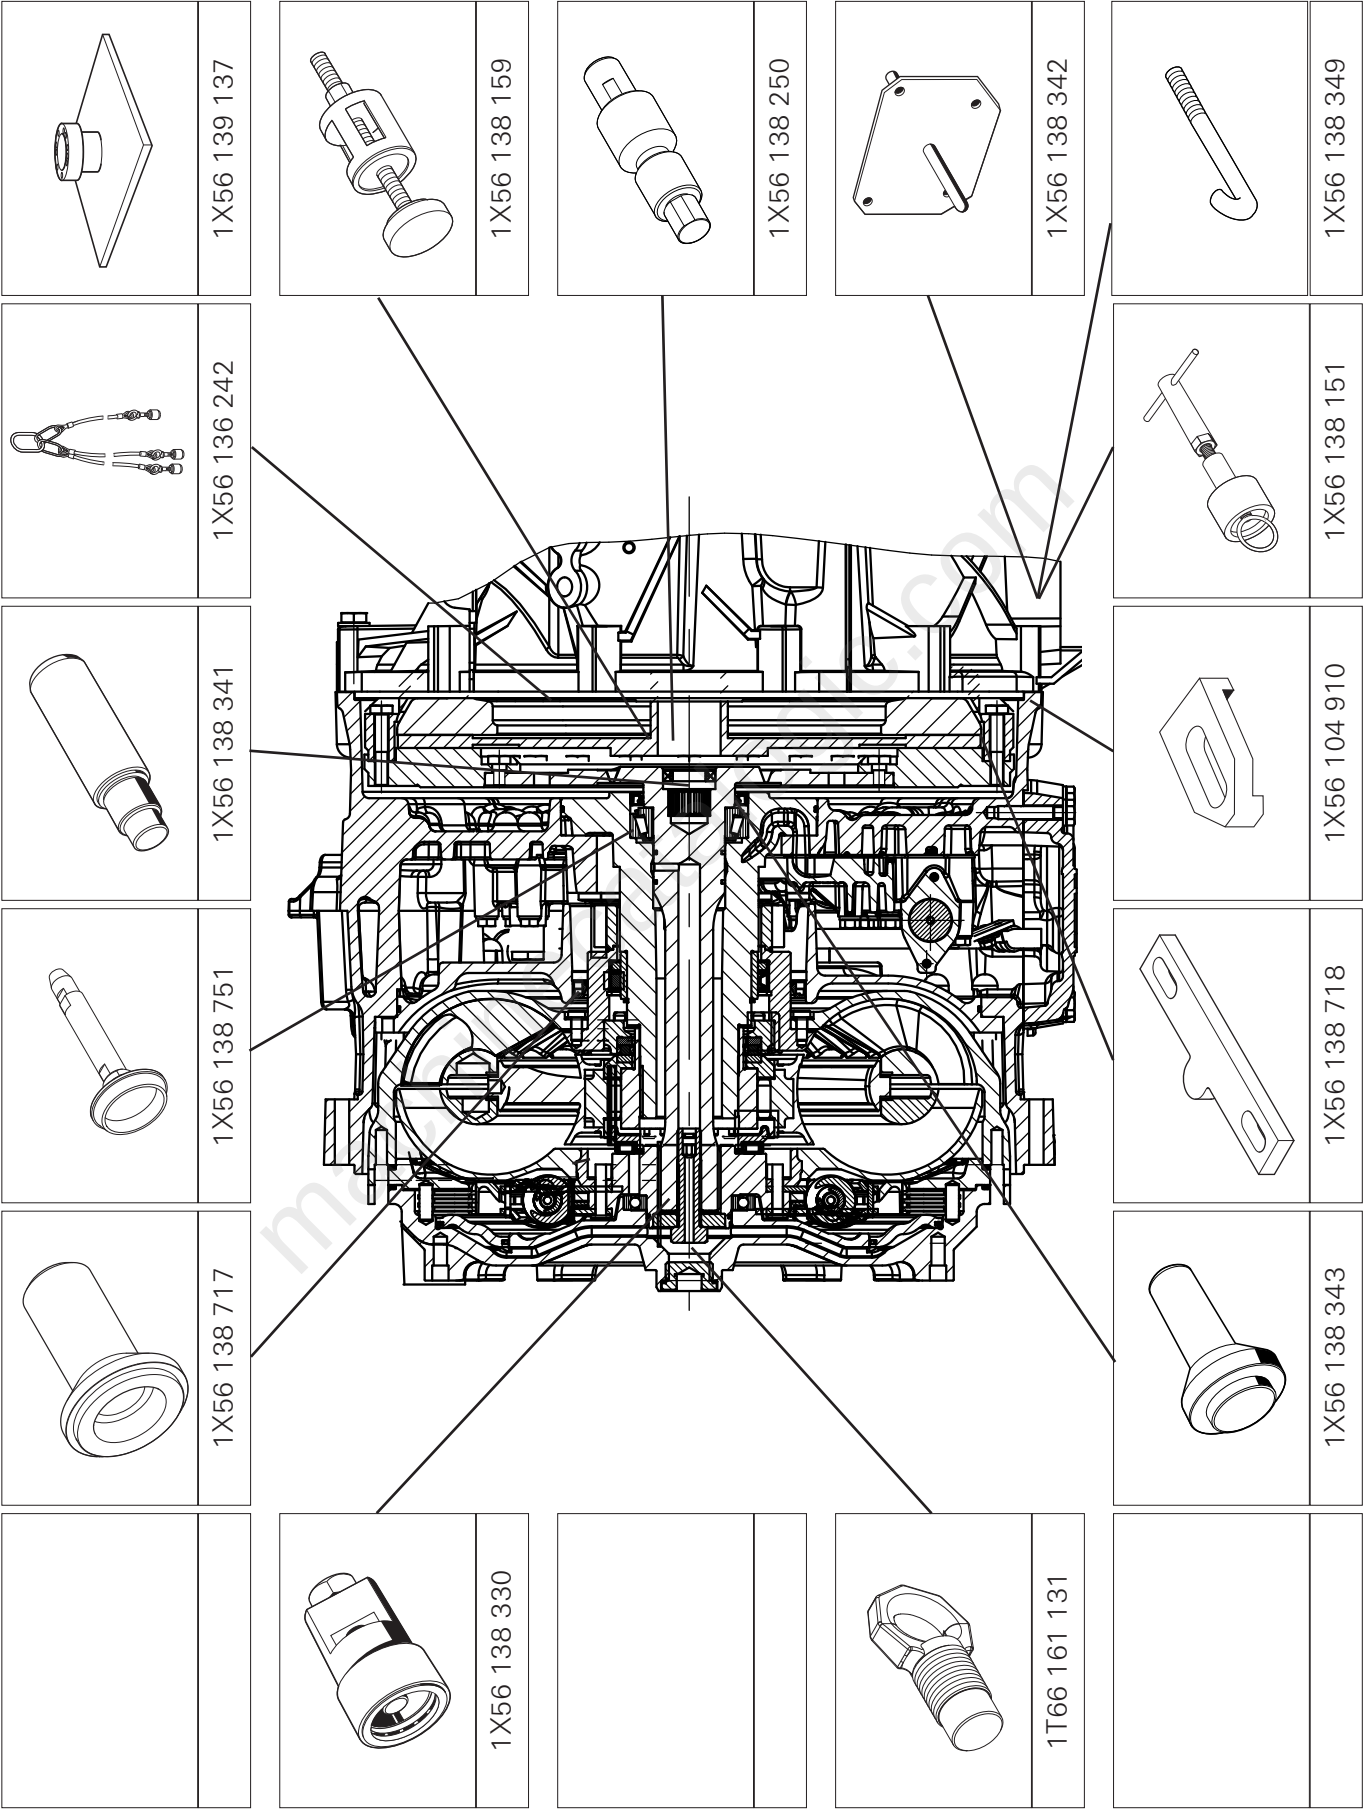


8 Turbine Shaft

8.1 Removing turbine shaft

NOTE

Turbine shaft can be removed after the removal of the shift clutch and the torque converter.

- 1 Use lifting device **1X56 136 242** to lift converter housing over turbine shaft **(1)**.
- 2 Take off rectangular rings **(2)** from the turbine shaft.
- 3 Use standard two-armed extractor to grasp needle bush **(3)** and pull out of the turbine shaft together with shaft sealing ring **(4)**.

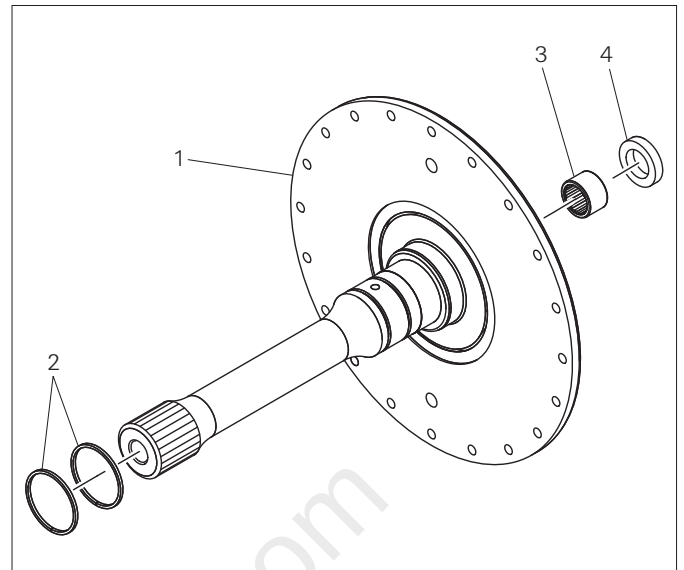


030918

8.2 Installing turbine shaft

- 1 Use adapter **1X56 138 341** to press needle bush **(3)** in correct position into turbine shaft **(1)** **with grease** until it is firmly home (axial abutment).
- 2 Coat circumference of shaft sealing ring **(4)** with Loctite no. 574.
- 3 Insert shaft sealing ring **(4)** until it is firmly home (axial abutment) using adapter **1X56 138 341**.
- 4 Grease needle bush **(3)** and shaft sealing ring **(4)** slightly using a brush.
- 5 Apply light coating of grease to rectangular rings **(2)** and insert into turbine shaft.
- 6 Insert turbine shaft into converter housing.

11.5 Installing the control unit

- 1 Place control unit housing **(5)** on cover plate.
- 2 Screw in and tighten 6 torx screws M8x60 **(3)**.
Tightening torque: 31 Nm
- 3 Screw in and tighten 23 hex head screws M8x70 **(4)**.
Tightening torque: 28 Nm

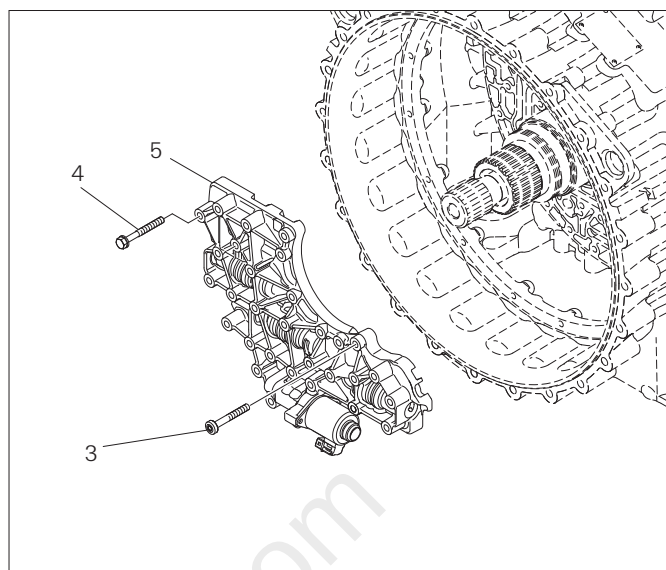


030927



033043

11.6 Installing the housing

- 1 Place housing **(2)** on cover plate.
- 2 Screw in and tighten 7 hex head screws M8x70 **(1)**.
Tightening torque: 28 Nm

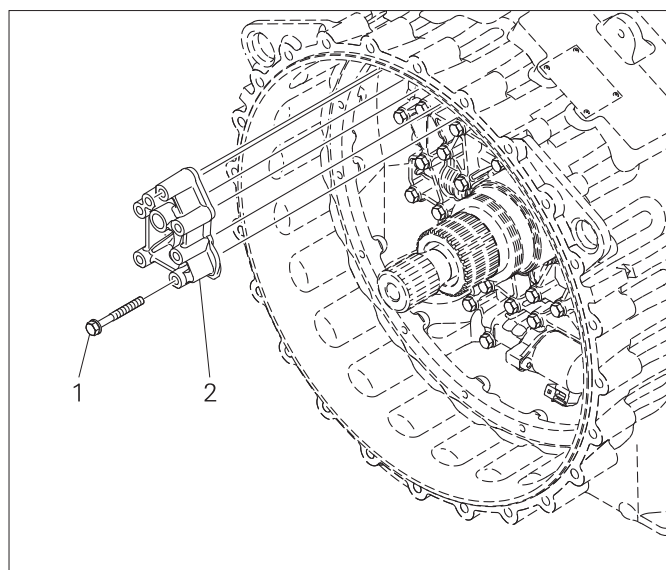

030930

Full Version Available

ZF TCHD for 12 TC 3040 SO Transmission Service Manual

ZF TCHD for 12 TC 3040 SO transmission service manual with repair procedures, setting data and pressure checks. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/zf-tchd-for-12-tc-3040-so-transmission-service-manual/>

Book No: 4245 751 101 · File Pages: 67 · File Count: 1 · File Language: English