



Service Manual

Chassis & Mast

MC

GP15N CT25C-55001-up
GP15ZN CT34-52001-up
GP18N CT25C-75001-up
GP18ZN CT34-72001-up
GP20CN CT34-22001-up
GP20N CT17D-10001-up
GP20ZN CT35-10001-up
GP25N CT17D-60001-up
GP25ZN CT35-60001-up
GP30N CT13F-40001-up
GP35N CT13F-60001-up

GPE15N CT34-00001-up
GPE18N CT34-40001-up
GPE20CN CT34-30001-up
GPE20N CT17D-20001-up
GPE20ZN CT35-20001-up
GPE25N CT17D-70001-up
GPE25ZN CT35-70001-up
GPE30N CT13F-10001-up
GPE35N CT13F-80001-up


DP15N CT16D-54001-up
DP18N CT16D-74001-up
DP20CN CT16D-24001-up
DP20N CT18C-20001-up
DP25N CT18C-70001-up
DP30N CT14E-10001-up
DP35N CT14E-80001-up

For use with K15, K21, K25, S4Q2 and S4S
Engine Service Manuals.

99719-38210


- (5) Insert a check mark in the box of either T/M solenoid F or T/M solenoid R, and press the write button.
- (6) When the write confirmation dialogue box is displayed, press the YES button the same as (4) above, and when the write completed dialogue box is displayed, press the OK button to complete the set-up.

Note: Do not check both boxes of T/M solenoid F or T/M solenoid R to avoid the controller damage.

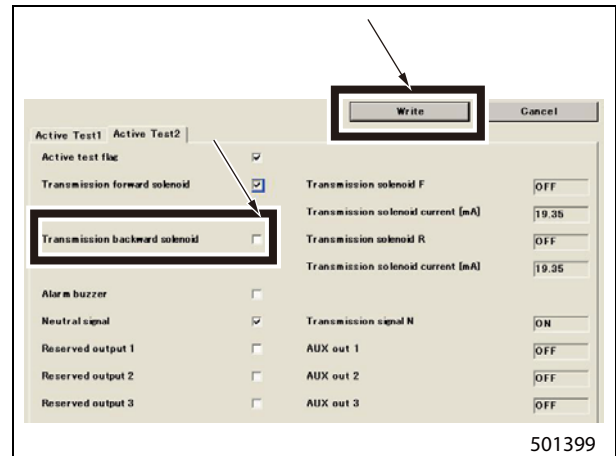

501399

- (7) Press the output monitor button in the service tool screen to display the output monitor screen. Make sure that the T/M control valve current is 2000 mA or around.

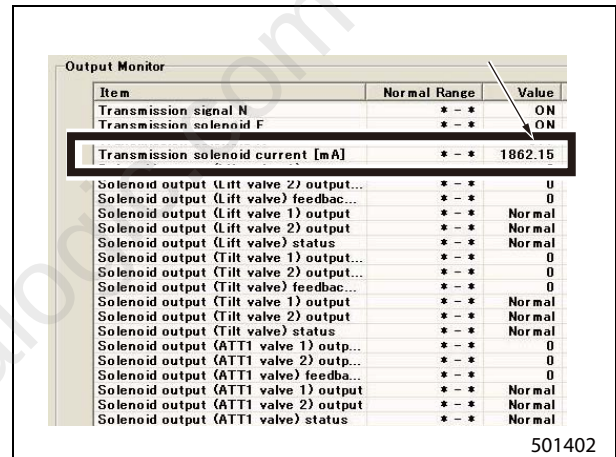

501402

- (8) After confirmation, turn the key switch to the OFF position to terminate the active test. (Be sure to turn off the key switch before proceeding to the next step.)

Note: If a defect is found, refer to 4-51 "Truck Status Display and Troubleshooting" and check for the possible causes of the diagnostic code F-85, F-87, and F-89.


6. Seat Belt Warning Light

6.1 Seat Belt Warning Light, Checking the Operation

This light flashes when the seat belt is not worn or not buckled properly.


Controller function

The controller sends a warning signal to the meter panel if the seat belt is not fastened.

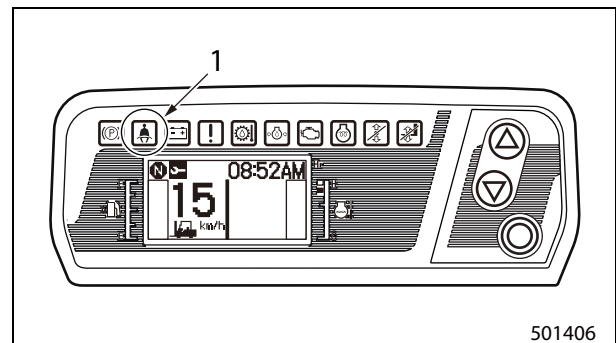

501406

1. Seat belt warning light

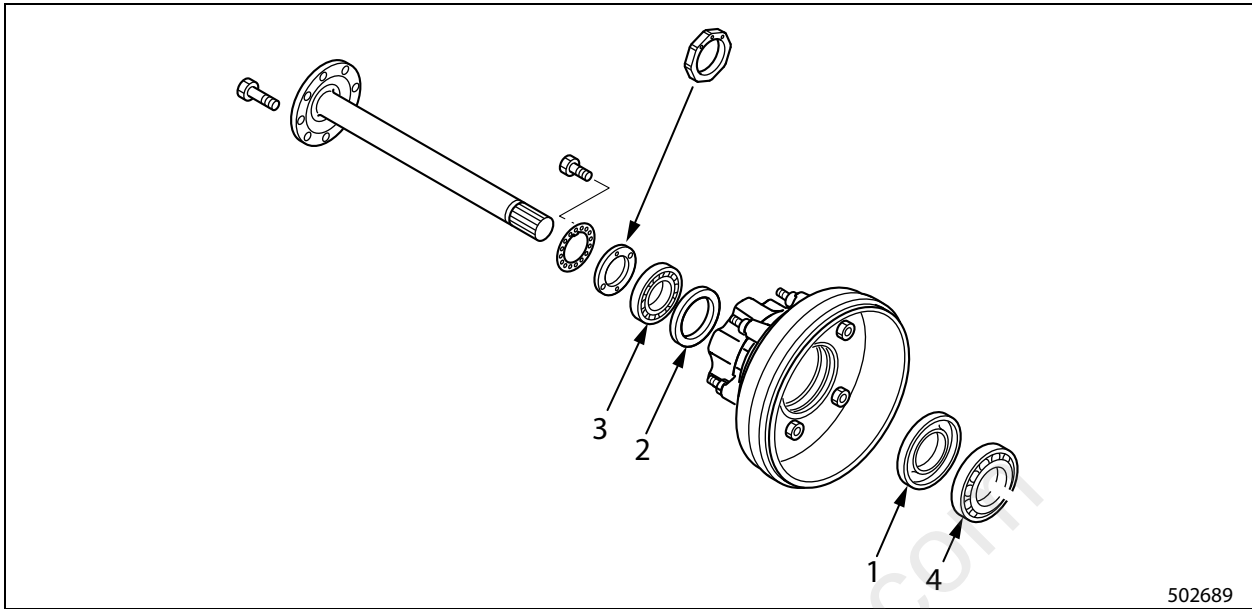

- | | |
|-------------|---------------------------|
| 1. Oil seal | 3. Tapered roller bearing |
| 2. Oil seal | 4. Tapered roller bearing |

Special tool (Installer)		Truck classifications	
		1 ton class	2, 3 ton classes
1	Oil seal	91A68-00500	
2	Oil seal	91B68-00900	91E68-00700
3	Tapered roller bearing		91E68-00900
4	Tapered roller bearing		91E68-00800

- Apply sealant (ThreeBond 1184) to the flange surfaces of the axle shaft.

Note: DO NOT apply grease or oil to outer peripheral portion of oil seal when installing.

17. Lift cylinders, Removing (Second Cylinder for Duplex Mast)

17.1 Disassembly Sequence



502358

- | | |
|------------------------------|-------------------|
| 1. Holder subassembly | 12. Rod |
| 2. Head subassembly | 13. Piston |
| 3. Piston rod subassembly | 14. Slide ring |
| 4. Cylinder tube subassembly | 15. Set screw |
| 5. Holder | 16. Check valve |
| 6. Wiper ring | 17. Cushion spool |
| 7. Back-up ring | 18. Spring |
| 8. U-ring | 19. Snapring |
| 9. O-ring | 20. Tube assembly |
| 10. Head | 21. Plug |
| 11. Bushing | |

17.2 Suggestions for Disassembly

Removing piston

Be careful not to damage the piston seals and cylinder bore surface when pulling out the piston from the cylinder.

18. Lift Cylinder (Second for Duplex Mast), Inspecting

Cylinder tube

- Check the bore surface for excessive wear, scratches and rust.
- Check welds for cracks or dents.


Piston rod

- Check rod deflection.
- Check the rod surface for scratches, rust or wear.

Rings, packings and threaded portions

- Check seal lips for damage, wear, or deterioration.
- Check threaded portions for damage.


- (2) Check cones for wear or damage.
- (3) Measure the axial clearance between the gear and synchronizer ring.

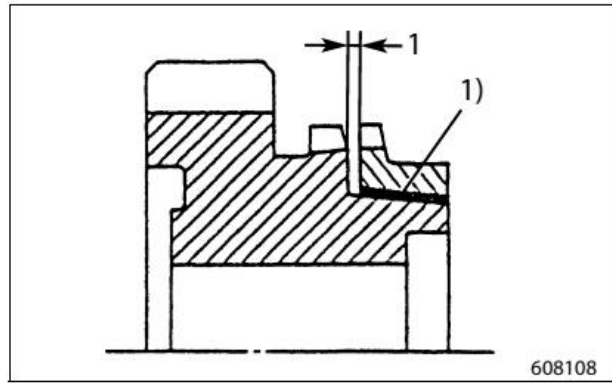

H-L

1. Clearance (H-L)

1) Cone

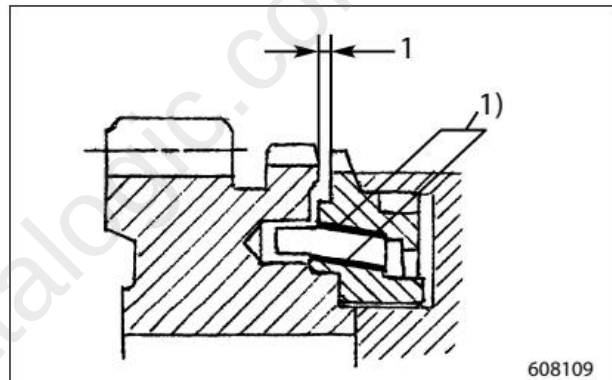

F-R

1. Clearance (F-R)


1) Cone

Item		Ref.	Standard	Limit
Axial clearance between gear and ring	H-L	1	1.75 mm (0.0689 in.)	0 mm (0.00 in.)
	F-R	2	1.85 mm (0.0728 in.)	0.25 mm (0.0098 in.)

8.3 Suggestions for Assembly

Wheel cylinder, Installing

Apply liquid gasket to the mounting face of the wheel cylinder before installing and tighten wheel cylinder to specified torque.

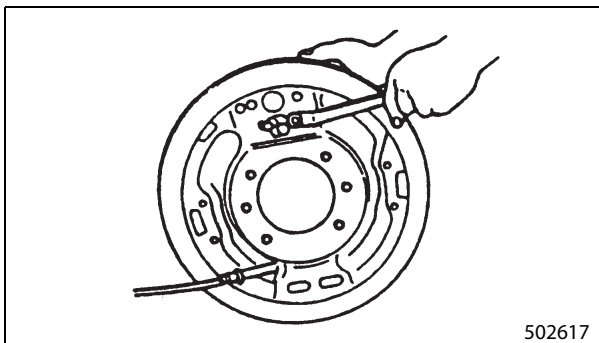

502617

Item	Specified value	
	1 ton class	2, 3 ton classes
Tightening torque	7.8 to 11.8 N·m (0.80 to 1.20 kgf·m) [5.753 to 8.703 lbf·ft]	17.7 to 26.5 N·m (1.80 to 2.70 kgf·m) [13.055 to 19.545 lbf·ft]


Applying grease

Apply a thin coat of specified brake grease to the following parts:

- Shoe ledge (6 places) (Contact area between backing plate and shoe)
- Anchor pin surface in contact with shoe ends

Shoe and lining, Installing


Ensure that each connector link of the wheel cylinder has been correctly inserted into shoe web.

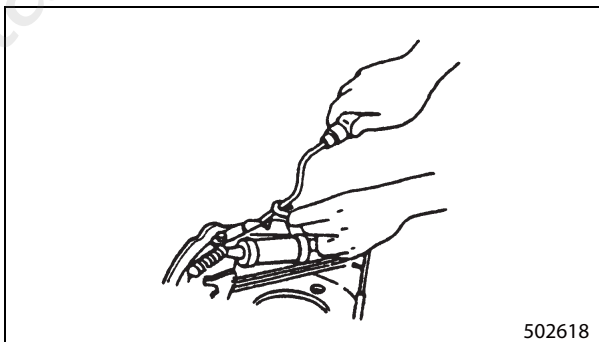

502618

Return spring, Installing

Using special tool, install return springs to backing plate pins.

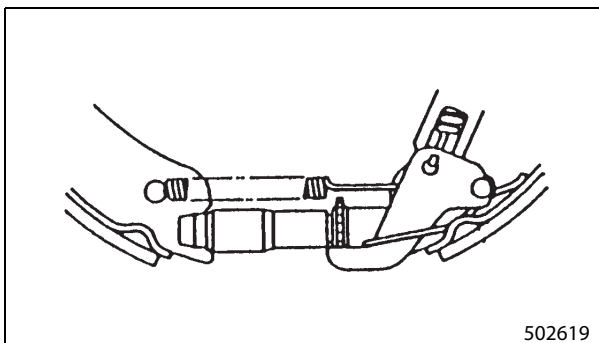


502619

Special tool	Part number
Spring installer	64309-15413

4.3 Precautions for Battery Charging

- (1) In a slow charging, the charging current should be about 1/10 of the capacity of battery.
- (2) In quick charging, the battery capacity in ampere (A) should not be exceeded.
- (3) During charging, adjust the charging current so that the electrolyte temperature does not exceed 45 °C (113 °F).
- (4) When connecting cables to battery terminals, always connect the positive (+) terminal first, and when disconnecting, remove the negative (-) terminal first.
- (5) Be sure to provide proper ventilation as hydrogen gas is generated during charging.

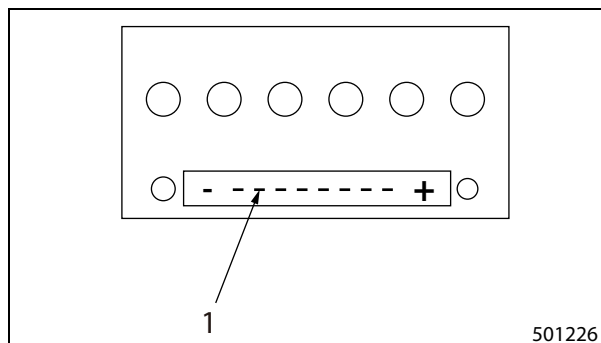

1. Identification

Identification	
34B19L	(Gasoline model)
55D23L	
75D26L	(Diesel model)
95D31L	
105D31L	

⚠ CAUTION

Be sure to turn off the key switch and light switch before disconnecting or connecting the battery cables.
(This prevents damage to the IC regulator.)

Full Version Available

Caterpillar DP35NT Forklift Service and Operator Manual (99719-38210)

Caterpillar DP35NT forklift service manual, covers hydraulics, mast, drive systems, wiring, and diesel service data. Searchable PDF download.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/caterpillar-dp35nt-forklift-service-and-operator-manual-99719-38210/)

<https://machinecatalogic.com/caterpillar-dp35nt-forklift-service-and-operator-manual-99719-38210/>