




Service Manual

Chassis & Mast

LC/FC

FD100N1	AF15E-00011-up
FD120N1	AF15E-00011-up
FD135N1	AF15E-00011-up
FD150AN1	AF24C-00011-up
FD160AN1	AF39A-00011-up

4.4 Disconnecting Pipes and Hoses

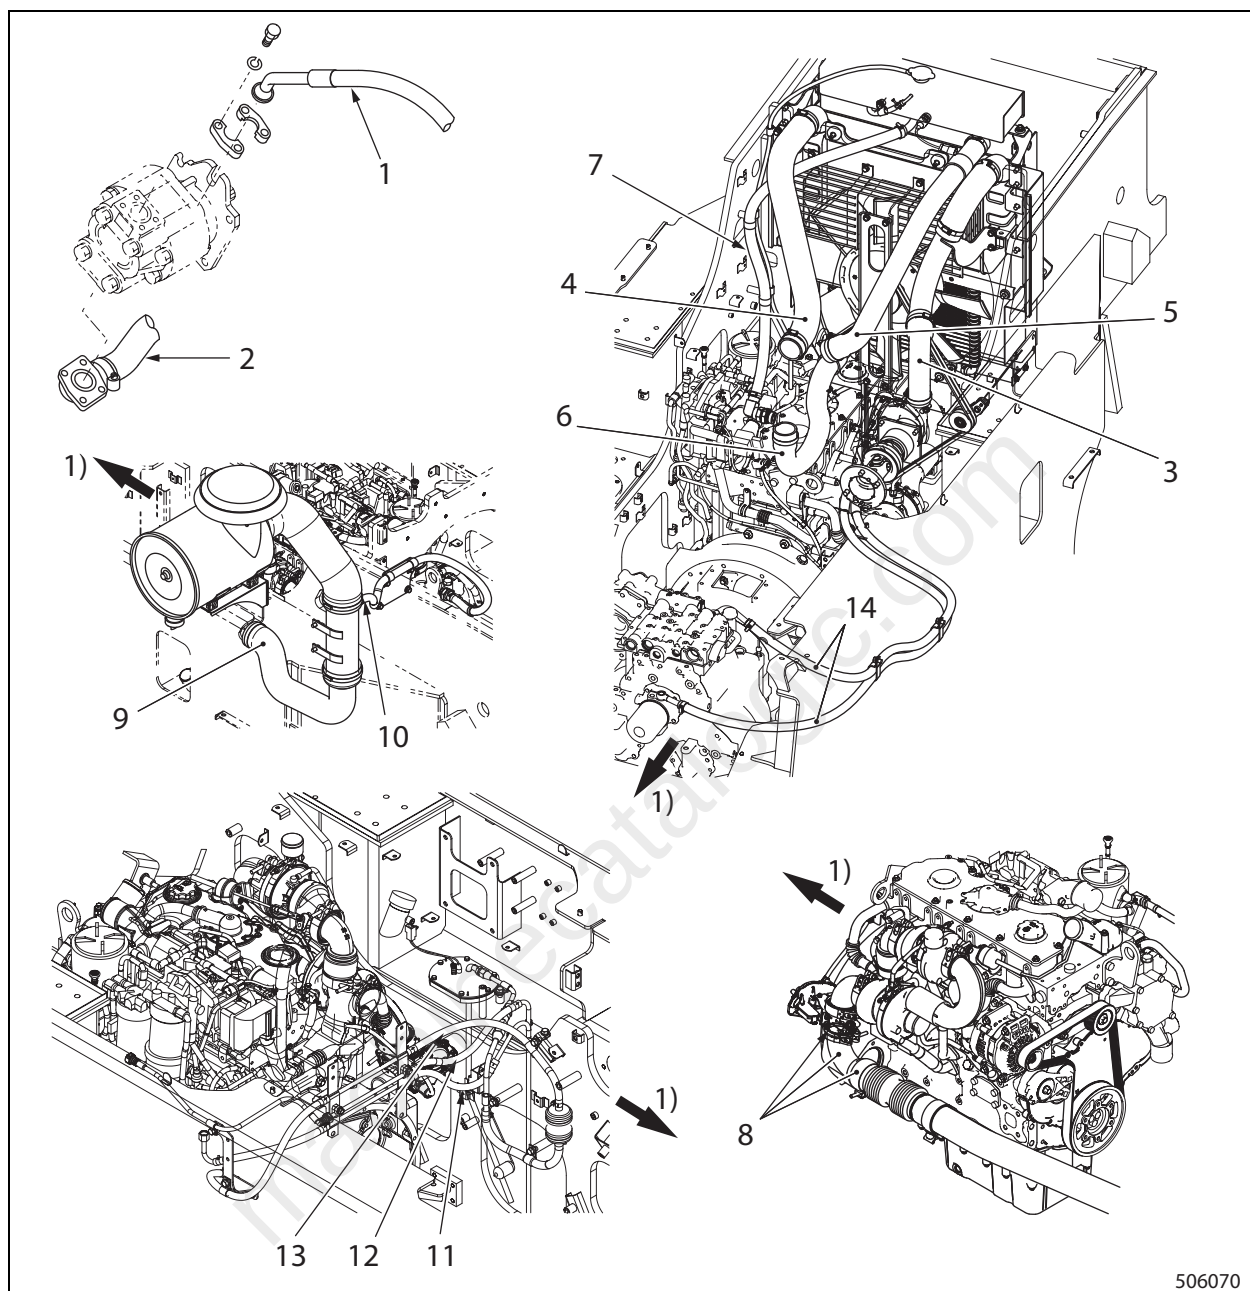

506070

- | | |
|------------------------------------|-------------------------------------|
| 1. Delivery hose of hydraulic pump | 8. Exhaust elbow, Clamp, Ball joint |
| 2. Suction hose of hydraulic pump | 9. Air inlet hose |
| 3. Inlet hose of intercooler | 10. Air hose |
| 4. Outlet hose of intercooler | 11. Fuel hose |
| 5. Upper hose of radiator | 12. Fuel hose |
| 6. Lower hose of radiator | 13. Fuel hose |
| 7. Fill hose | 14. Oil cooler hose |
| | 1) Front of forklift truck |


Suggestions for removal

- (1) Disconnect the engine left side fuel hose. Leave other intermediate pipes and right side hoses connected to the engine.
- (2) Disconnect the oil cooler hoses at the transmission side and tack the hoses along the frame.

4.3 Inspecting Steering Wheel After Installation


Checking steering effort (Without knob type)

- (1) Apply the parking brake.
- (2) Run the engine until hydraulic oil temperature reaches a range of between 40 and 60°C (104 and 140 °F).
- (3) Attach a spring scale on the rim or spoke of the steering wheel, and measure the steering effort required to turn the steering wheel clockwise or counterclockwise from the straight-ahead position. Steering effort must be less than the specified value given below.

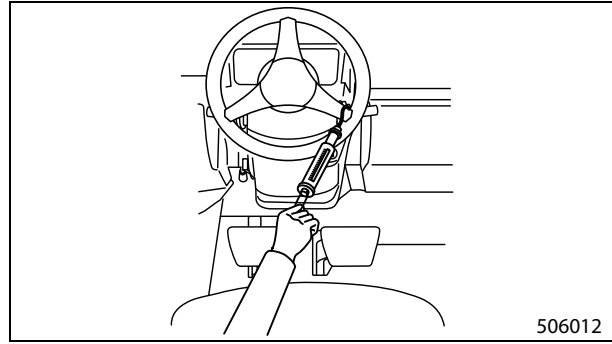

Checking steering effort (With knob type)


- (1) Apply the parking brake.
- (2) Run the engine until hydraulic oil temperature reaches a range of between 40 and 60°C (104 and 140 °F).
- (3) Attach a spring scale on the rim or spoke of the steering wheel, and measure the steering effort required to turn the steering wheel clockwise or counterclockwise from the straight-ahead position. Steering effort must be less than the specified value given below.

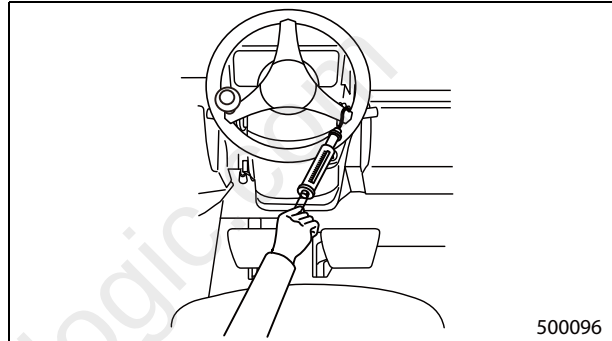

Item	Standard
Steering effort (at steering wheel rim)	10 N (1.2 kgf) [2.25 lbf]

4.4 Removing Steering Valve


- (1) Remove the cover around the steering column.
- (2) Disconnect the five hoses from the steering valve.
- (3) Remove the steering wheel mounting bolts, and remove the steering valve.

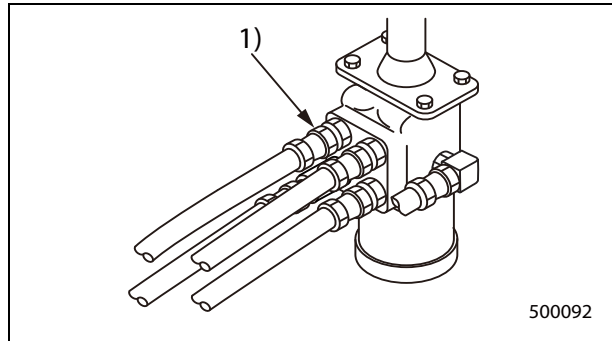

1) Mounting bolts

Ref.	Bolt tightening torque
1)	34 to 44 N·m (3.5 to 4.5 kgf·m) [25.08 to 32.45 lbf·ft]

3. Structure

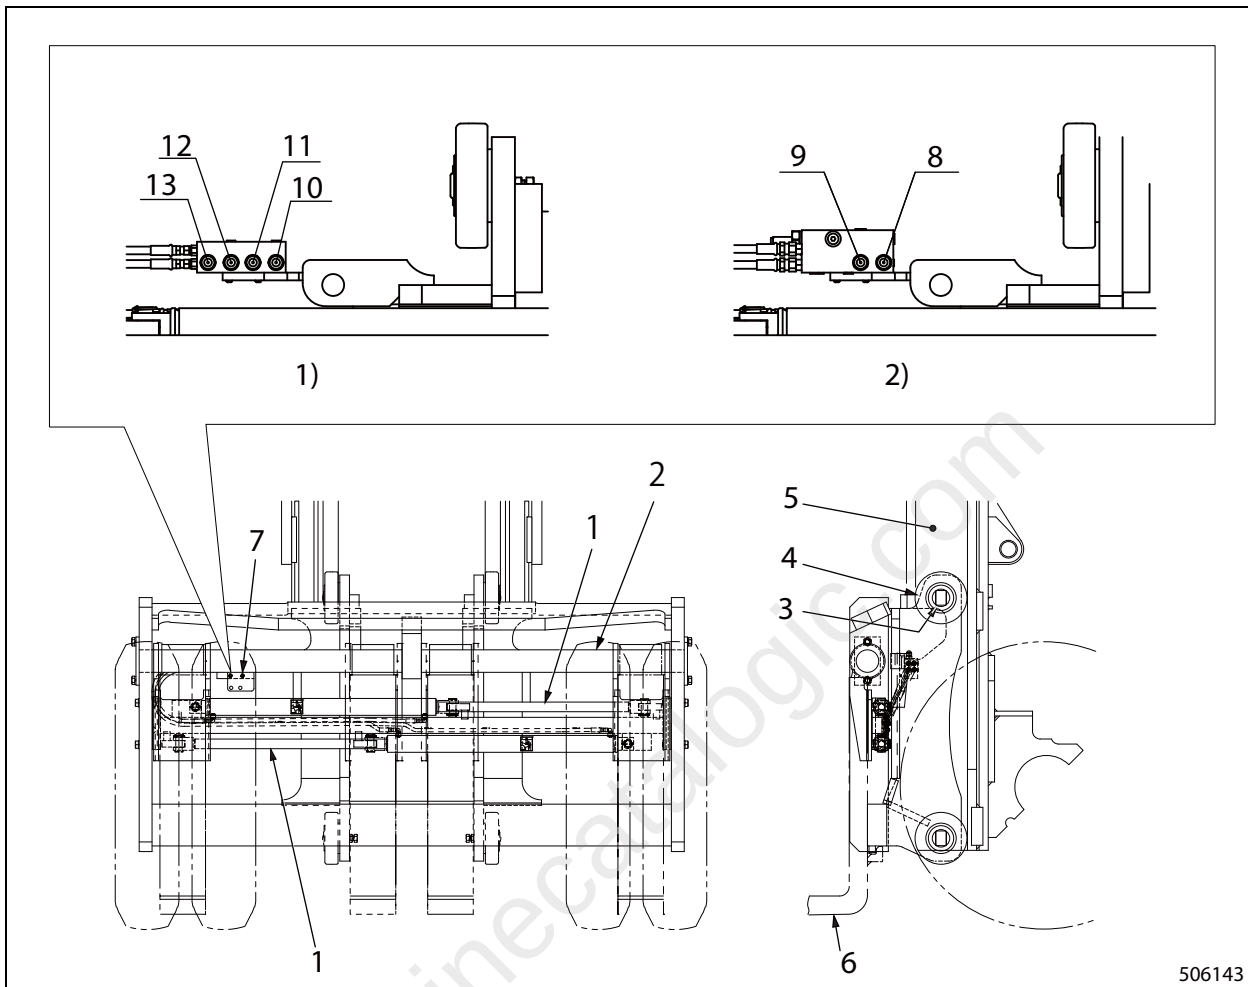


506143

- | | |
|------------------------------|--|
| 1. Fork positioner cylinders | 8. Forks outward |
| 2. Fork guide bar | 9. Forks inward |
| 3. Side roller | 10. Left fork outward |
| 4. Main roller | 11. Left fork inward |
| 5. Mast | 1. Right fork outward |
| 6. Forks | 12. Right fork inward |
| 7. Piping | 1) Piping for simultaneous fork positioner |
| | 2) Piping for individual fork positioner |

- The fork positioner is an attachment that enables the outside fork spread to be adjusted stepless from the minimum position to the maximum position.
 - The spread of the forks must be changed depending on the sizes of loads to ensure the stability of load.
 - The hydraulic fork positioner can smoothly adjust the fork position using hydraulic cylinders.
 - The fork positioner must be adjusted before picking up a load, as it cannot be adjusted while carrying the load on the fork.
 - The fork positioner cylinder is mounted between the fork bracket and the lift bracket, and the extending and retracting movements of the cylinder slide the fork blades sideways.
 - The right and left blades are independently adjustable.
- In the case of the simultaneous move type, one attachment lever operates the right and left blades simultaneously. In the case of the independent move type, two attachment levers operate the right and left blades independently.

11.3 Disassembly Sequence of Wheel Brake

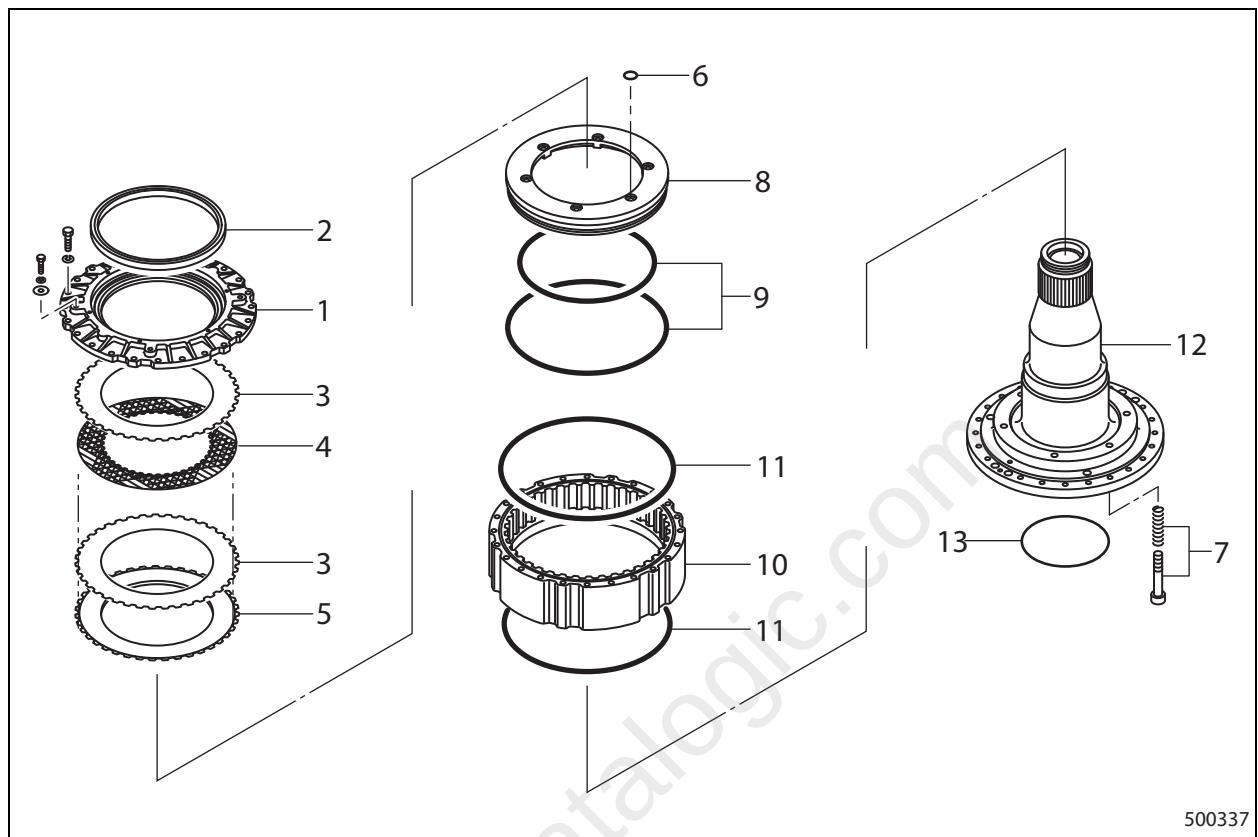

500337

1. Brake cover
2. Oil seal
3. Mating plate
4. Friction plate
5. End plate
6. Snapping
7. Return spring guide, Return spring

8. Brake piston
9. Piston seal
10. Brake housing
11. O-ring
12. Spindle
13. O-ring

Full Version Available

Mitsubishi FD100N1 Forklift Service Manual (99799-50100)

Mitsubishi FD100N1 forklift service manual PDF, covers engine, hydraulics, drive train, and wiring for shop repairs. Instant PDF download.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/mitsubishi-fd100n1-forklift-service-manual-99799-50100/)

<https://machinecatalogic.com/mitsubishi-fd100n1-forklift-service-manual-99799-50100/>