



# Service Manual

## Chassis, Mast & Options

|               |               |               |               |
|---------------|---------------|---------------|---------------|
| <b>FG40K</b>  | F29C-00011-up | <b>FD40K</b>  | F19C-00011-up |
| <b>FG40KL</b> | F29C-50001-up | <b>FD40KL</b> | F19C-50001-up |
| <b>FG45K</b>  | F29C-80001-up | <b>FD45K</b>  | F19C-80001-up |
| <b>FG50K</b>  | F33B-50001-up | <b>FD50K</b>  | F28B-50001-up |

- (2) To install the differential case assembly to the front axle housing, clean the mounting flange surfaces, and apply sealant to the surfaces, then tighten the bolts.
- (3) To install the engine mount nuts, first tighten the nuts until they come in contact with the mounts. From that position, retighten them more 1/4 turn to align the split pin grooves of the nut with the pin hole of the bolt.
- (4) Fill the radiator with antifreeze coolant up to the specified level. Unless otherwise specified, use a solution of 35% concentration. Water should be free from scale forming minerals.
- (5) Fill the transmission, reduction bevel gear and differential, front axle and torque converter with the specified amount (and type) of oil upon adjustment.
- (6) Bleed air out of the brake lines.
- (7) Check the oil level in the hydraulic tank, and add oil, if necessary.
- (8) Inspection after starting the engine  
After starting the engine for the first time, observe its running condition. If the engine vibrates excessively, retighten the mounting bolts to see if this tightening has any effect.
- (9) Installation of the overhead guard  
Tighten the overhead guard mounting bolts to the following torque.

|                   |                                          |
|-------------------|------------------------------------------|
| Tightening torque | 14.5 N·m<br>(6.6 kgf·m)<br>[10.7 lbf·ft] |
|-------------------|------------------------------------------|

# Service Data

A: Standard value B: Repair or service limit

Unit: mm (in.)


| Item                                                                          |            | Truck Model | FG40K, FG40KL, FG45K<br>FD40K, FD40KL, FD45K | FG50K<br>FD50K |
|-------------------------------------------------------------------------------|------------|-------------|----------------------------------------------|----------------|
| Oscillating angle (each side)                                                 |            | A           | 3°                                           |                |
| Toe-in                                                                        |            | A           | 0                                            |                |
| Caster                                                                        |            | A           | 0°                                           |                |
| Camber                                                                        |            | A           | 1°                                           |                |
| Length of tie rod (center to center of ball studs)                            | Left 1     | A           | 550.7 (21.68)                                |                |
|                                                                               | Right 2    | A           | 543.6 (21.40)                                |                |
| As installed length (thread length) of ball studs                             | Left 3     | A           | 14.35 (0.56)                                 |                |
|                                                                               | Right 4    | A           | 10.8 (0.43)                                  |                |
| Tightening torque of tie rod end lock nuts 5<br>N·m (kgf·m) [lbf·ft]          |            | A           | 98 (10) [72.3]                               |                |
| Tightening torque of knuckle stopper bolt lock nuts 6<br>N·m (kgf·m) [lbf·ft] |            | A           | 16.7 (1.7) [12.3]                            |                |
| Back-and-forth play of axle center pin 7 (total)                              | A          | 0.8 (0.031) |                                              |                |
|                                                                               | B          | 1.2 (0.05)  |                                              |                |
| Tightening torque of bearing support mounting bolts 8<br>N·m (kgf·m) [lbf·ft] |            | A           | 291 (29.7) [215]                             |                |
| Tightening torque of tie rod ball joint castle nuts 9<br>N·m (kgf·m) [lbf·ft] |            | A           | 157 (16) [116]                               |                |
| Steering angle                                                                | Inside 10  | A           | 83°                                          |                |
|                                                                               | Outside 11 | A           | 56°33'                                       |                |

203589

203589

# Triplex Mast

## Disassembly

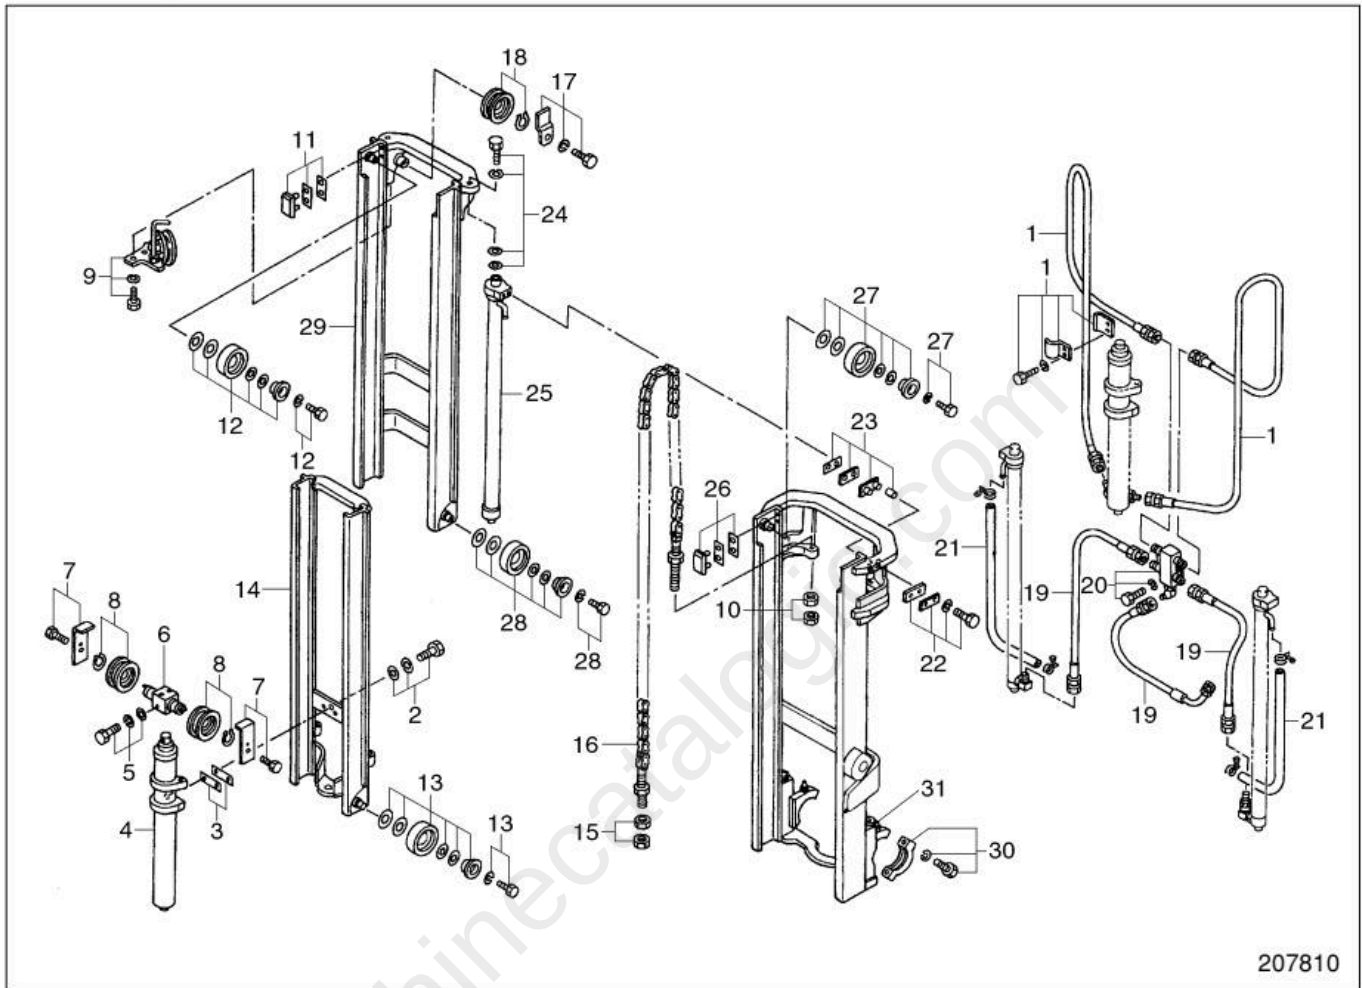

207810

## Sequence

- 1 Hose for first lift cylinder, Clamp, Bolt, Washer
- 2 Bolt, Washer
- 3 Shims
- 4 First lift cylinder
- 5 Stopper bolt, Washer
- 6 Chain wheel support
- 7 Chain guard, Plug
- 8 Snap ring, Chain wheel
- 9 Pulley bracket, Pulley, Bar, Bolt
- 10 Nut (chain for second lift cylinder)
- 11 Mast strip, Shims
- 12 Main roller, Shims
- 13 Main roller, Shims
- 14 Inner mast
- 15 Nuts
- 16 Lift chain (for second lift cylinder)
- 17 Chain guard, Bolt
- 18 Snap ring, Chain wheel
- 19 Hose, Band
- 20 Joint, Connector, Bolt, Washer
- 21 Hose, Clamp
- 22 Bolt, Seat, Cushion, Collar
- 23 Cushion, Shims, Bracket
- 24 Bolt, Washer, Shims
- 25 Second lift cylinder
- 26 Mast strip, Shims
- 27 Main roller, Shims
- 28 Main roller, Shims
- 29 Middle mast
- 30 Cap, Bolt, Washer
- 31 Outer mast, Grease nipple

## Inching Pedal Adjustment


### 1. Adjusting brake

- (1) Bleed air out of the brake lines from the reserve tank through master cylinder to the wheel cylinders.


**NOTE**

For bleeding, refer to page 10-25 in the "GROUP 10 BRAKE SYSTEM."


- (2) Screw the rod fully into the clevis on the brake pedal side.

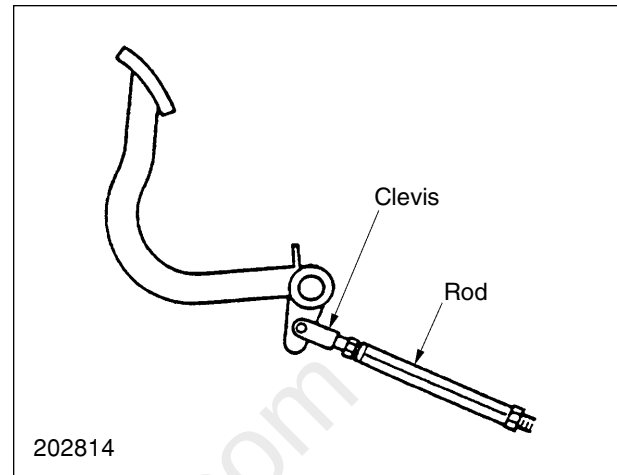

- (3) Screw the lock nut on the operating rod of booster. Screw the operating rod into the rod until the remaining thread length measures 14 mm (0.55 in.) and tighten the lock nut.

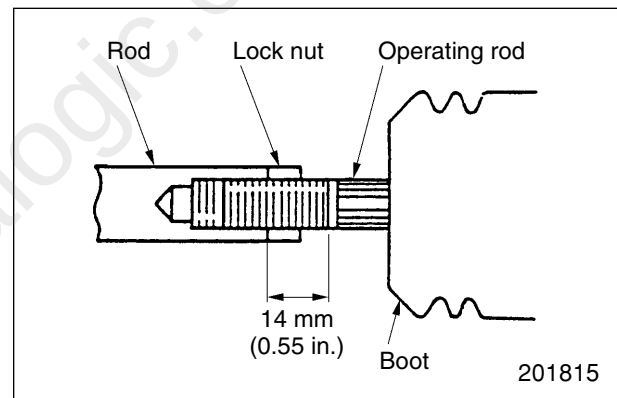

- (4) Adjust the brake pedal height **A** to 223 mm (8.8 in.) by turning the operating rod, and tighten the lock nut on the pedal side.
- (5) Decrease the brake pedal height **A** to 220 mm (8.7 in.) by the stopper bolt (until the operating rod push the booster slightly).

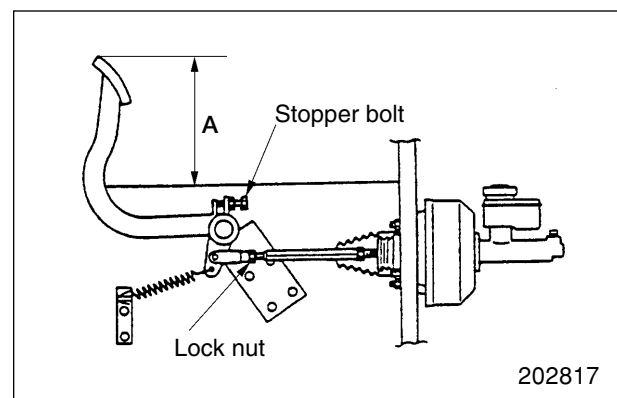

## Full Version Available

### Mitsubishi FD50K Forklift Service Manual (99739-16130)

Mitsubishi FD50K forklift service manual PDF, diesel engine, hydraulics, drivetrain, and wiring repair procedures. Instant PDF download.

**VIEW THE FULL MANUAL**

<https://machinecatalogic.com/mitsubishi-fd50k-forklift-service-manual-99739-16130/>