



MITSUBISHI FORKLIFT TRUCKS

Service Manual

Chassis & Mast

MC/FC

FG10N	F25C-00011-up	FGE10N	F25C-08011/18001-up
FG15N	F25C-50001-up	FGE15N	F25C-58001/68001-up
FG15ZN	F34-50011-up	FGE15ZN	F34-58011/68001-up
FG18N	F25C-70001-up	FGE18N	F25C-78001/88001-up
FG18ZN	F34-70001-up	FGE18ZN	F34-78001/88001-up
FG20CN	F34-20001-up	FGE20CN	F34-28001/38001-up
FG20N	F17D-00011-up	FGE20N	F17D-08011/18001-up
FG20ZN	F35-00011-up	FGE20ZN	F35-08011/18001-up
FG25N	F17D-50001-up	FGE25N	F17D-58001/68001-up
FG25ZN	F35-50001-up	FGE25ZN	F35-58001/68001-up
FG30N	F13F-30011-up	FGE30N	F13F-38011/48001-up
FG35AN	F13F-50001-up	FGE35AN	F13F-58001/68001-up
FD10N	F16D-00011/10001-up		
FD15N	F16D-50001/60001-up		
FD18N	F16D-70001/80001-up		
FD20CN	F16D-85001/87001-up		
FD20N	F18C-00011/10001-up		
FD25N	F18C-50001/60001-up		
FD30N	F14E-30011/40001-up		
FD35AN	F14E-50001/60001-up		

For use with S4Q2, S4S and K15/K21/K25 Engine
Service Manuals.

99719-15120

- (5) Put a check mark in the check box in the T/M (F) or T/M (R) * solenoid and press “Write.” (Fig. 2-11)
- (6) As the same as above (4), check “YES” when the write validity check box is displayed and also check “OK” when the write completed check box is displayed.
 - Do not check ON for both statuses of Forward and Backward at the same time to avoid the risk of damaging the controller.

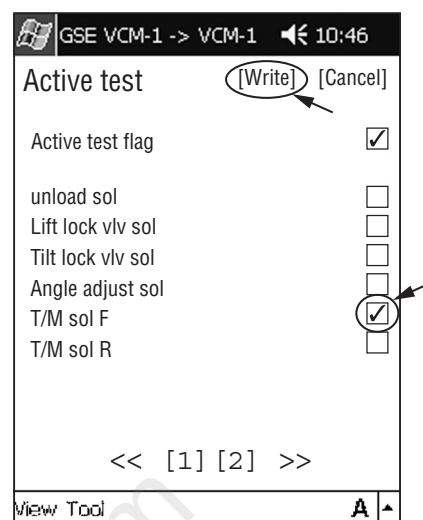


Fig. 2-11 Active Test Check Screen

- (7) Press “I/O Monitor” on the view menu which displayed by touching “View” bar of service tool screen (Fig. 2-12) and select Page [2] of I/O Monitor (Fig. 2-13).

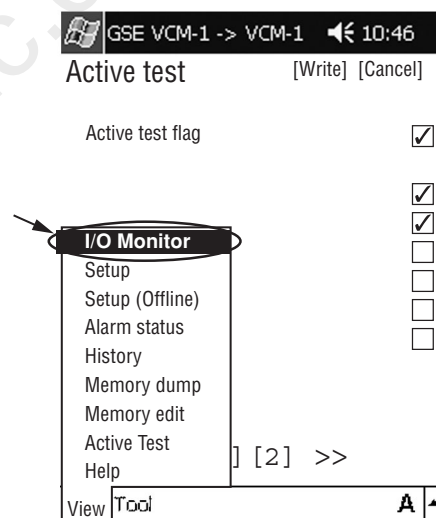


Fig. 2-12 View Menu (I/O Monitor Selection Screen)

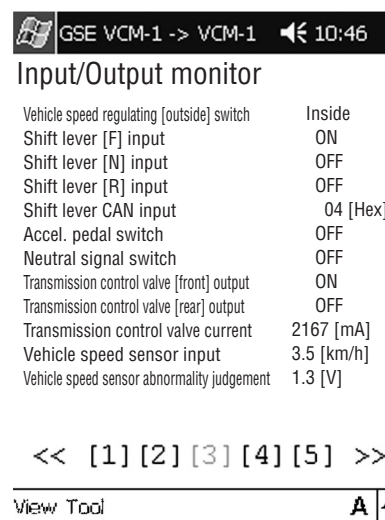


Fig. 2-13 I/O Monitor [2]

FRONT AXLE AND REDUCTION DIFFERENTIAL

(2) Hub bearing preload adjustment and lock nut

- (a) Install the nut hand-tight with a socket wrench (special tool).

Special tool needed

Truck Model Item	1 ton class	2, 3 ton classes
Socket wrench	91268 - 00800	03703 - 59001

- (b) Rotate the hub and tap its periphery with a soft-head mallet for snug assembling.
- (c) Fully tighten the lock nut to obtain hub bearing preload within the specified limits.

Notice: To check the hub bearing preload, hook a spring scale on the hub bolt, then pull it to measure the tangential force of the hub bolt.

Unit: N (kgf) [lbf]


Truck Model Item	1 ton class	2, 3 ton classes
Tangential force of hub bolt (increment from when preload is zero)	5.6 to 56 (0.6 to 5.7) [1.2 to 12.5]	4.5 to 45 (0.5 to 4.6) [1.0 to 10.1]
Starting torque of hub rotation (increment from when preload is zero)	0.5 to 4.9 N·m (0.05 to 0.5 kgf·m) [0.35 to 3.7 lbf·ft]	


- (d) Fit the lock ring into place and tighten the lock bolt.
- (e) Check the preload again.

(3) Drain plug


- (a) Tighten the drain plug to the specified torque.

Tightening torque	127.5 ± 9.8 N·m (13.0 ± 1.0 kgf·m) [94.0 ± 7.2 lbf·ft]
-------------------	--

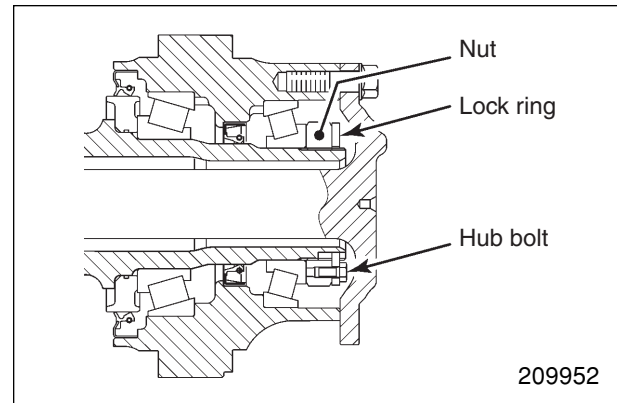

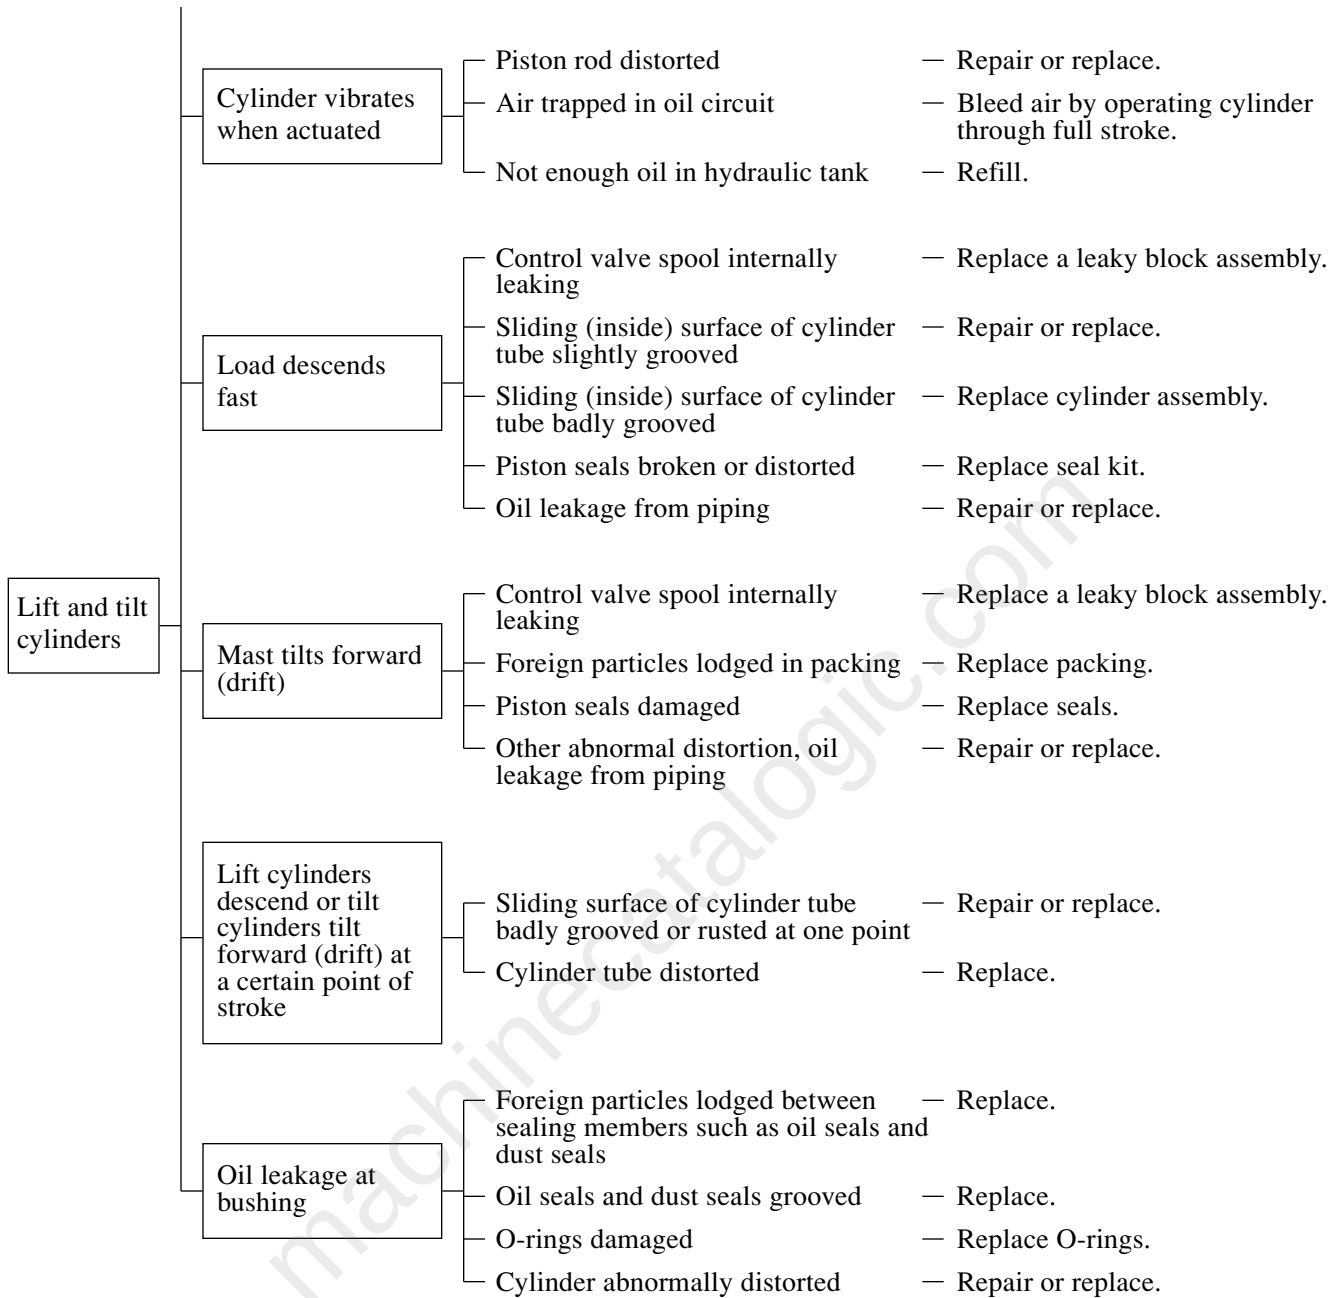

Disassembling Input Gear Assembly

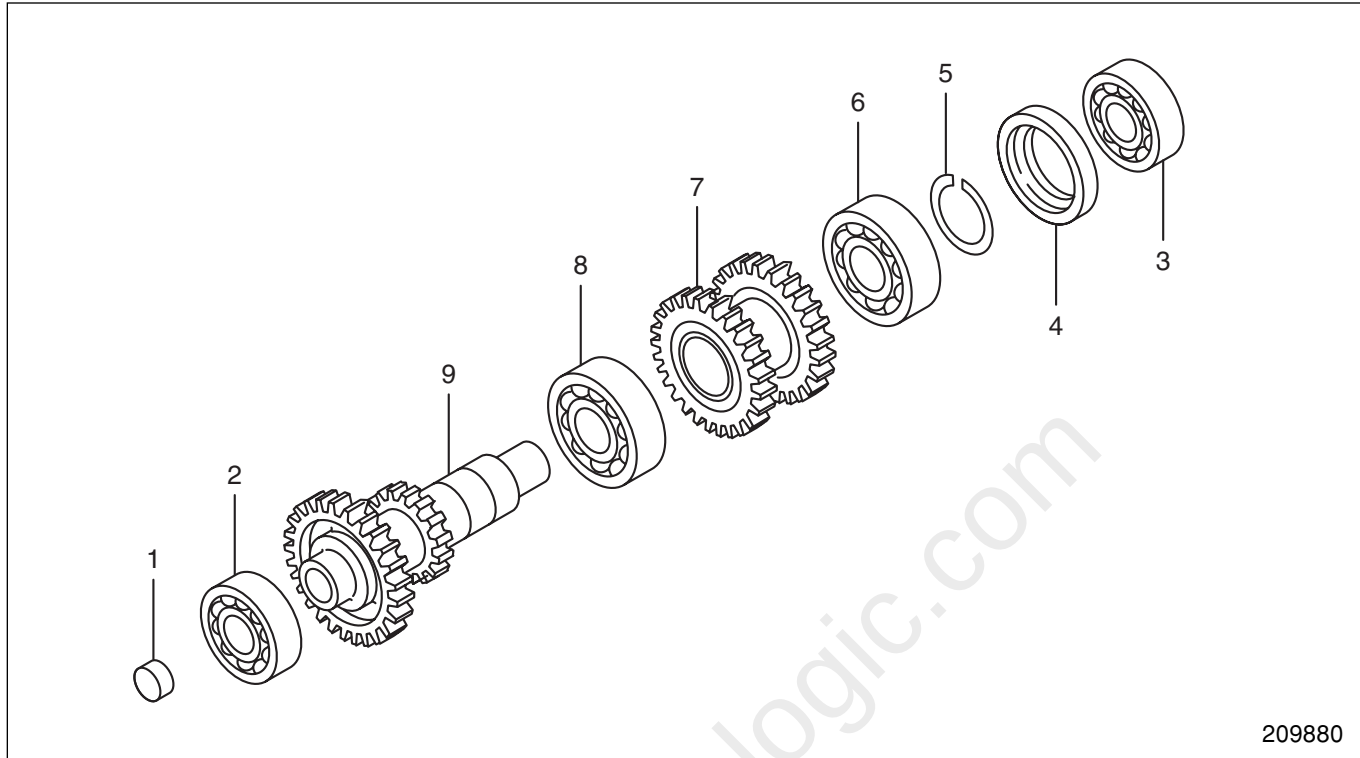


Sequence

- | | |
|----------------|----------------|
| 1 Sealing cap | 6 Ball bearing |
| 2 Ball bearing | 7 Idler gear |
| 3 Ball bearing | 8 Ball bearing |
| 4 Spacer | 9 Input gear |
| 5 Snap ring | |

Disassembling Output Gear

Sequence

- 1 Ball bearing
- 2 Output gear
- 3 Ball bearing

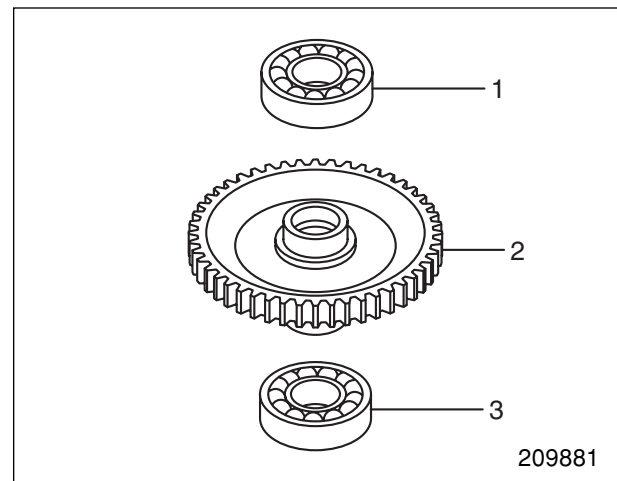

Full Version Available

Mitsubishi FGE15ZN Forklift Service Manual (99719-15120)

Mitsubishi FGE15ZN Forklift service manual, LPG truck engine, hydraulics, drive train and wiring repair procedures. Instant PDF download.

[VIEW THE FULL MANUAL](https://machinecatalogic.com/mitsubishi-fge15zn-forklift-service-manual-99719-15120/)

<https://machinecatalogic.com/mitsubishi-fge15zn-forklift-service-manual-99719-15120/>