


Ersatzteilkatalog

Spare parts catalogue

Catalogue de pièces de rechange

Catálogo de repuestos

Каталог запасных частей

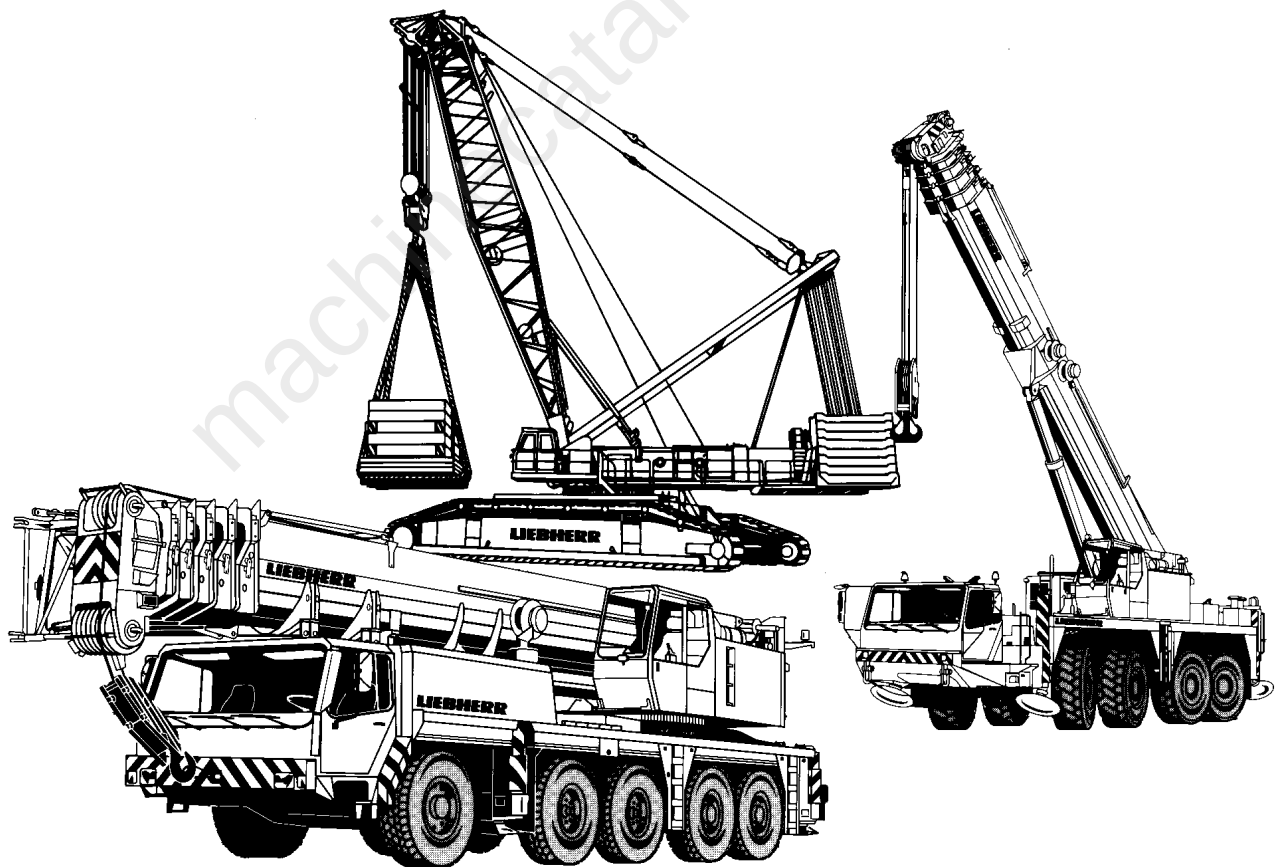

7.2.2012
025500

LIEBHERR

etk_de_en_063010 LTM 1095 5.1

LIEBHERR LTM 1095-5.1

1 (1/12)

LTM 1095-5-1-008

Pos.	Artikel	Menge	Bezeichnung	Description	Serie	K
1	10 02 177 6	1	VERTEILERGETRIEBE 2-STUFIG SPF ⇒ X10021776 10 02 177 6	DISTRIBUTOR GEARBOX		
2	51 21 265 08	1	ZAHNRADPUMPE	GEAR PUMP		
3	96 29 548 08	2	KONSOLE SCHWK.	BRACKET WELDED CONST.		
4	51 21 435 08	1	VERSTELLPUMPE SPF ⇒ 5 121 435 08 51 21 435 08	VARIABLE PUMP		
5	10 29 122 6	1	IMPULSGEBER L=35MM	IMPULS TRANSMITTER		
6	52 11 495 08	1	ACHSSTREBE 360	AXLE STRUT		
(1)	10 03 529 8	1	KUGELGELENK	UNIVERSAL JOINT		
(2)	10 03 529 7	1	KUGELGELENK	UNIVERSAL JOINT		
(4)	10 49 190 2	1	KLEMMSCHELLE	TERMINAL CLIP		
7	38 82 891 08	4	KLOTZ GS60	BRICK		
8	93 19 034 08	2	BOLZEN 0.0x40 5 42CRMO4+QT GASN. SPF	PIN		
9	10 02 320 1	4	SCHWINGELEMENT 40/75X88	VIBRATOR SYSTEM		
10	40 65 128 08	4	SECHSKANTSCHRAUBE ISO 4017 M12X30	HEX SCREW		
11	42 00 016 08	4	SCHEIBE ISO 7089 A 13 ST A3C	WASHER		
12	43 30 080 08	4	SPLINT DIN 94 6,3X63 ST VERZ	SPLIT PIN		
13	40 66 030 08	8	SECHSKANTSCHRAUBE ISO 4017 M16X40	HEX SCREW		
14	41 19 015 08	2	SECHSKANTMUTTER DIN 985 M18 10 A3C	HEX NUT		
15	40 62 206 08	2	SECHSKANTSCHRAUBE ISO 4014 M18X120	HEX SCREW		
18	51 13 226 08	1	VENTILBLOCK 240BAR 60L/MIN SPF ⇒ 5 113 226 08 51 13 226 08	VALVE BLOCK		
19	46 00 239	8	ZYLINDERSCHRAUBE ISO 4762 M10X90 8.8	SOCKET HEAD SCREW		
20	51 38 103 08	2	O-RING 101X3 FPM70	O-RING		
50	96 32 462 08	1	PNEUM.U.HYDR.VORM. VERTEILERGETR. ⇒ 1 411 035 96 32 462 08	HYDRAULICS		

7.2.2012

LIEBHERR

etk_de_en_063010 LTM 1095 5.1

VERTEILERGETRIEBE VORM.
TRANSFER CASE, PRE-ASSEMBLED

35 (2/2)

⇒ 1 411 031
96 28 218 08

Pos.	Artikel	Menge	Bezeichnung	Description	Serie	K
3	72 57 410 08	1	TUERSCHEIBE 4MM SPF	DOOR PANE		
6	70 42 764 08	1	DREHFALLENSCHLOSS	LOCK WITH FALLING LATCH		
8	95 65 247 08	1	DAEMMMATTE 18X942X470 PUR-SCHAUM	INSULATING MAT		
15	74 66 919 08	4	KURVENROLLE	CAM ROLLER		
17	72 66 108 08	2	KNOPF 285 GUMMI	BUTTON		
19	95 61 580 08	1	ROHR 8X1X6 E235+N VERZ	TUBE		
20	74 90 039 08	2	TOPFROLLE	CUP WHEEL		
21	70 42 287 08	1	GRIFFMULDE 130.5X70X36 KUNSTSTOFF	FINGER-HOLD		
24	72 01 085 08	1	ZUGFEDER	TENSION SPRING		
25	49 00 539	3	SECHSKANTSCHRAUBE ISO 4017 M6X25 8.	HEX SCREW		
26	41 15 140 08	2	SECHSKANTMUTTER ISO 4032 M6 8 A2C	HEX NUT		
27	40 97 043 08	2	FLACHKOPFSCHRAUBE AEHNL.ISO 7380 M	PAN-HEAD SCREW		
28	49 00 089	4	SECHSKANTSCHRAUBE ISO 4017 M8X20 8.	HEX SCREW		
29	42 00 012 08	20	SCHEIBE ISO 7089 A 8 ST A2C	WASHER		
30	41 19 004 08	4	SECHSKANTMUTTER DIN 985 M6 8 A2C	HEX NUT		
31	49 00 188	12	SECHSKANTSCHRAUBE ISO 4017 M8X16 8.	HEX SCREW		
32	41 19 006 08	2	SECHSKANTMUTTER DIN 985 M10 8 A3C	HEX NUT		
33	40 82 507 08	10	BLECHSCHRAUBE DIN 7981 4,2X9,5-C-H ST	SHEET-METAL SCREW		
34	41 19 005 08	8	SECHSKANTMUTTER DIN 985 M8 8 A2C	HEX NUT		
35	40 00 829	1	SECHSKANTSCHRAUBE ISO 4017 M6X20 8.	HEX SCREW		
36	42 18 010 08	2	SCHEIBE DIN 9021 A 10 ST A3C	WASHER		
37	42 00 009 08	1	SCHEIBE ISO 7089 A 6 A2C	WASHER		
38	46 35 059	2	SENKSCHEIBE ISO 10642 M8X35 8.8 A3C	COUNTERSUNK SCREW		
39	42 18 009 08	2	SCHEIBE DIN 9021 A 8 ST A2C	WASHER		
40	40 86 002 08	4	SENKSCHEIBE DIN 7991 M6X16 8.8 A2C	COUNTERSUNK SCREW		
41	72 40 160 08	1	VERRIEGELUNGSZUG L=430MM	LOCKING CABLE		
(5)	10 80 091 6	1	RAENDELKNOPF PA	KNURLED BUTTON		
45	97 01 940 08	1	AUFLAUFKEIL	STOPPING WEDGE		
46	40 83 000 08	3	ZYLINDERSCHRAUBE DIN 7984 M4X10 8.8 V	SOCKET HEAD SCREW		
48	40 00 899	1	ZYLINDERSCHRAUBE ISO 4762 M5X30 8.8	SOCKET HEAD SCREW		
49	72 51 002 08	1	GABELKOPF DIN 71752 6X24 VERZ.GELB PA	YOKE		
50	41 15 142 08	1	SECHSKANTMUTTER ISO 4032 M4 8 A2C	HEX NUT		
51	41 30 029 08	2	KAFIGMUTTER M6	CAGE NUT		
52	50 26 088 08	4	DICHTRING	SEALING RING		
53	49 02 007	2	SENKSCHEIBE DIN 7991 M6X40 8.8 A2C	COUNTERSUNK SCREW		
54	42 18 007 08	2	SCHEIBE DIN 9021 A 6.4 A2C	WASHER		
55	60 30 169 08	0.35	SCHRUMPFSCHLAUCH 27 - 8	HEATSHRINK SLEEVING		

7.2.2012


etk_de_en_063010 LTM 1095 5.1

351 (3/3)

LIEBHERR

TUER KPL.
DOOR CPL.

⇒ 2 522
91 10 037 08

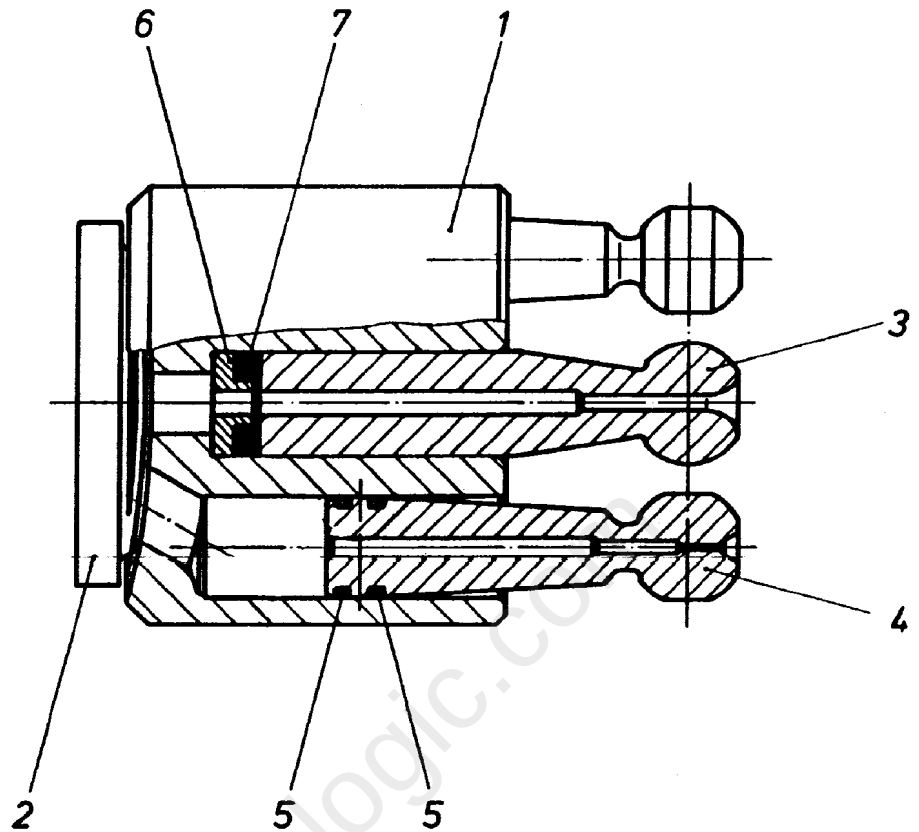

Pos.	Artikel	Menge	Bezeichnung	Description	Serie	K
1	57 01 103 08	1	ZYLINDER	CYLINDER		
2	57 01 104 08	1	STEUERPLATTE	GUIDE PLATE		
3	57 01 105 08	1	MITTELZAPFEN	CENTER STUD		
4	57 01 106 08	7	KOLBEN	PISTON		
5	57 01 107 08	14	RING	RING		
6	57 01 108 08	1	FEDERTELLER	SPRING SUPPORT		
7	57 01 109 08	4	TELLERFEDER	DISC SPRING		

7.2.2012
100572


LIEBHERR

etk_de_en_063010 LTM 1095 5.1

TRIEBWERK
DRIVING GEAR

601

⇒ 5 701 095 08
57 01 095 08

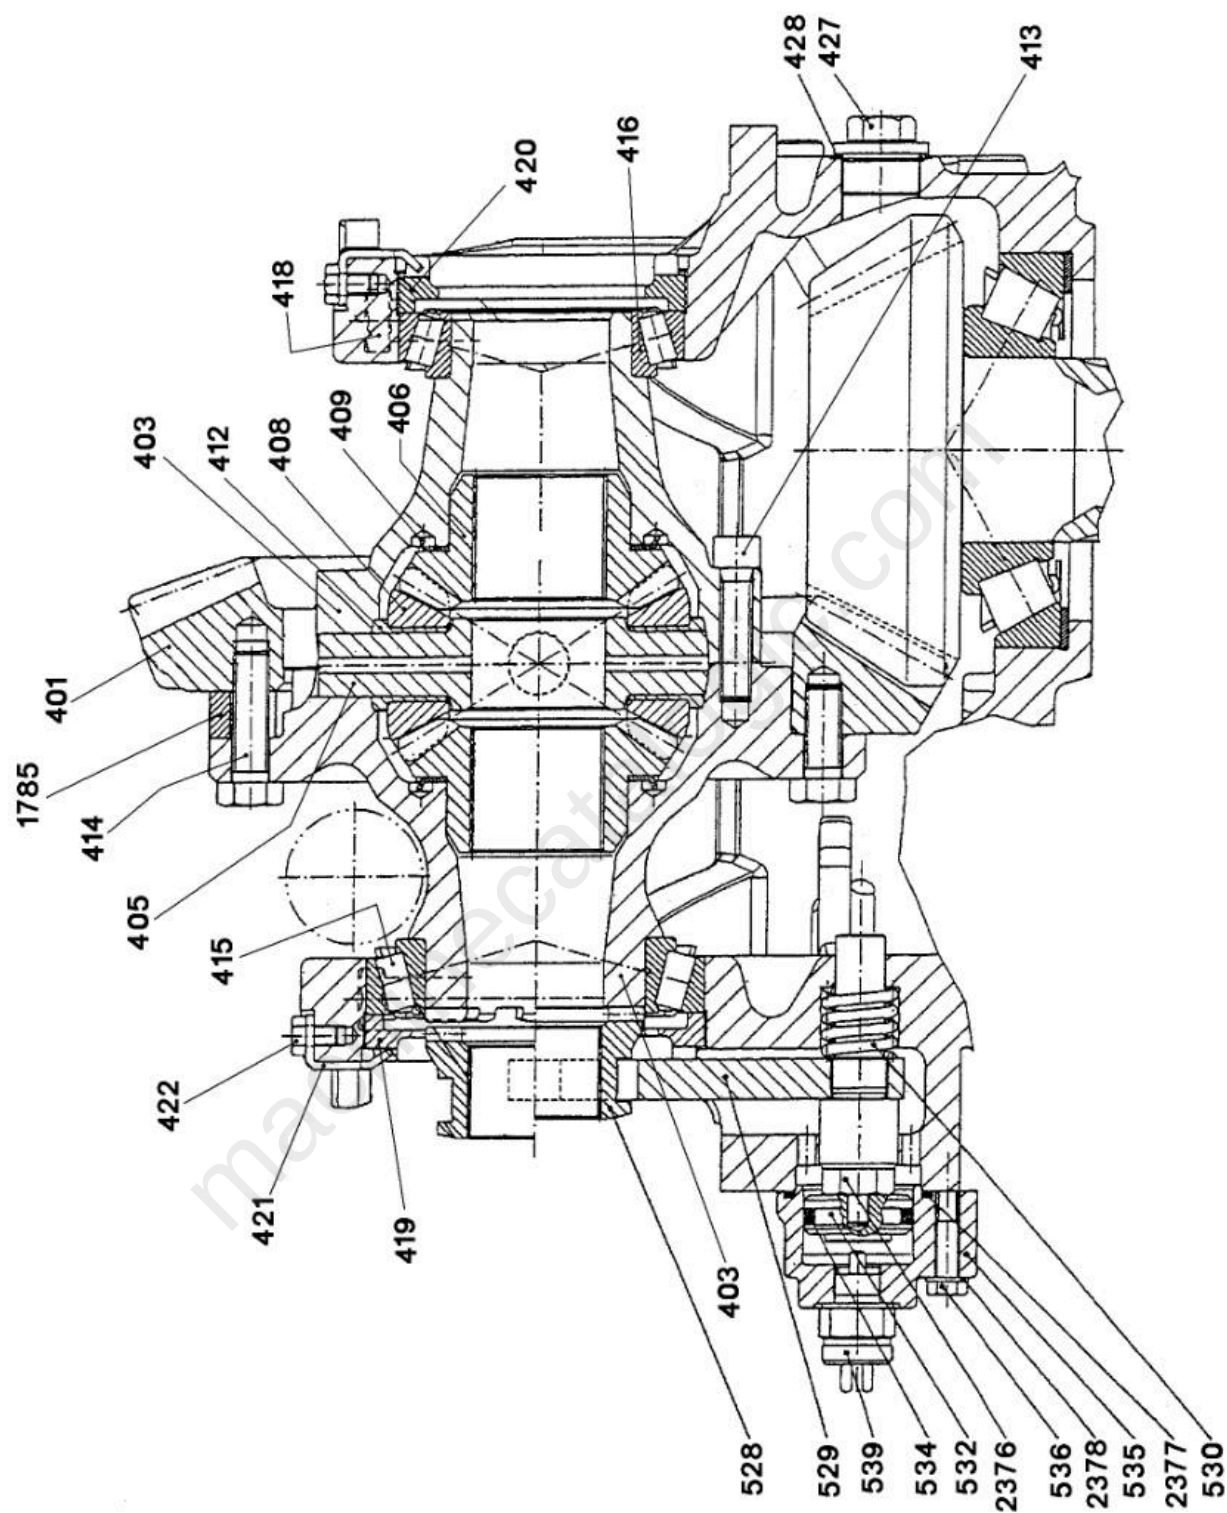

Bezeichnung	Artikel	Pos.	Menge	Seite	Baugruppe	Bezeichnung
FLACHKOPFSCHRAUBE DIN 7	40 83 107 08	41	2	X1002271	10 02 271 6	WASSERHEIZGERAET
FLACHKOPFSCHRAUBE ISO 7	40 83 112 08	4	4	2 913 003	96 20 599 08	FOLIENASTATUR VORM.
FLACHKOPFSCHRAUBE ISO 70	10 03 064 2	6	2	2 913 007	96 20 763 08	CONTROLLEREINHEIT
FLACHKOPFSCHRAUBE ISO 7	40 84 007 01	4	2	2 913 005	96 20 731 08	INNENGEHAEUSE VORM.
FLACHKOPFSCHRAUBE ISO 7	40 83 114 08	3	4	2 913 006	96 20 732 08	LUEFTERBLECH VORM.
FLACHKOPFSCHRAUBE ISO 70	40 84 005 01	3	8	2 913 005	96 20 731 08	INNENGEHAEUSE VORM.
FLACHKOPFSCHRAUBE ISO 70	40 84 005 01	4	3	2 913 007	96 20 763 08	CONTROLLEREINHEIT
FLACHKOPFSCHRAUBE ISO 7	46 35 338	9	4	2 260	91 61 098 08	BATTERIEKASTEN KPL.
FLACHKOPFSCHRAUBE ISO 7	46 35 338	7	2	2 780 244	91 60 743 08	NOTAUS KRANFUEHRERKAB
FLACHKOPFSCHRAUBE ISO 7	46 00 975	20	4	1 932	91 53 293 08	BELEUCHTUNG KANADA
FLACHKOPFSCHRAUBE ISO 7	46 00 975	50	8	1 932 239	96 23 209 08	STOSSSTANGE KPL.M.BEL.
FLACHKOPFSCHRAUBE ISO 70	40 02 485	8	4	2 500 013	91 60 306 08	KRANFUEHRERKABINE VORM
FLACHKOPFSCHRAUBE ISO 7	40 84 021 01	8	2	2 260 006	96 31 147 08	BATTERIEKASTEN VORM.
FLACHKOPFSCHRAUBE ISO 7	40 84 021 01	11	3	2 975 904	96 65 132 08	MECH.BEFESTIGUNGSTEILE
FLACHKOPFSCHRAUBE ISO 7	40 84 021 01	8	3	3 750 011	92 51 440 08	HALTER VORM.
FLACHKOPFSCHRAUBE ISO 7	40 84 023 01	4	4	1 780 180	91 26 161 08	FREMDEINSPEISUNG
FLACHKOPFSCHRAUBE ISO 7	40 84 023 01	158	2	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHKOPFSCHRAUBE ISO 7	40 84 023 01	4	4	2 780 900	91 60 277 08	FREMDEINSPEISUNG
FLACHKOPFSCHRAUBE ISO 7	40 84 023 01	82	2	2 932 152	96 58 697 08	GRUNDAUFBAU KPL.
FLACHKOPFSCHRAUBE ISO 7	40 02 307	18	4	1 780 300	91 56 488 08	EL.AUSRUESTUNG TELMA
FLACHKOPFSCHRAUBE ISO 7	40 02 306	209	4	1 811	91 49 644 08	FAHRERHAUS VERGLAST
FLACHKOPFSCHRAUBE ISO 7	40 02 306	102	3	1 932	91 53 293 08	BELEUCHTUNG KANADA
FLACHKOPFSCHRAUBE ISO 7	46 00 775	299	4	1 811	91 49 644 08	FAHRERHAUS VERGLAST
FLACHKOPFSCHRAUBE ISO 7	49 01 326	3	5	1 670 001	96 56 650 08	KRAFTSTOFFBEHALTER VO
FLACHKOPFSCHRAUBE ISO 7	46 00 723	39	4	2 540	91 56 741 08	HEIZUNG OW
FLACHKOPFSCHRAUBE ISO 7	46 00 723	20	7	5 714 118	57 14 118 08	TRIEBWERK
FLACHKOPFSCHRAUBE ISO 7	46 35 128	107	2	2 520	91 55 224 08	KABINE VERGLAST
FLACHKOPFSCHRAUBE ISO 70	46 01 361	15	2	5 026 126	50 26 126 08	MAGNETVENTIL
FLACHKOPFSCHRAUBE K4X18	40 97 110 08	74	4	1 860	91 58 564 08	REIFENVERKLEIDUNG
FLACHKOPFSCHRAUBE K4X18	40 97 110 08	(6)	2	1 932	91 53 293 08	BELEUCHTUNG KANADA
FLACHKOPFSCHRAUBE M5X	70 29 464	44	3	X1002271	10 02 271 6	WASSERHEIZGERAET
FLACHRUNDSCHRAUBE DIN	40 28 018 08	10	2	1 434 004	92 52 674 08	MOTORLAGERUNG VORM.
FLACHRUNDSCHRAUBE DIN	40 28 018 08	310	4	2 210 008	96 48 137 08	KUEHLER VORM.
FLACHRUNDSCHRAUBE DIN 6	40 28 026 14	321	2	2 210 008	96 48 137 08	KUEHLER VORM.
FLACHSCHELLE 88,9 EDELST	55 20 975 08	184	3	2 680	91 53 770 08	ABGASANLAGE
FLACHSICHERUNG DIN 72581	10 28 045 7	95	1	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 071 08	92	26	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 071 08	9	1	2 920 083	96 49 760 08	ELEKTRIK BATTERIEKASTEN
FLACHSICHERUNGSEINSATZ	60 40 071 08	13	3	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 072 08	93	2	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 072 08	14	5	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 073 08	94	16	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 073 08	15	6	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 076 08	16	1	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 077 08	91	2	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 077 08	96	2	1 830 008	96 67 822 08	MITTELKONSOLE VORM.
FLACHSICHERUNGSEINSATZ	60 40 077 08	5	1	2 780 870	91 70 947 08	LADESPANNUNGSREGLER
FLACHSICHERUNGSEINSATZ	60 40 077 08	10	10	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 069 08	11	8	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSICHERUNGSEINSATZ	60 40 070 08	12	15	2 932	91 58 585 08	EINBAUTEILE SCHALTSCHRAN
FLACHSTECKER 6,3 - 2,5	60 22 039 08	75	2	2 780 050	96 58 973 08	LEITUNG
FLACHSTECKERGEHAEUSE 15	10 09 984 0	512	2	1 830 058	96 67 804 08	DRAEHTE KPL.ARMATUR
FLACHSTECKERGEHAEUSE 1	60 23 233 08	514	23	1 830 058	96 67 804 08	DRAEHTE KPL.ARMATUR
FLACHSTECKERGEHAEUSE 1	60 23 233 08	502	49	2 932 153	96 58 698 08	DRAEHTE GRUNDAUFBAU KPL
FLACHSTECKERGEHAEUSE 2	60 23 059 08	501	1	2 780 050	96 58 973 08	LEITUNG
FLACHSTECKERGEHAEUSE 2	60 23 059 08	521	1	2 932 153	96 58 698 08	DRAEHTE GRUNDAUFBAU KPL
FLACHSTECKERGEHAEUSE 4	60 22 089 08	531	1	1 830 058	96 67 804 08	DRAEHTE KPL.ARMATUR
FLACHSTECKERGEHAEUSE 6	60 23 256 08	527	12	1 830 058	96 67 804 08	DRAEHTE KPL.ARMATUR
FLACHSTECKERGEHAEUSE 6	60 23 256 08	516	12	2 932 153	96 58 698 08	DRAEHTE GRUNDAUFBAU KPL
FLACHSTECKHUELSE 6,3 0,3 -	60 22 037 08	(63)	3	3 780 249	91 58 612 08	ELEKTRIK 2.HUBENDSCHALTE

7.2.2012

etk_de_en_063010 LTM 1095 5.1

1114

LIEBHERRAlphabetischer Index
Alphabetical index

Description	Item	Pos.	Quantity	Page	Assembly	Description
MULTI-PLATE PLUG	10 33 340 4	293	4	1 811	91 49 644 08	DRIVER'S CABIN, GLAZED
MULTI-PLATE PLUG PE-LLD	77 90 205 08	15	2	2 270 005	96 57 490 08	FUEL TANK, PRE-ASSEMBLED
MUSHROOM HANDLE	70 40 045 08	3	1	1 811 109	96 22 361 08	COVER PRE-ASS.
MUSHROOM-SHAPED DRAWI	97 26 664 08	11	1	3 103	91 60 036 08	TELESCOPIC SECT.2 PRE-AS
MUSHROOM-SHAPED DRAWI	97 26 219 08	11	1	3 102	91 60 035 08	TELESCOPIC SECTION 1 PRE
NAME PLATE 20X8	60 27 614 08	60	20	2 932 152	96 58 697 08	BASE ASSEMBLY CPL.
NAME PLATE 20X8	60 27 614 08	12	10	2 932 166	92 68 911 08	GROUND RAIL
NAME PLATE 25,4X101,6	60 27 601 08	1	5	1 831 010	96 38 136 08	HOSE LINES AIR CONDITIONIN
NAME PLATE 25,4X101,6	60 27 601 08	1	116	1 997	91 59 650 08	HOSE LINES UNDERCARRIAG
NAME PLATE 25,4X101,6	60 27 601 08	(1)	5	2 831	91 58 592 08	AIR COND. UNIT SUPERSTRU
NAME PLATE 25,4X101,6	60 27 601 08	1	3	2 970 061	96 63 335 08	HOSE LINES ADDITIONAL PA
NAME PLATE 25,4X101,6	60 27 601 08	(1)	12	2 971 000	96 58 067 08	HYDR.AUXILIARY HOISTING
NAME PLATE 25,4X101,6	60 27 601 08	1	3	2 975 059	96 51 074 08	HOSE LINES AIR FLAP
NAME PLATE 25,4X101,6	60 27 601 08	1	3	2 975 451	96 62 980 08	HOSE LINES TELESCOPIC
NAME PLATE 25,4X101,6	60 27 601 08	(1)	13	2 975 906	96 65 104 08	HYDRAULICS DOLLY
NAME PLATE 25,4X101,6	60 27 601 08	1	58	2 997	91 62 300 08	HOSE LINES SUPERSTRUCT
NAME PLATE 25,4X101,6	60 27 601 08	(1)	6	3 975 015	96 58 089 08	ADDNL.HYDR. FOLDING JIB
NAME PLATE 25,4X165,1	60 27 602 08	(1)	1	1 955	91 26 195 08	PNEUMAMATIC DRIVER'S CABI
NAME PLATE 25,4X165,1	60 27 602 08	1	6	1 971 038	96 32 058 08	HOSE LINES MIRROR ATACH
NAME PLATE 25,4X165,1	60 27 603 08	2	64	1 997	91 59 650 08	HOSE LINES UNDERCARRIAG
NAME PLATE 25,4X165,1	60 27 603 08	2	5	2 970 061	96 63 335 08	HOSE LINES ADDITIONAL PA
NAME PLATE 25,4X165,1	60 27 603 08	(2)	5	2 971 000	96 58 067 08	HYDR.AUXILIARY HOISTING
NAME PLATE 25,4X165,1	60 27 603 08	2	3	2 975 451	96 62 980 08	HOSE LINES TELESCOPIC
NAME PLATE 25,4X165,1	60 27 603 08	(2)	2	2 975 906	96 65 104 08	HYDRAULICS DOLLY
NAME PLATE 25,4X165,1	60 27 603 08	2	34	2 997	91 62 300 08	HOSE LINES SUPERSTRUCT
NAME PLATE 70X40 POLYES	10 28 812 1	(2)	4	1 830 008	96 67 822 08	CENTRE BRACKET PRE-ASS.
NAME PLATE 70X40 POLYES	10 28 812 1	(980)	1	2 932	91 58 585 08	SWITCHBOX MOUNTING PART
NAME PLATE 70X40 POLYES	10 28 812 1	980	1	9 647 939	96 47 939 08	LICCON MONITOR LCD5
NAVIGATION LIGHT 0,5W 10-28	10 03 576 8	20	1	1 813	91 50 671 08	DOOR LEFT, CPL.
NAVIGATION LIGHT 0,5W 10-28	10 03 576 8	20	1	1 814	91 51 538 08	DOOR RIGHT, CPL.
NAVIGATION LIGHT 5W 12/24V	60 71 478 08	266	2	1 833	91 57 921 08	ELECTRIC FOR DRIVER'S CABI
NEEDLE BEARING 32X20	53 01 657 08	984	1	X1002177	10 02 177 6	DISTRIBUTOR GEARBOX
NEEDLE BUSH	57 18 067 08	20	1	5 718 017	57 18 017 08	PUMP
NEEDLE BUSH	57 18 067 08	120	1	5 718 018	57 18 018 08	CONTROL
NEEDLE BUSH DIN 618 HK 171	52 11 925 08	12	1	5 211 034	52 11 034 08	ANGULAR GEAR
NEEDLE BUSH DIN 618 HK 302	52 11 639 08	29	1	5 211 034	52 11 034 08	ANGULAR GEAR
NEEDLE CAGE AX.	57 17 887 08	250	2	5 718 729	57 18 729 08	DRIVE SHAFT
NEEDLE ROLLER DIN 5402 12	74 70 040 01	17	114	9 329 175	93 29 175 01	PLANETARY GEARBOX
NEEDLE ROLLER DIN 5402 7X	57 18 183 08	250	3	5 717 885	57 17 885 08	SYNCHRONIZATION COMPL.
NEEDLE SET 45-20	53 00 352 08	329	18	X1004212	10 04 212 1	DRIVEN STEERING AXLE
NEEDLE SET 45-20	53 00 352 08	329	24	X1004212	10 04 212 3	DRIVEN STEERING AXLE
NEEDLE SET 45-20	53 00 352 08	329	24	X1004212	10 04 212 5	DRIVEN STEERING AXLE
NEEDLE SET 45-20	53 00 352 08	329	24	X1004212	10 04 212 6	DRIVEN STEERING AXLE
NILOS RING	74 72 584 01	4	1	9 330 748	93 30 748 01	SLEWING GEAR
NON-RETURN VALVE	10 01 239 5	9	2	9 739 268	97 39 268	EXHAUST GAS RECIRCULATIO
NON-RETURN VALVE	10 28 021 6	30	1	5 113 226	51 13 226 08	VALVE BLOCK
NON-RETURN VALVE	10 34 289 3	20	1	5 113 226	51 13 226 08	VALVE BLOCK
NON-RETURN VALVE	10 43 004 2	91	1	X1033367	10 33 367 2	CONTROL BLOCK
NON-RETURN VALVE	11 00 721 9	3	4	X1100291	11 00 291 4	DISTRIBUTION BLOCK
NON-RETURN VALVE	11 17 027 7	3	1	X5113066	51 13 066 08	CONTROL BLOCK
NON-RETURN VALVE	50 29 390 08	157	1	1 950 000	96 64 931 08	PIPEWORK AIR INSTALLATIO
NON-RETURN VALVE	51 04 098 08	162	3	2 970	96 58 060 08	HYDRAULICS UPPER CARRI
NON-RETURN VALVE	51 04 098 08	161	1	2 971 000	96 58 067 08	HYDR.AUXILIARY HOISTING
NON-RETURN VALVE	51 04 120 08	166	1	2 970	96 58 060 08	HYDRAULICS UPPER CARRI
NON-RETURN VALVE	51 04 121 08	152	2	1 432	96 71 969 08	STEERING PIPEWORK
NON-RETURN VALVE	51 04 132 08	13	1	1 671 001	96 61 796 08	OIL TANK PRE-ASS.
NON-RETURN VALVE	51 04 135 08	170	1	2 970	96 58 060 08	HYDRAULICS UPPER CARRI
NON-RETURN VALVE	51 07 413 08	4	8	5 113 078	51 13 078 08	CONTROL PLATE
NON-RETURN VALVE	51 14 324 08	178	1	2 970	96 58 060 08	HYDRAULICS UPPER CARRI
NON-RETURN VALVE	51 14 324 08	160	1	2 971 000	96 58 067 08	HYDR.AUXILIARY HOISTING

7.2.2012

etk_de_en_063010 LTM 1095 5.1

1316

LIEBHERRAlphabetischer Index
Alphabetical index

Full Version Available

Liebherr LTM 1095-5.1 All Terrain Crane Parts Manual

Liebherr LTM 1095-5.1 all terrain crane parts manual, PDF with parts lists, exploded views and assemblies. Instant PDF download.

VIEW THE FULL MANUAL

<https://machinecatalogic.com/liebherr-ltm-1095-5-1-all-terrain-crane-parts-manual/>

Book No: LTM 1095-5-1-008 · File Pages: 1,396 · File Count: 1 · File Language: English, German