MUSTANG®

OPERATOR'S MANUAL

000-58833

Revision I – April 1984
Revision II – April 1985
Revision III – April 1986
Revision IV – July 1987

342 MUSTANG LOADER

PRODUCTS OF AUSTOFT INC. (U.S.A.)
CO. RD. 45 N. • P.O. BOX 547 • OWATONNA, MN 55060
TELEPHONE: (507) 451-7112 • TELEX #933001 • FAX NO. 5074518209

PRINTED IN U.S.A.

machinecatalogic.com

Mustang 342 Skid Steer Loader Operator Manual

Document type: Operator Manual (operation, controls, safety and routine maintenance)

Brand: Mustang

Models: 342

Machine: Skid Steer Loader

Publication No.: 000-58833 (Rev. IV)

Edition date: July 1987

Language: English

Main contents

- Foreword
- Pre-Delivery check list
- Warranty
- User's responsibility
- General Information
- Instrument panel and operator controls
- Operation
- Transporting
- Lubrication chart
- Maintenance interval chart
- Fuels and lubricants
- Electrical system
- Maintenance
- Trouble shooting
- Specifications
- Decal locations

machinecatalogic.com

Sample pages follow. Full manual: machinecatalogic.com

NOTES


machinecatalogic.com

INSTRUMENT PANEL AND OPERATIONAL CONTROLS

Engine Light: This light will come on when the engine is running if the engine is low on oil pressure or if the engine coolant is overheating. There is also a buzzer connected to this light.

Hydraulic Light: This light will come on if the hydraulic system is too hot. There is also a buzzer connected to this light.

Alternator Light: This light will come on if there is a problem with the electrical system.

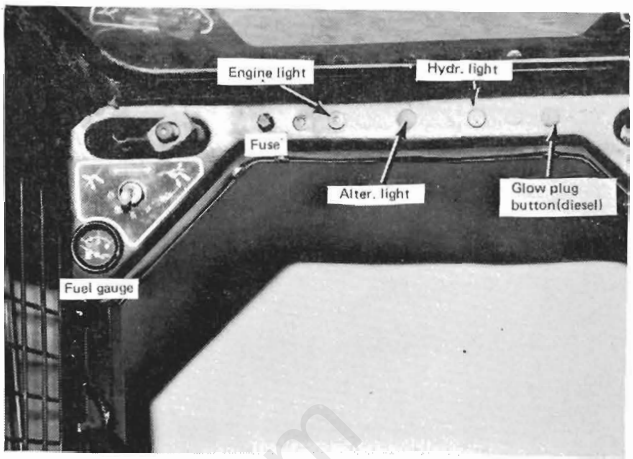


CAUTION! If these lights come on when the machine is running, stop immediately and have the problem corrected.

Glow Plug Button: (Diesel Only) This is used every time the diesel engine is started if the engine is not warm.



420-34517

Light Switch: This switch has four positions as shown in picture.

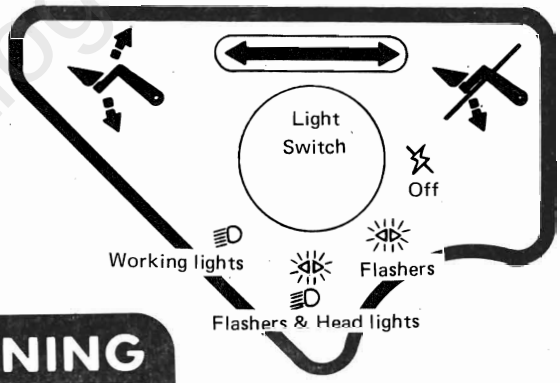


Hourmeter: This is used to keep record of hours for maintenance.


Lift Arm Stops: These must be used when the lift arm is left in the raised position.






420-34764

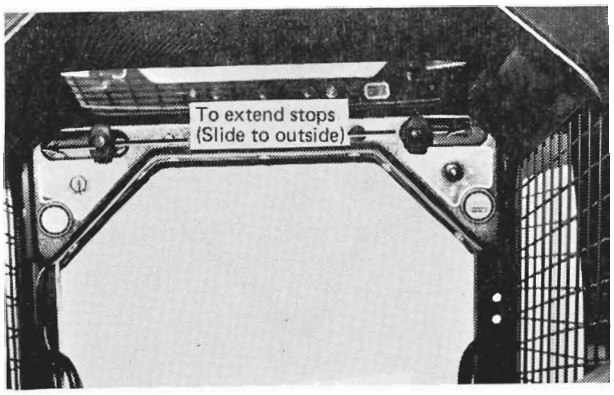

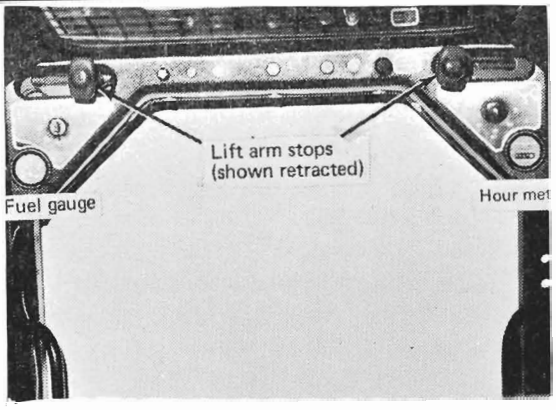

WIRING DIAGRAM (GAS)

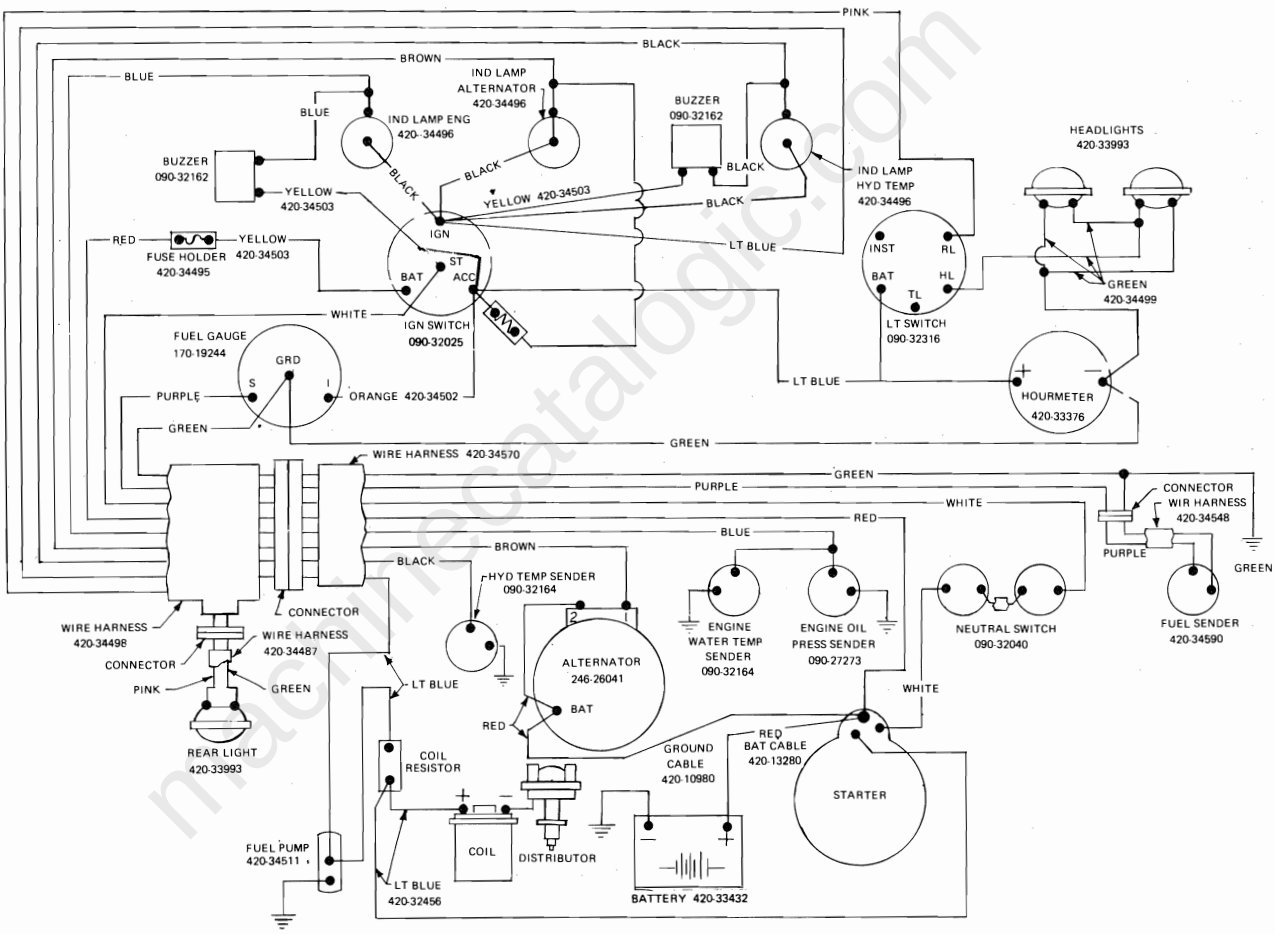

machinecatalogic.com

INDEX

R

Radiator	31,34
Reservoir	39
R.O.P.S	5

S

Safety equipment and recommendations	4
Seat adjustment	19
Seat belt	6,17,42
Serial number locations	1
Shut-off, diesel engine	17
Spark arrestor muffler	43
Specifications	14,52
Starting engine	20
Steering controls	19,46
Stopping engine	21
Storage, loader	27

T

Throttle	17
Tires	43
Towing	27
Transporting	27
Trouble shooting	47

U

User's responsibility	13

W

Warranty	13
Windows	6
Wiring diagram, diesel	38
Wiring diagram, gasoline	37

machinecatalogic.com

machinecatalogic.com

Full Version Available

Mustang 342 Skid Steer Loader Operator Manual

Mustang 342 skid steer loader operator manual, 000-58833 Rev. IV: controls, operation, maintenance charts, hydraulic diagram. Instant PDF download.

VIEW THE FULL MANUAL

https://machinecatalogic.com/mustang-342-skid-steer-loader-operator-manual/

Publication No.: 000-58833 (Rev. IV) · Language: English · Edition: July 1987