634

TELEHANDLER

OPERATOR'S MANUAL

Revision C - 06/15

S/N 71102 - 71300

PART #913229

machinecatalogic.com

Mustang Manufacturing Company, Inc.

Mustang 634 Telehandler Operator Manual (913229C)

Document type: Operator Manual (operation, controls, safety and routine maintenance)

Brand: Mustang

Models: 634

Machine: Telehandler

Publication No.: 913229 (Rev. C)

Edition date: June 2015

Serial numbers: S/N 71102 - 71300

Language: English

Main contents

- International Symbols
- Introduction
- Specifications
- Check Lists
- SAFETY
- Indicators and Controls
- Operation and Adjustments
- Lubrication
- Service and Storage
- Decal Locations
- Maintenance
- Hydraulic Schematics
- Electrical Schematics
- Load Zone Charts
- Standard Hardware Torque Data
- Index
- Warranty

machinecatalogic.com

Sample pages follow. Full manual: machinecatalogic.com

SAFETY


WPS System Decals


L71554



L71555




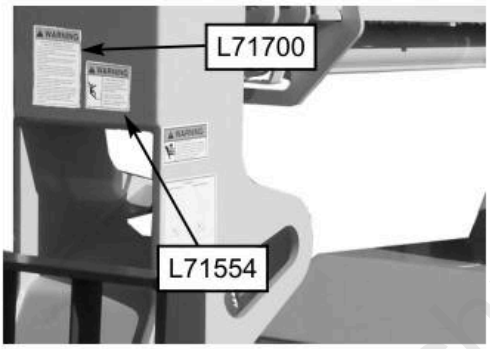

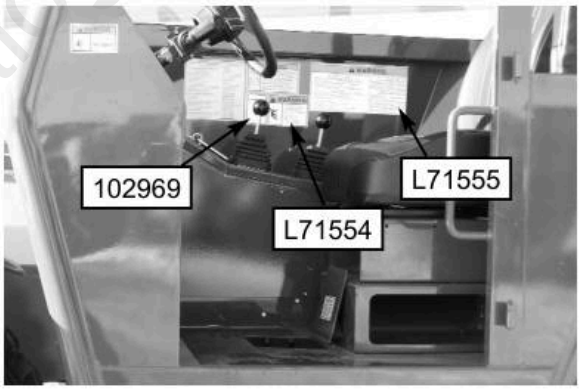



L71700

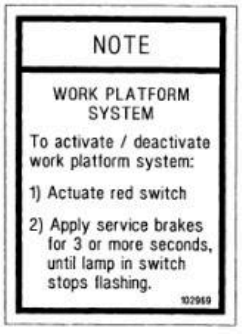

102969

machinecatalogic


NOTE: *Check the engine temperature gauge every minute or two after coolant has been changed. Air pockets can form and it may be necessary to refill the cooling system after a short period of use, as the air will naturally bleed out of the system.*

CHANGING HYDRAULIC RETURN FILTER ELEMENT

WARNING

Lower the boom to the ground when servicing the hydraulic system.

This element is a cartridge type accessible from a housing on top of the hydraulic reservoir. Initial replacement is after the first 100 hours. See illustration. Remove the top cover of the housing. Remove the element and discard. Insert the new element into the housing and replace the cover.

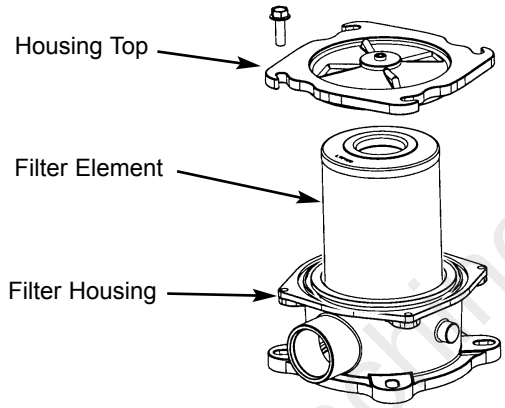


Reservoir Filter Removal

CHANGING AIR FILTER ELEMENTS

IMPORTANT: *Failure to follow proper filter servicing instructions could result in catastrophic engine damage.*

The air cleaner assembly consists of an outer (primary) filter element and an inner (secondary) filter element. An air filter restriction indicator for monitoring the condition of the elements is located in the rubber elbow at the rear of the air cleaner. If the air filter becomes restricted, this indicator turns red to warn the operator that the air cleaner requires service. Push the reset button located at the end of the indicator after replacing the element

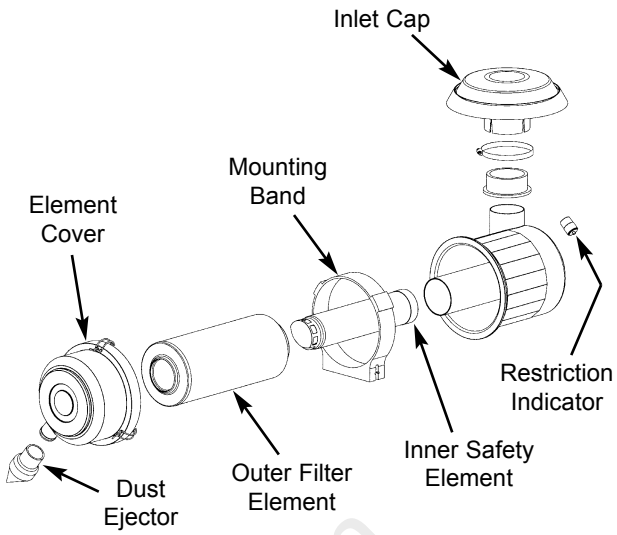

Air Cleaner Assembly

NOTE: *Before replacing the filter element(s), push the reset button on the indicator. Start the engine and run at full throttle. If the indicator does not turn red, do not replace the element(s).*

The outer element should be replaced when the restriction indicator turns red. The inner element should be replaced every third time the outer element is replaced, unless the outer element is damaged or the inner element is visibly dirty. Along with a daily check of the restriction indicator, check that the air cleaner intake hose and clamps, and the mounting bracket hardware are properly secure.


Unlatch the three latches on the air cleaner and remove the cover. Clean out any dirt in the cover assembly.

Outer Element

1. Carefully pull the outer element out of the housing. Never remove the inner element unless it is to be replaced.
2. Clean out any dirt in the housing. Leave the inner element installed during this step to prevent debris from entering the engine intake manifold.
3. Use a trouble light inside the new outer element to inspect for bad spots, pinholes and ruptures. Replace the outer element if any damage is found. The outer element must be replaced if it is oil- or soot-laden.

NOTE: *Cleaning the outer element is not recommended.*

machinecatalogic.com

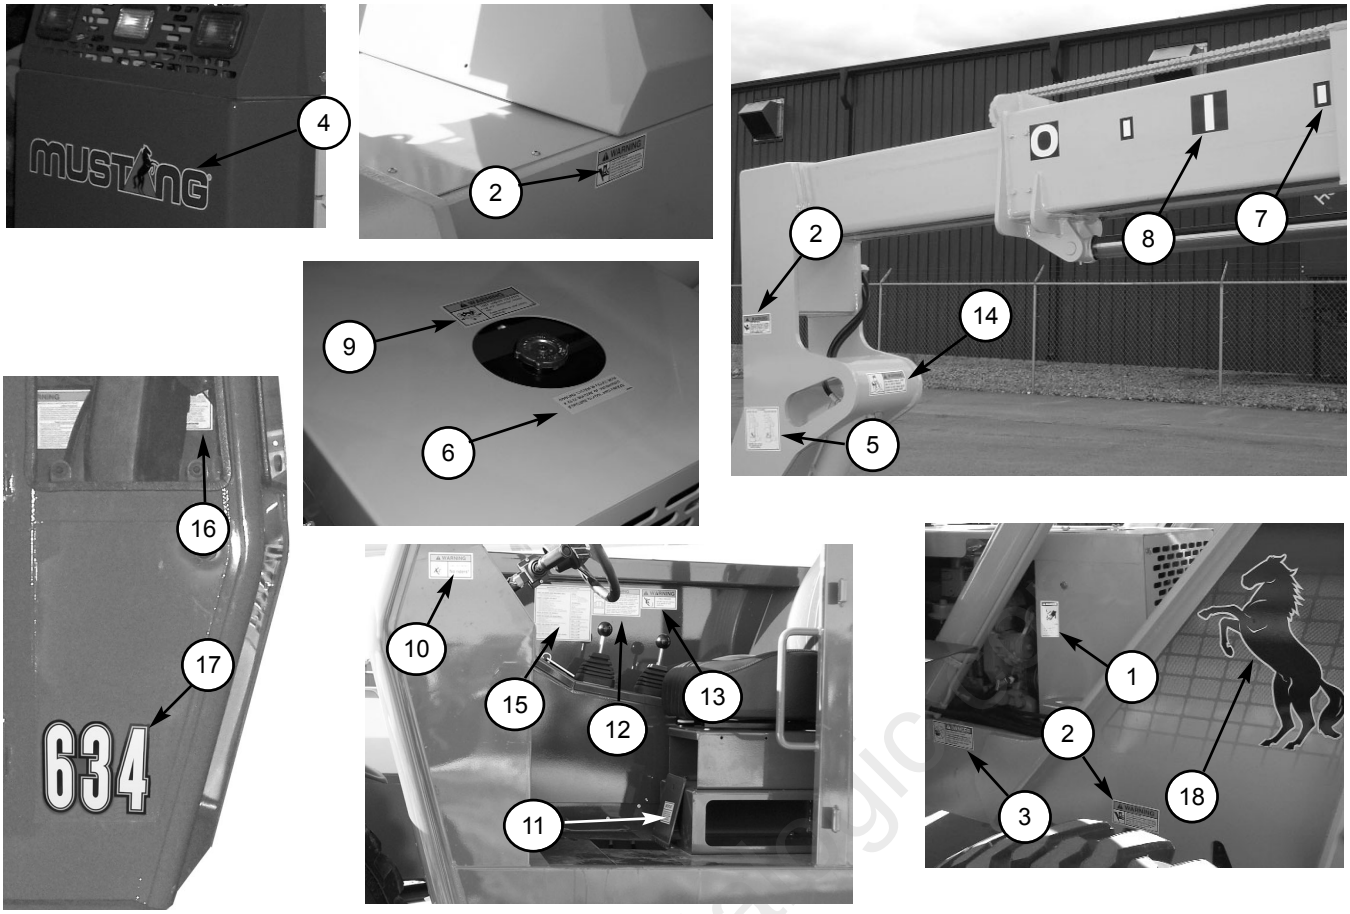

DECAL LOCATIONS - FRAME AND BOOM

REF. NO.	DESCRIPTION	PART NO.
01	DANGER - HANDS OUT	L70305
02	WARNING - PINCH POINT	L65927
03	WARNING - JUMP START	L65933
04	MUSTANG - REAR	100155
05	QUICKATTACH DIAGRAM	L65937
06	ANTI-FREEZE	056859
07	HALF ZONE MARKER (5 ea.)	L62583
08	NO. “0” EXTENSION MARKER (1 ea.)	L67718
	NO. “1” EXTENSION MARKER (1 ea.)	L67719
	NO. “2” EXTENSION MARKER (1 ea.)	L67720
	NO. “3” EXTENSION MARKER (1 ea.)	L67721
	NO. “4” EXTENSION MARKER (1 ea.)	L67722
	NO. “5” EXTENSION MARKER (1 ea.)	L67723
09	COOLANT UNDER PRESSURE	072798
10	WARNING - NO RIDERS	L65932
11	BRAKE FLUID	L63474
12	OPERATOR MANUAL WARNING	100359
13	DANGER-PERSONNEL INJURY *(units without WPS)*	L65928
14	CARRY LOAD LOW	L65926
15	LUBE CHART	103229
16	ROPS & FOPS CERTIFICATION	103227
17	634 LH	100627
18	HORSE - LH UPRIGHT	100624

machinecatalogic

machinecatalogic.com

Full Version Available

Mustang 634 Telehandler Operator Manual (913229C)

Mustang 634 telehandler operator manual 913229C, S/N 71102-71300: controls, load charts, maintenance, lubrication, schematics. Instant PDF download.

VIEW THE FULL MANUAL

https://machinecatalogic.com/mustang-634-telehandler-operator-manual-913229c/

Publication No.: 913229 (Rev. C) · Language: English · Edition: June 2015